



SC-T35/SC-T45/SC-T46/SC-T47
ViewSonic Device Manager
User Guide

Copyright and Trademark Statements

© 2014 ViewSonic Computer Corp. All rights reserved.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of ViewSonic Computer Corp.

Limitation of Liability

While reasonable efforts have been made to ensure the accuracy of this manual, the manufacturer and distributor assume no liability resulting from errors or omissions in this manual, or from the use of the information contained herein.

Trademark statements

Microsoft and Windows are trademarks of the Microsoft group of companies.

Citrix, ICA, and XenApp are trademarks of Citrix Systems, Inc. and/or one or more of its subsidiaries, and may be registered in the United States Patent and Trademark Office and in other countries.

VMware and VMware View are trademarks or registered trademarks of the VMware, Inc.

GraphOn and GO-Global are registered trademarks and the GO logo is a trademark of GraphOn Corporation.

The Firefox logo is a registered trademark of Mozilla Foundation or Mozilla Corporation.

Adobe and Adobe Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

About This User's Manual

This manual provides the basic information on how to manage ViewSonic thin clients with the ViewSonic Device Manager console.

Manual Structure and Subjects

Chapter	Subject
1	Provides an overview of the ViewSonic Device Manager console.
2	Gives detailed instructions on how to install and upgrade ViewSonic Device Manager.
3	Provides instructions on how to manage clients with ViewSonic Device Manager.
4	Provides basic instructions on client configuration.

Notes, Tips, and Warnings

Throughout this manual, the notes, tips, and warnings in the following formats are used to provide important information, useful advice, and prevent injuries to you, damage to your devices, or loss of data on your system.



NOTE

- A note provides important information for a specific situation.



TIP

- A tip gives a piece of useful advice to perform a task more efficiently.



WARNING

- A warning provides crucial information that must be followed to prevent injuries to you, damage to your devices, or loss of data on your system.

Style Conventions

The following styles are used throughout this manual while referring to operational items on input devices, hardware panels, or application interfaces.

Item	Style	Example
keys on the keyboard	bold	F11, N, B, S
application windows, menus, or entry lists	first letter capitalized	Add window, Firmware list, Client list, Command menu
buttons or tabs on a window, toolbars, taskbar, or menu	bold	OK, Next, Start, System tab
options on a window, screen, list, or menu	bold	I accept the agreement, Scan by IP Range, Update Firmware, Push Settings
selecting a series of options	bold	Start > All Programs > ViewSonic > ViewSonic Device Manager

Table of Contents

Copyright and Trademark Statements i

- Limitation of Liability i
- Trademark statements i

About This User's Manual ii

- Manual Structure and Subjects ii
- Notes, Tips, and Warnings ii
- Style Conventions ii

1 Overview 1

- 1.1 Introduction 2
- 1.2 Features 2
- 1.3 Supported Platforms 3
- 1.4 Supported Endpoint Devices 3
- 1.5 Minimum System Requirements 3

2 Installing and Upgrading ViewSonic Device Manager 4

- 2.1 Installing ViewSonic Device Manager 5
- 2.2 Installing Java Software 9
- 2.3 Initial Setup 10
- 2.4 Upgrading ViewSonic Device Manager 12
- 2.5 Uninstalling ViewSonic Device Manager 12

3 Using ViewSonic Device Manager 13

- 3.1 ViewSonic Device Manager 14
 - 3.1.1 Interface Overview 14
 - 3.1.2 Available Tasks at a Glance 15
- 3.2 Establishing a Basic Administration Environment 16
 - 3.2.1 System Tab Overview 16
 - 3.2.2 Available Tasks at a Glance 17
 - 3.2.3 Managing Accounts for Administration 18
 - 3.2.4 Managing Thin Client Firmware Files 19
 - 3.2.5 Managing WES Package Files 22
 - 3.2.6 Managing Client Snapshots 25
 - 3.2.7 Managing Certificates of Remote Computers 27
 - 3.2.8 Configuring Remote Deployment Settings 29
 - 3.2.9 Selecting the Service IP of ViewSonic Device Manager 31
 - 3.2.10 Configuring Auto-Logout for ViewSonic Device Manager 32
 - 3.2.11 Configuring the Database Source of ViewSonic Device Manager 32
 - 3.2.12 Selecting the Interface Language of ViewSonic Device Manager 34
 - 3.2.13 Backing Up the Management Database 34
 - 3.2.14 Managing Database Archive Files 35
 - 3.2.15 Restoring a Database Archive File 36
 - 3.2.16 Scheduling Automatically Performed Tasks 36
- 3.3 Adding Clients into a Managed Group 40
 - 3.3.1 Scan Tab Overview 40
 - 3.3.2 Available Tasks at a Glance 40
 - 3.3.3 Client Detection and Management 40

3.3.4	Discovering Clients in the Whole Range of a Local Network	41
3.3.5	Discovering Clients in a Specified Range of IP Addresses	43
3.3.6	Creating and Managing an IP Range List	44
3.3.7	Discovering Clients using a Predefined IP Range List	45
3.4	Managing All Your Clients	47
3.4.1	Thin Clients Tab Overview	47
3.4.2	Available Tasks at a Glance	48
3.4.3	Creating Client Groups	49
3.4.4	Managing Client Groups	50
3.4.5	Moving Clients to Another Group	51
3.4.6	Deleting Clients from a Group	52
3.4.7	Understanding Client Status Icons	53
3.4.8	Client Settings	54
3.4.9	Creating Setting Profile Groups	56
3.4.10	Managing Setting Profile Groups	57
3.4.11	Creating Client Setting Profiles	58
3.4.12	Managing Client Setting Profiles	61
3.4.13	Using Individualized Client Settings	64
3.4.14	Using Hybrid Client Settings	65
3.4.15	Pushing Settings to Clients through Your Local Network	67
3.4.16	Pulling Client Settings through Your Local Network	71
3.4.17	Pushing Certificates of Remote Computers to Clients	74
3.4.18	Sending Messages to Clients	75
3.4.19	Editing or Viewing the Basic Information about a Client	76
3.4.20	Rebooting Clients through Your Local Network	77
3.4.21	Shutting Down Clients through Your Local Network	80
3.4.22	Waking Clients through Your Local Network	83
3.4.23	Updating Client Firmware	86
3.4.24	Installing Software Packages	87
3.4.25	Taking Client Snapshots	89
3.4.26	Restoring Client Snapshots	90
3.4.27	Assisting a Client User Remotely	91
3.4.28	Exporting Client Data	93
3.4.29	Digging Out Profiles, Clients, or Event Logs with Quick Search	93
3.4.30	Digging Out Clients with Filters	94
3.4.31	Managing Your Filters	96
3.5	Viewing and Managing Event Logs	98
3.5.1	Logs Tab Overview	98
3.5.2	Available Tasks at a Glance	98
3.5.3	Viewing Event Logs	99
3.5.4	Exporting Event Logs	100
3.5.5	Emptying Event Logs	100
3.6	Viewing Software Information	102
3.6.1	About Tab Overview	102
3.6.2	Available Tasks at a Glance	102
3.6.3	Viewing Information on ViewSonic Device Manager	103
3.6.4	Viewing ViewSonic Contact Information	103
3.6.5	Viewing ViewSonic Software License Agreement	103
3.7	Accessing ViewSonic Device Manager Remotely with a Web Browser	104
4	Configuring Client Settings	109
4.1	Desktop Virtualization and Client Configuration	110
4.2	Client Settings at a Glance	110
4.3	Editing or Adjusting a Group Configuration	114
4.4	Editing or Adjusting an Individual Configuration	116
4.5	Configuring Client Settings with ViewSonic Client Setup	118

1

Overview

This chapter provides an overview of the ViewSonic Device Manager console.

1.1 Introduction	
A brief introduction to ViewSonic Device Manager	2
1.2 Features	
The key features of ViewSonic Device Manager	2
1.3 Supported Platforms	
Operating systems supported by ViewSonic Device Manager	3
1.4 Supported Endpoint Devices	
Client devices supported by ViewSonic Device Manager	3
1.5 Minimum System Requirements	
The minimum system requirements for the installation and operation of ViewSonic Device Manager	3

1.1 Introduction

Desktop virtualization provides a new perspective to reconsider the design and implementation of an IT infrastructure. In a desktop virtualization infrastructure, a station is no longer a cumbersome desktop, but simply an endpoint device for users to access delivery services from the server(s).

With the introduction of the desktop virtualization technologies, you can considerably benefit from:

- On-demand application / desktop access
- Centralized management of work environments
- Drastically reduced endpoint software/hardware issues
- Simplified system maintenance
- Improved system security
- More scalability with low-cost endpoint devices

But still you need a powerful software for managing a large number of endpoint devices in a desktop virtualization infrastructure. The ViewSonic Device Manager console is designed to fill the need. It enables you to remotely deploy, manage, update clients, and assist users from a single computer. You can manage and update clients simply and quickly in groups with a flexible and secure mechanism. Additionally, you can remotely assist users in resolving problems or configuring local settings.

1.2 Features

The key features of ViewSonic Device Manager are:

- Pushing custom settings to a large number of clients
- Updating firmware and installing software packages for clients
- Taking client snapshots for mass deployment, system backup, and recovery
- Rebooting, powering off, and waking clients through the local network
- Scheduling automatically performed tasks
- Helping users to troubleshoot problems remotely
- Identifying clients and managing IT assets with automatically-captured client information

1.3 Supported Platforms

ViewSonic Device Manager supports the following operating systems:

- Windows 7
- Windows Server 2003
- Windows Server 2008 R2
- Windows 8
- Windows Server 2008
- Windows Server 2012 / 2012 R2

1.4 Supported Endpoint Devices

ViewSonic Device Manager supports the following ViewSonic client family:

x86 based

- SC-T45
- SC-T46
- SC-T47

ARM based

- SC-T35



NOTE

- The supported client list above is not exhausted; newly developed models may be included in the future.
- For more information on detailed specifications of different models, please visit our website at www.ViewSoniccorp.com.

1.5 Minimum System Requirements

The minimum system requirements for the installation and operation of ViewSonic Device Manager are as follows:

- Pentium 4, 1.0 GHz processor or the equivalent
- 512 MB of free system memory
- 2 GB of free disk space for installation / 100 GB or more for firmware and snapshot management
- 10/100 Mb Ethernet network adapter / network interface card
- Java software or Java Runtime Environment (for the **Shadow** feature, see page 99)

2

Installing and Upgrading ViewSonic Device Manager

This chapter gives detailed instructions on how to install and upgrade your ViewSonic Device Manager.

2.1 Installing ViewSonic Device Manager

The installation of ViewSonic Device Manager 5

2.2 Installing Java Software

The installation of Java Software or Java Runtime Environment 9

2.3 Initial Setup

The initial setup of ViewSonic Device Manager 10

2.4 Upgrading ViewSonic Device Manager

The upgrade of ViewSonic Device Manager 12

2.5 Uninstalling ViewSonic Device Manager

The uninstallation of ViewSonic Device Manager 12

2.1 Installing ViewSonic Device Manager


To install ViewSonic Device Manager on your computer, please follow the steps below:




NOTE

- Before proceeding, ensure that:
 - ✧ Your operating system is supported (see section 1.3 on page 4)
 - ✧ Your computer meets system requirements (see section 1.5 on page 4)
- To install a newer version of ViewSonic Device Manager, it's recommended to install it directly without uninstalling the current ViewSonic Device Manager. For more information on how to upgrade your ViewSonic Device Manager, please refer to section "2.4 Upgrading ViewSonic Device Manager" on page 12.

1. Get a copy of the installation program of ViewSonic Device Manager for your computer.
2. Log in to your computer with an administrator account, and then locate and double-click that program.
3. Select the language used during the installation.

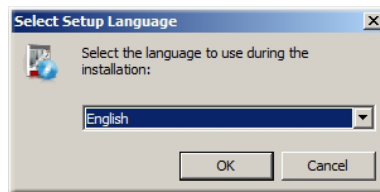

4. The Setup Wizard appears.

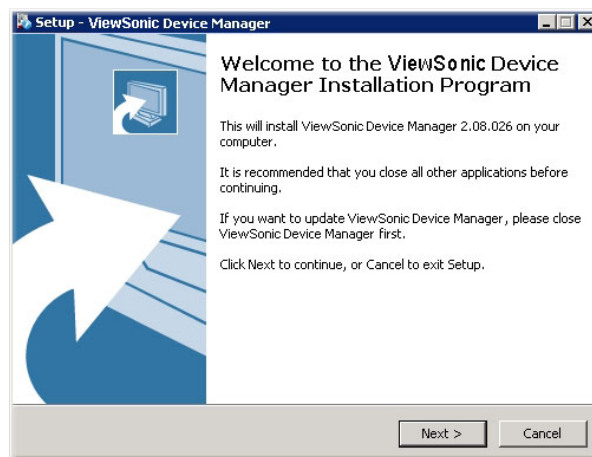

5. Click **Next** to continue.




NOTE

- It may take a few seconds for the wizard to enter the next page/step while preparing for the installation of ViewSonic Device Manager.


Installing and Upgrading ViewSonic Device Manager

Installing ViewSonic Device Manager


6. A message appears prompting you to restart for the installation of a prerequisite program. Click to check **Yes, restart the computer now**, and then click **Finish**.

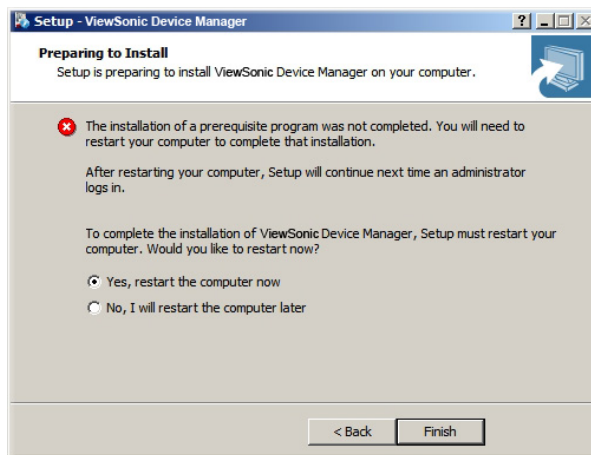

7. After restart, the Setup Wizard appears again. Click **Next** to continue.

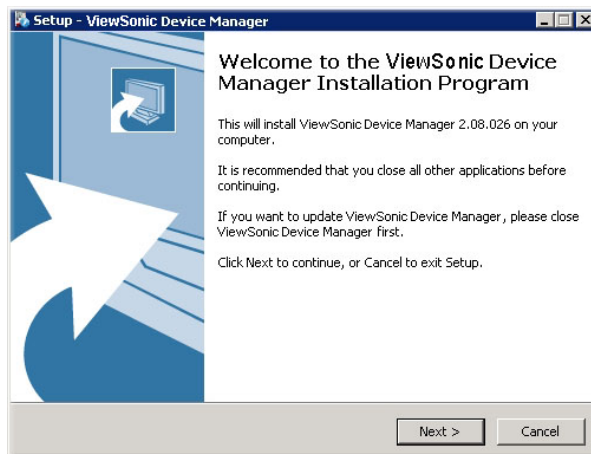


8. The License Agreement page appears. Read this agreement, click to check **I accept the agreement**, and then click **Next** to continue.

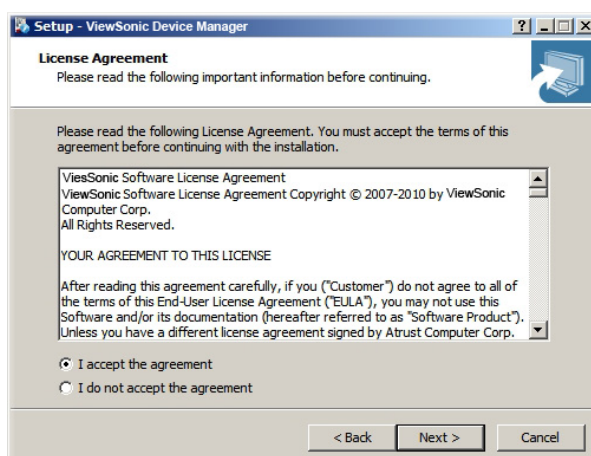


Installing and Upgrading ViewSonic Device Manager

Installing ViewSonic Device Manager


9. Use the default installation directory or click **Browse** to locate the desired one, and then click **Next** to continue.

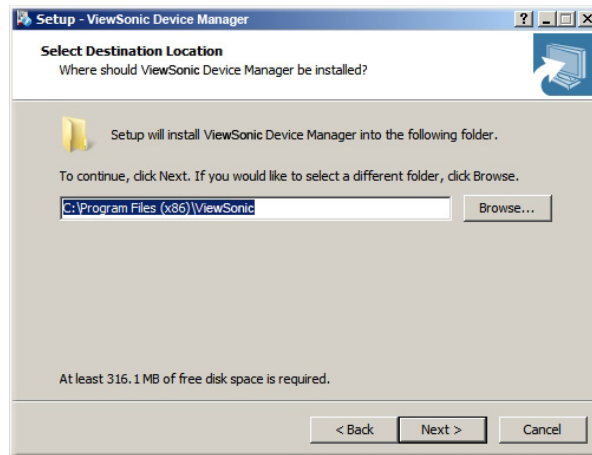

10. Use the default Start menu folder or type to create a new folder for the shortcuts of programs. Or, click **Browse** to choose an existing folder.

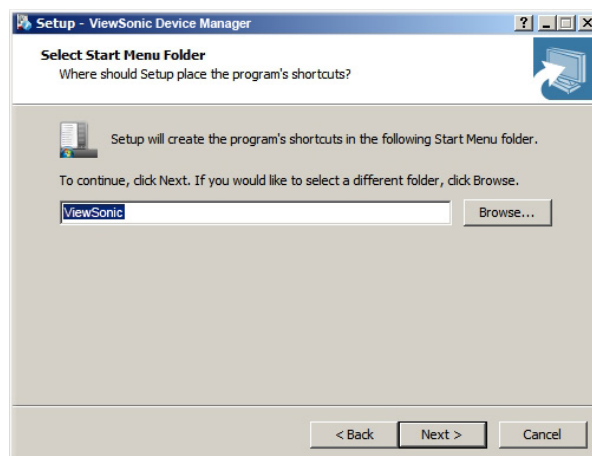


11. Click to check / uncheck **Create a desktop icon**, and then click **Next** to continue.

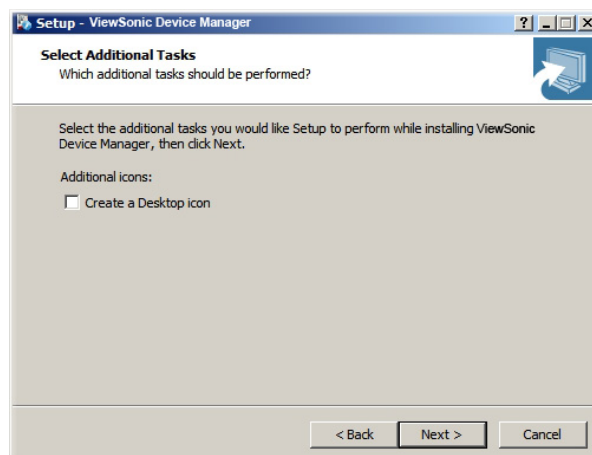

Installing and Upgrading ViewSonic Device Manager

Installing ViewSonic Device Manager


12. Change the default database password for the superuser or use the default. After completion, click **Next** to continue.

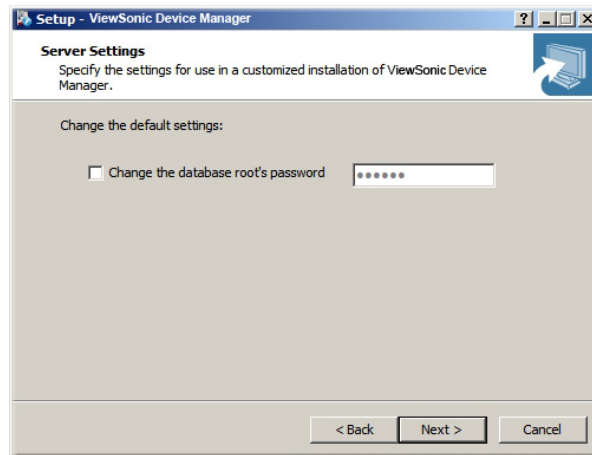


NOTE

- A superuser is a user who has full access to the database of ViewSonic Device Manager.

13. Click **Install** to start installing ViewSonic Device Manager on your computer.

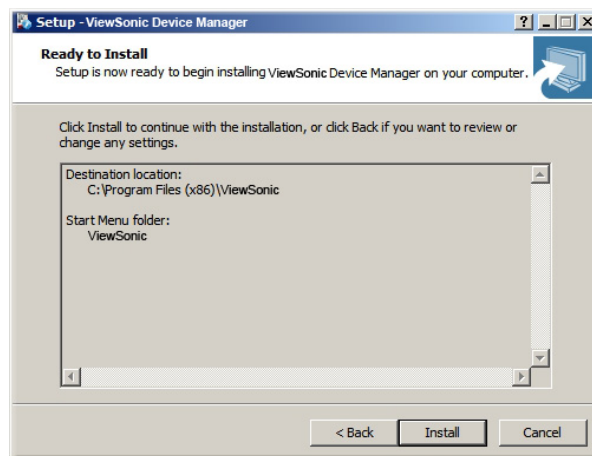

14. After completion, click **Finish** to exit.

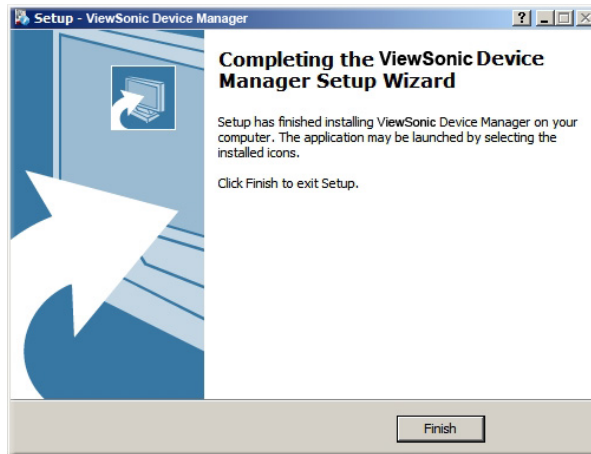

2.2 Installing Java Software

To access full functionality of ViewSonic Device Manager, you need to install the Java software, which is free and downloadable from Java's official website at java.com. The Java software or Java Runtime Environment is required for the Shadow feature of ViewSonic Device Manager, enabling you to remotely assist a client user.



NOTE

- For more details, please refer to section "3.4.28 Assisting a Client User Remotely" on page 99.

It's recommended to install **32-bit** Java for ViewSonic Device Manager. In case that the computer where you install ViewSonic Device Manager also needs 64-bit Java for other purposes, you could install both 32-bit and 64-bit Java.




NOTE

- For more information, please visit Java's website at java.com.
- For Java **Version 7 Update 51** or **the later**, you may need to add your computer to the (Security) Exception Site list. Go to **Control Panel**, click **Java > Security > Edit Site List > Add**, type **<https://localhost:10443>**, and then click **OK** to apply.

2.3 Initial Setup

When launching ViewSonic Device Manager for the first time, you need to complete the initial setup. Follow the instructions below to complete the required configuration:

1. Launch ViewSonic Device Manager on your computer.
2. A window appears prompting you to choose the service IP address and create an administrator account. Click the drop-down menu to select the desired IP address from the list of available IP addresses, type the desired account name and password, and then click **Save** to continue.

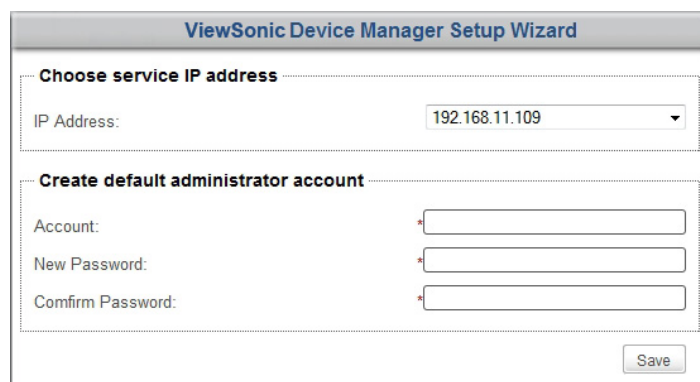


The screenshot shows the 'ViewSonic Device Manager Setup Wizard' window. It has two main sections: 'Choose service IP address' and 'Create default administrator account'. In the first section, the 'IP Address' is set to '192.168.11.109' in a dropdown menu. The second section contains three input fields: 'Account', 'New Password', and 'Confirm Password', each with a red asterisk indicating it is required. A 'Save' button is located at the bottom right of the window.



NOTE

- Your not connected LAN port may appear in the list of available IP addresses with the address value **0.0.0.0**.
- It's strongly recommended to use a fixed IP address as the service IP of ViewSonic Device Manager. The change of the service IP may make all the managed clients become unmanageable.


3. The Login screen appears prompting you to sign in to ViewSonic Device Manager with your credentials (account name and password).

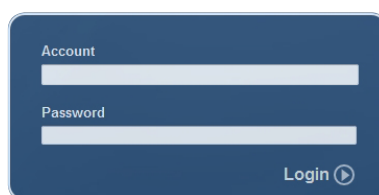

The screenshot shows the 'Login' screen of ViewSonic Device Manager. It has a dark blue background with two white input fields labeled 'Account' and 'Password'. A 'Login' button with a right-pointing arrow is located at the bottom right of the screen.

4. The management interface of ViewSonic Device Manager appears.

ViewSonic Device Manager

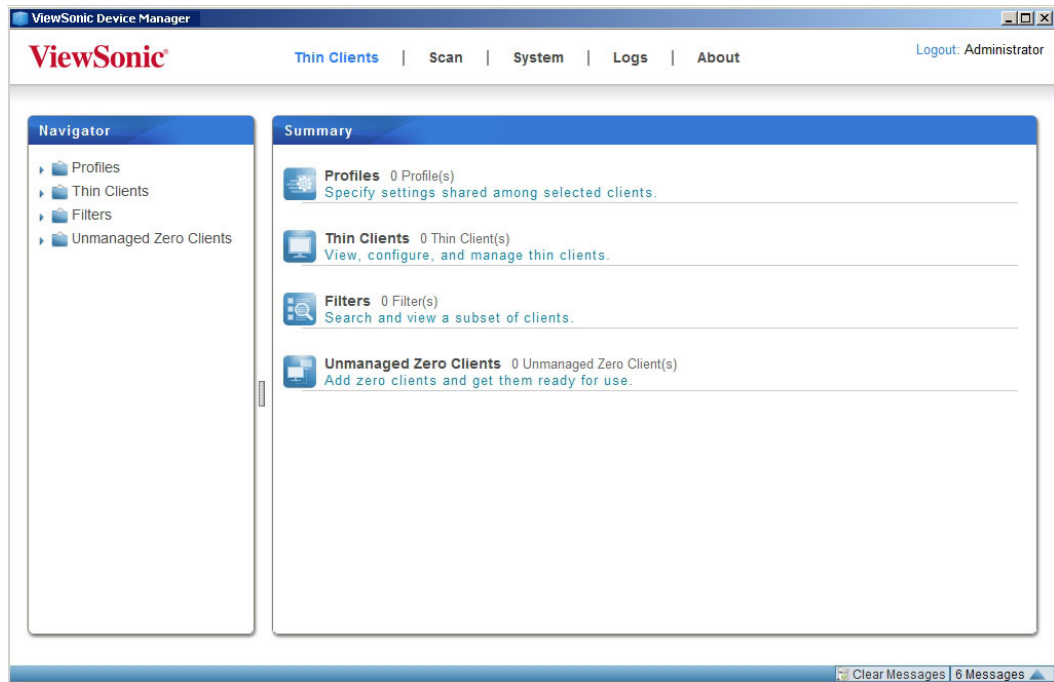

NOTE

- In next chapter, we will describe the functionality and use of ViewSonic Device Manager in details.

2.4 Upgrading ViewSonic Device Manager

To upgrade your ViewSonic Device Manager to a newer version, you can just install the new program without uninstalling the old one. For information on how to install ViewSonic Device Manager, please refer to section “2.1 Installing ViewSonic Device Manager” on page 5.



NOTE

- It's highly recommended to upgrade your ViewSonic Device Manager without uninstalling the old version. If you uninstall the current ViewSonic Device Manager on a computer, all your settings and client CA (Certificate Authority) files will be removed. With a newly installed ViewSonic Device Manager, this computer will fail to manage clients which are originally under its management, and those clients will become unmanageable.



WARNING

- Before upgrading your ViewSonic Device Manager, ensure that you've logged out and closed the ViewSonic Device Manager console.

2.5 Uninstalling ViewSonic Device Manager

To uninstall your ViewSonic Device Manager on a computer, please do the following:



NOTE

- To **upgrade** your ViewSonic Device Manager, it's recommended **not** to uninstall the current ViewSonic Device Manager. For more information, please refer to section “2.4 Upgrading ViewSonic Device Manager” on page 12.
- Ensure that you have backed up important data on ViewSonic Device Manager before proceeding.



WARNING

- Before uninstalling your ViewSonic Device Manager, ensure that you've logged out and closed the ViewSonic Device Manager console.

1. Uninstall your ViewSonic Device Manager through the Control Panel.
2. Follow the on-screen instructions to complete the uninstallation.

3

Using ViewSonic Device Manager

This chapter provides instructions on how to manage clients with ViewSonic Device Manager.

3.1 ViewSonic Device Manager	
Interface overview	14
3.2 Establishing a Basic Administration Environment	
System tab overview	16
Available tasks at a glance	17
3.3 Adding Clients into a Managed Group	
Scan tab overview	40
Available tasks at a glance	40
3.4 Managing All Your Clients	
Thin Clients tab overview	47
Available tasks at a glance	48
3.5 Viewing and Managing Event Logs	
Logs tab overview	98
Available tasks at a glance	98
3.6 Viewing Software Information	
About tab overview	102
Available tasks at a glance	102
3.7 Accessing ViewSonic Device Manager Remotely with a Web Browser	
How to access ViewSonic Device Manager anywhere any device with a Web browser	104

3.1 ViewSonic Device Manager


ViewSonic Device Manager enables you to remotely deploy, manage, update clients, and assist users from a single computer. You can manage clients simply and quickly in groups with a flexible and secure mechanism. Additionally, you can remotely assist users in resolving problems or configuring local settings.

3.1.1 Interface Overview


To access ViewSonic Device Manager, please do the following:

1. Launch ViewSonic Device Manager on your computer.
2. Type your credentials, and then press **Enter** or click **Login**. The ViewSonic Device Manager window appears.

Interface Overview

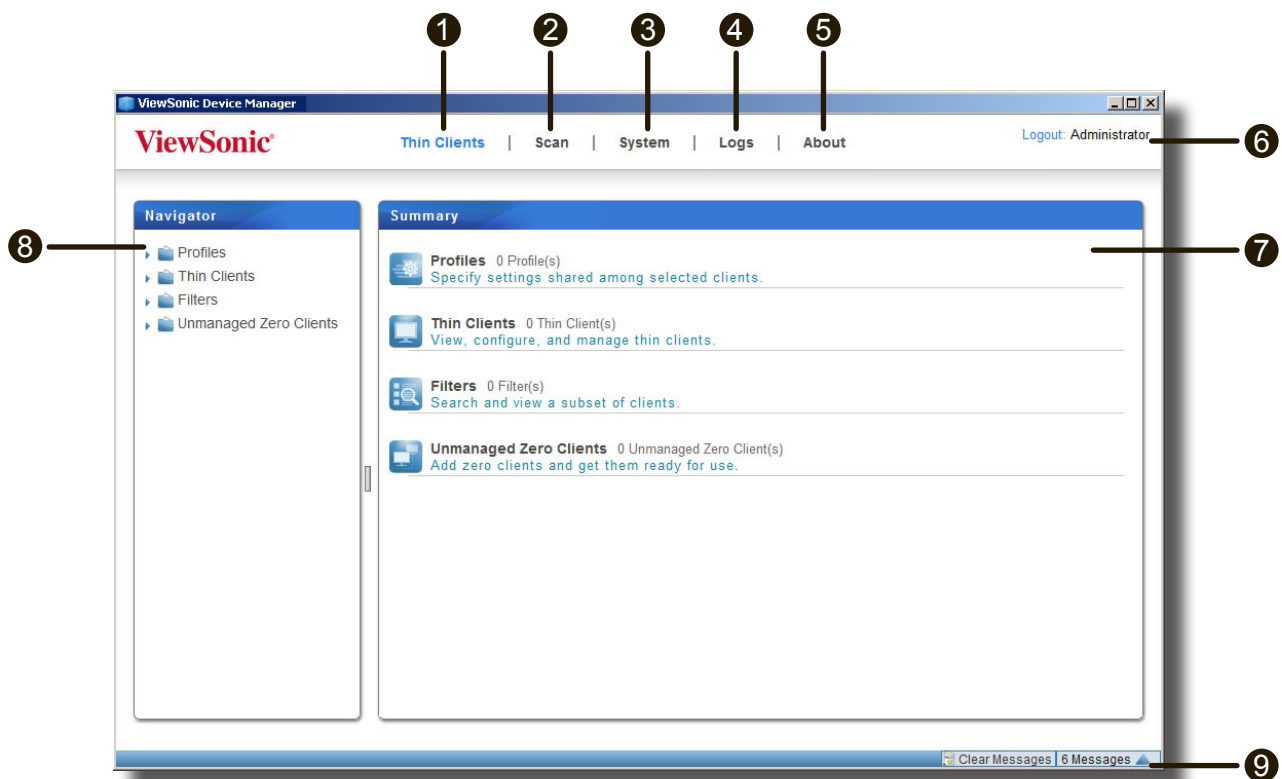

Interface Elements

No.	Name	Description
1	Thin Clients tab	Click to access client management.
2	Scan tab	Click to look for unmanaged thin clients over your local network.
3	System tab	Click to establish and configure the basic administration environment.
4	Logs tab	Click to view event logs.
5	About tab	Click to view information about ViewSonic Device Manager.
6	Logout button	Click to log out from ViewSonic Device Manager.
7	Management / Information Area	Select to perform desired tasks, configure desired settings, or view related information available under a selected tab.
8	Navigation Area	Click to select a specific item, option, or task under a tab.
9	Message Area	Click  to view messages about management activities.

3.1.2 Available Tasks at a Glance

The following table shows functionality provided in each tab. For more details, please refer to the corresponding section as shown below:


Tab	Function List	Section	Page
System	<ul style="list-style-type: none"> • Creating accounts for administration • Managing thin client firmware files • Managing WES package files • Managing client snapshots • Managing certificates of remote computers • Configuring remote deployment settings • Configuring settings for ViewSonic Device Manager • Backing up the management database • Managing database archive files • Restoring management database • Scheduling automatically performed tasks 	3.2 Establishing a Basic Administration Environment	16
Scan	<ul style="list-style-type: none"> • Looking for clients in the whole range of a local network • Looking for clients in a specified range of IP addresses • Looking for clients with predefined IP range lists 	3.3 Adding Clients into a Managed Group	40
Thin Clients	<ul style="list-style-type: none"> • Creating group configuration for clients • Using individualized configuration for clients • Using hybrid configuration for clients • Pushing settings to clients • Pulling settings from clients • Pushing certificates to clients • Sending messages to clients • Rebooting clients remotely • Shutting down clients remotely • Waking clients remotely • Monitoring the use of clients • Controlling clients remotely • Exporting client data • Digging out profiles/clients with Quick Search • Digging out clients with filters 	3.4 Managing All Your Clients	47
Logs	<ul style="list-style-type: none"> • Viewing event logs • Exporting event logs • Emptying event logs 	3.5 Viewing and Managing Event Logs	98
About	<ul style="list-style-type: none"> • Viewing information on ViewSonic Device Manager • Viewing ViewSonic contact information • Viewing software license agreement 	3.6 Viewing Software Information	102

3.2 Establishing a Basic Administration Environment

3.2.1 System Tab Overview

System tab enables you to establish a basic administration environment. To access the functionality of **System** tab, click the tab on ViewSonic Device Manager.

System Tab Overview

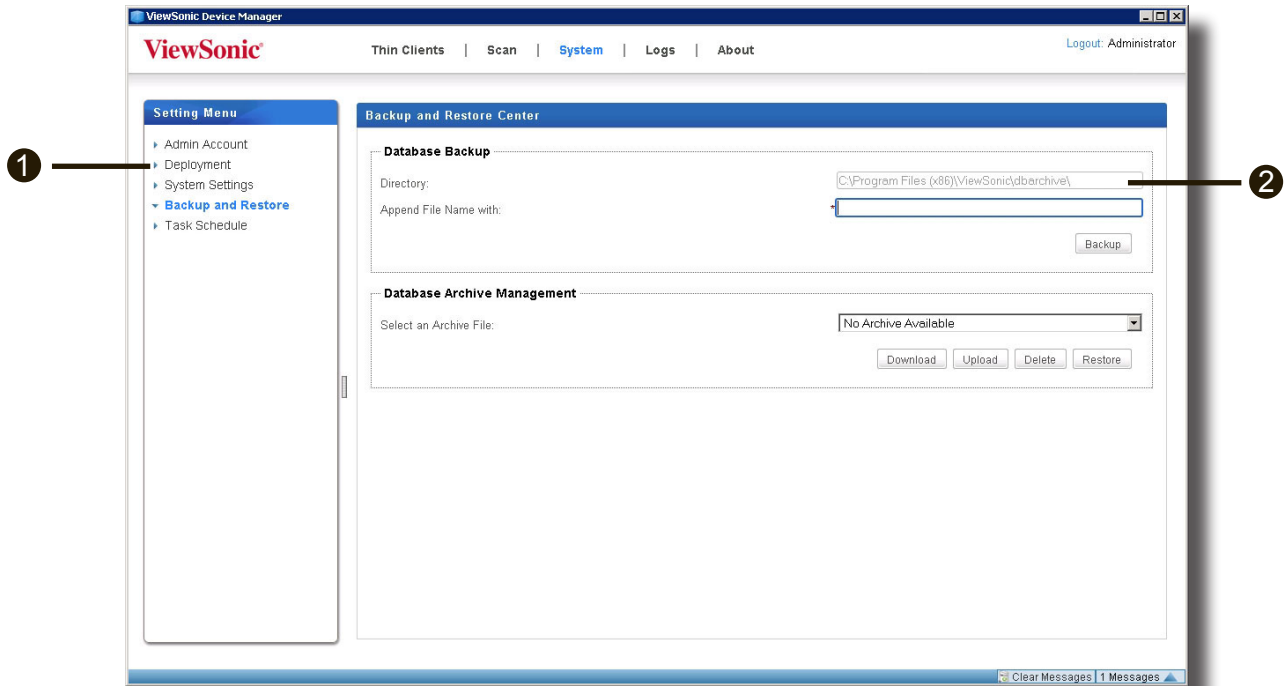

Interface Elements

No.	Name	Description
1	Navigation Area	Click to access the desired setting item.
2	Management Area	Select to perform desired tasks, configure desired settings, or view related information available under a selected item.

3.2.2 Available Tasks at a Glance

No.	Available Task	Section	Page
1	Creating accounts for administration	3.2.3	18
2	Deleting an account	3.2.3	18
3	Editing an account	3.2.3	18
4	Importing thin client firmware files	3.2.4	19
5	Deleting thin client firmware files	3.2.4	19
6	Scanning thin client firmware files	3.2.4	19
7	Importing WES package files	3.2.5	22
8	Deleting WES package files	3.2.5	22
9	Scanning WES package files	3.2.5	22
10	Exporting client snapshots	3.2.6	25
11	Importing client snapshots	3.2.6	25
12	Deleting client snapshots	3.2.6	25
13	Scanning client snapshots	3.2.6	25
14	Importing certificates of remote computers	3.2.7	27
15	Deleting certificates of remote computers	3.2.7	27
16	Configuring remote deployment settings	3.2.8	29
17	Selecting the service IP address of ViewSonic Device Manager	3.2.9	31
18	Configuring auto-logout for ViewSonic Device Manager	3.2.10	32
19	Configuring the database source of ViewSonic Device Manager	3.2.11	32
20	Selecting the interface language of ViewSonic Device Manager	3.2.12	34
21	Backing up the management database	3.2.13	34
22	Downloading a database archive file	3.2.14	35
23	Uploading a database archive file	3.2.14	35
24	Deleting a database archive file	3.2.14	35
25	Restoring a database archive file	3.2.15	36
26	Scheduling automatically performed tasks	3.2.16	36

3.2.3 Managing Accounts for Administration

Creating an Account

To create an account for administration, please do the following:

1. On **System** tab, click **Admin Account**.
2. The Account list appears in Management area.




Username	Information	Last login	Authority
Administrator		2014-05-15 01:07:49	Admin



NOTE

- When you log in to ViewSonic Device Manager for the first time, you are prompted to create an administrator account for client management. This account will be specified in the Account list.

3. Click **Add** to open the Add window.
4. Type the desired user/account name and password.

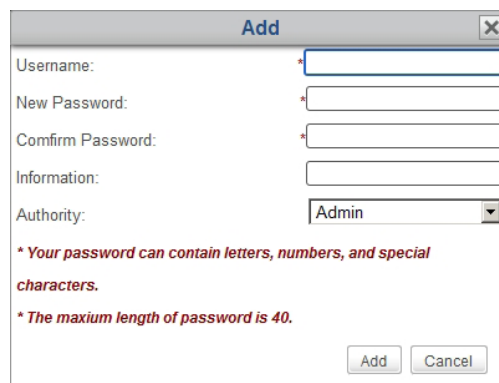

Add

Username:

New Password:

Confirm Password:

Information:

Authority:

** Your password can contain letters, numbers, and special characters.*

** The maximum length of password is 40.*



NOTE

- You can click Authority drop-down menu to choose its type: **Admin** or **User**. The former has complete access to ViewSonic Device Manager; the latter is only for viewing **Thin Clients** and **Logs** tabs.

5. Click **Add** to apply.
6. The newly added account appears in the Account list.



Username	Information	Last login	Authority
Administrator		2014-05-15 01:07:49	Admin
Francis	Francis Crick		Admin

Deleting an Account

To delete an account, please do the following:

1. On **System** tab, Click **Admin Account**.
2. The Account list appears in Management area.
3. Click to select the desired account.



NOTE

- To delete more than one account, Ctrl-click to select multiple accounts.

4. Click **Delete** on the top of the Account list.
5. The Delete window appears prompting for confirmation.
6. Click **Yes** to confirm.
7. The selected account is removed from the Account list.

Adjusting an Account

To adjust an existing account, please do the following:

1. On **System** tab, Click **Admin Account**.
2. The Account list appears in Management area.
3. Click to select the desired account.
4. Click **Edit** to open the Edit window.
5. Adjust the password or the description in the Information field.



NOTE

- If you only want to add or edit the description in the Information field, you need to type the current password for the selected account.

6. Click **Modify** to apply.

3.2.4 Managing Thin Client Firmware Files

You can update firmware for your clients remotely with ViewSonic Device Manager. Before proceeding, you need to import firmware files of appropriate versions for ViewSonic Device Manager.



NOTE

- For instructions on how to update firmware for clients remotely, please see section "3.4.23 Updating Client Firmware" on page 86.

Importing Thin Client Firmware Files

To import a firmware file for thin clients, please do the following:



NOTE

- For information about availability of a newer or up-to-date version of client firmware file (.zip format), please contact your dealer.

- On **System** tab, click **Deployment > Firmware**.
- The Firmware list appears.

Name	Platform	Version	Model	Disk Size(MB)
------	----------	---------	-------	---------------



NOTE

- If you never imported firmware files into ViewSonic Device Manager, the Firmware list will be empty as shown above.

- Click **Import Firmware** on the top of the Firmware list.
- The Import Firmware window appears.

Import Firmware

Firmware File: Browse...

Type:

Version:

Platform:

Boot Loader Version:

Model:

Required Disk Size (MB):

Import Cancel


- Click **Browse** to locate the desired firmware file, and then click **Open** to confirm.




NOTE

- ViewSonic Device Manager will automatically perform file check to ensure that the file is a valid firmware file for thin clients and there is no duplicate in the Firmware list.

- Click **Import** to start importing the selected firmware file.

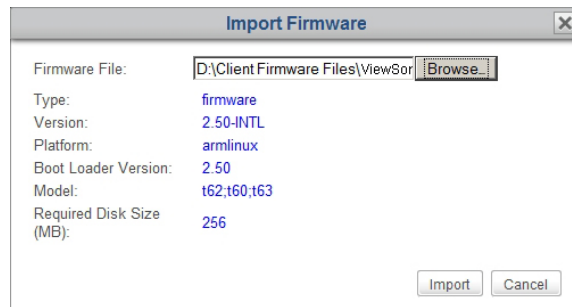

- On completion, the imported firmware file appears as an entry in the Firmware list.

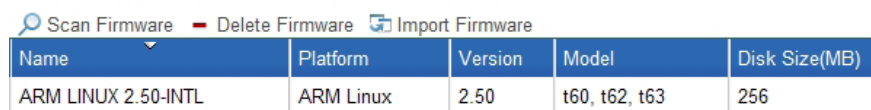

Name	Platform	Version	Model	Disk Size(MB)
ARM LINUX 2.50-INTL	ARM Linux	2.50	t60, t62, t63	256

Deleting Thin Client Firmware Files

To delete a thin client firmware file, please do the following:

- On **System** tab, click **Deployment > Firmware**.
- The Firmware list appears in Management area.
- Click to select the desired firmware file, and then click **Delete Firmware** on the top of the Firmware list.



NOTE

- To delete more than one firmware file, Ctrl-click to select multiple files.

- The Delete Firmware window appears prompting you for confirmation.
- Click **Delete** to confirm.
- On completion, the selected firmware file is removed from the Firmware list.

Scanning Thin Client Firmware Files

The **Scan Firmware** feature helps you to discover the local or remote firmware files. There are two scenarios that you need the help of this feature. The first scenario is that you choose to update clients with remote firmware files rather than local imported ones. In this scenario, the local list of available firmware in ViewSonic Device Manager may be not in sync with the remote list of firmware files on another computer where you choose to get firmware files. The **Scan Firmware** feature can synchronize your local list with the remote one.



NOTE

- For instructions on how to configure your ViewSonic Device Manager to use remote firmware files on another computer for client management, please refer to section "3.2.8 Configuring Remote Deployment Settings" on page 29.

Another scenario is when you copy the file set of an imported firmware file from the installation directory of another ViewSonic Device Manager into the same installation directory of your ViewSonic Device Manager, this firmware file may not appear as an entry in the Firmware list.



NOTE

- The default installation directory of ViewSonic Device Manager is C:\Program Files (x86)\ViewSonic. The file set of an imported firmware file is placed in C:\Program Files (x86)\ViewSonic\firmware, under an uppermost dedicated folder.

In both scenarios, to synchronize the entries in the Firmware list with your local or remote firmware files, please do the following:

1. On **System** tab, Click **Deployment > Firmware**.
2. The Firmware list appears in Management area.
3. Click **Scan Firmware** on the top of the Firmware list.
4. On completion, the Firmware list is now in sync with your local or remote firmware files.

3.2.5 Managing WES Package Files

With WES (Windows Embedded Standard) package files, you can install applications or language packs remotely for your WES-based thin clients. Before proceeding, you need to import package files of appropriate versions for ViewSonic Device Manager.



NOTE

- The Windows Embedded Standard version of your client may not support multiple user interface packs. In this case, installing a language pack for a client will replace its display (user interface) language with the new one.
- For instructions on how to update your WES clients with package files remotely, please refer to “3.4.24 Installing Software Packages” on page 87.

Importing WES Package Files

To import a WES package file, please do the following:



NOTE

- For information about availability of a newer or up-to-date version of package file (.zip format), please contact your dealer.

1. On **System** tab, click **Deployment > WES Package**.

2. The Package list appears.

Scan Package Delete Package Import Package							
Name	Category	Version	Req. Firmware	Platform	Size(MB)	Req. Spaces(MB)	Publisher



NOTE

- If you never imported WES package files into ViewSonic Device Manager, the Package list will be empty as shown above.

3. Click **Import Package** on the top of the list.

4. The Import Package window appears.

Import Package

Package File:

Browse...

Package Name:

Version:

Platform:

Description:

Model:

Size(MB):

Import

Cancel

5. Click **Browse** to locate the desired package file, and then click **Open** to confirm.



NOTE

- ViewSonic Device Manager will automatically perform file check to ensure it's a valid package file for WES-based clients and there is no duplicate in the Package list.

6. Click **Import** to start importing the desired package file.

Import Package

Package File:

C:\Users\Administrator\Document

Browse...

Package Name:

Version:

Platform:

Description:

Model:

Size(MB):

Import

Cancel

7. On completion, the imported package file appears as an entry in the Package list.

Scan Package Delete Package Import Package							
Name	Category	Version	Req. Firmware	Platform	Size(MB)	Req. Spaces(MB)	Publisher
Microsoft .NET Framework 3.5	Application	1.4	1.11-INTL	WES	413.82	708	ViewSonic

Deleting WES Packages

To delete a WES package file, please do the following:

1. On **System** tab, click **WES Package**.
2. The Package list appears.
3. Click to select the desired package file, and then click **Delete Package**.
4. The Delete Package window appears prompting you for confirmation.
5. Click **Delete** to confirm.
6. The selected package file is removed from the Package list.

Scanning WES Packages

The **Scan Package** feature helps you to discover the local or remote WES package files. There are two scenarios that you need the help of this feature. The first scenario is that you choose to update clients with remote package files rather than local imported ones. In this scenario, the local list of available packages in ViewSonic Device Manager may be not in sync with the remote list of packages on another computer where you choose to get package files. The **Scan Package** feature can synchronize your local list with the remote one.



NOTE

- For instructions on how to configure your ViewSonic Device Manager to use remote package files on another computer for client management, please refer to section "3.2.8 Configuring Remote Deployment Settings" on page 29.

Another scenario is when you copy the file set of an imported package file from the installation directory of another ViewSonic Device Manager into the same installation directory of your ViewSonic Device Manager, this package file may not appear as an entry in the Package list.



NOTE

- The default installation directory of ViewSonic Device Manager is C:\Program Files (x86)\ViewSonic. The file set of an imported package file is placed in C:\Program Files (x86)\ViewSonic\packages, under an uppermost dedicated folder.

To synchronize entries in the Package list with the local or remote package files, please do the following:

1. On **System** tab, click **Deployment > WES Package**.
2. The Package list appears in Management area.
3. Click **Scan Package** on the top of the list.
4. On completion, the package file is added as an entry in the Package list.

3.2.6 Managing Client Snapshots

A snapshot is the system copy of a client at a specific point of time, which you can use for mass deployment, system backup, and recovery.



NOTE

- ViewSonic SC-T35 thin clients do not support this feature.
- For instructions on how to take a system snapshot for clients, please refer to section "3.4.25 Taking Client Snapshots" on page 89.

Exporting Client Snapshots

To export a client snapshot, please do the following:

1. On **System** tab, click **Deployment > Snapshot**.
2. The Snapshot list appears in Management area.


Scan Snapshot Delete Snapshot Import Snapshot Export Snapshot						
Name	Description	Location	Platform	Version	Model	Disk Size
1.29-INTL	t160L-000E66-110623d	/001FD8000E66-1/	ViewSonic Linux	1.29	t160L	512
1.29-INTL	t160L-000E8E-110623a	/001FD8000E8E-1/	ViewSonic Linux	1.29	t160L	512
1.29-INTL	t160L-000E66-110623e	/001FD8000E66-2/	ViewSonic Linux	1.29	t160L	512
1.29-INTL	t160L-000E66-110624a	/001FD8000E66-3/	ViewSonic Linux	1.29	t160L	512
1.12-INTL	t200W-000AB2-110624c	/001FD8000AB2-1/	Windows Embedded Standard	1.12	t200W	2048
1.13-INTL	t200W-00084E-110629a	/001FD800084E-1/	Windows Embedded Standard	1.13	t200W	1024
1.31-INTL	t160L-000E66-110629a	/001FD8000E66-4/	ViewSonic Linux	1.31	t160L	512
1.31-INTL	t160L-000E8E-110629a	/001FD8000E8E-2/	ViewSonic Linux	1.31	t160L	512



NOTE

- The Snapshot list might be empty, if you never took or imported client snapshots.

3. Click to select the desired client snapshot, and then click **Export Snapshot** on the top of the list.
4. The Export Snapshot window appears prompting for confirmation.

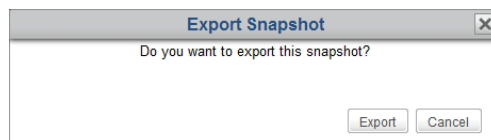

5. Click **Export** to confirm.
6. A window appears prompting you to choose between opening or saving the exported file.
7. Click to select **Save File**, and then click **OK** to confirm.
8. In the opened window, choose the location to save the exported file, and then click **Save** to confirm.

Importing Client Snapshots

To import a client snapshot, please do the following:



NOTE

- Ensure that you have got the desired client snapshot (.zip format) which is taken and exported from ViewSonic Device Manager on this or another computer.

1. On **System** tab, click **Deployment > Snapshot**.
2. The Snapshot list appears.
3. Click **Import Snapshot** on the top of the Snapshot list.
4. The Import Snapshot window appears.
5. Click **Browse** to locate the desired client snapshot, and then click **Open** to confirm.



NOTE

- ViewSonic Device Manager will automatically perform file check to ensure that the file is a valid snapshot and there is no duplicate in the Snapshot list.

6. Click **Import** to start importing the desired snapshot.
7. On completion, the snapshot appears as an entry in the Snapshot list.

Deleting Client Snapshots

To delete a client snapshot, please do the following:

1. On **System** tab, click **Deployment > Snapshot**.
2. The Snapshot list appears.
3. Click to select the desired snapshot, and then click **Delete Snapshot** on the top of the list.
4. The Delete Snapshot window appears prompting for confirmation.



NOTE

- To delete more than one snapshot, Ctrl-click to select multiple files.

5. Click **Delete** to confirm.
6. The selected snapshot is removed from the Snapshot list.

Scanning Client Snapshots

The **Scan Snapshot** feature helps you to discover the local or remote client snapshots. There are two scenarios that you need the help of this feature. The first scenario is that you choose to restore clients with remote snapshots rather than local imported ones. In this scenario, the local list of available snapshots in ViewSonic Device Manager may be not in sync with the remote list of snapshots on another computer where you choose to get snapshots. The **Scan Snapshot** feature can synchronize your local list with the remote one.



NOTE

- For instructions on how to configure your ViewSonic Device Manager to use remote snapshots on another computer for client management, please refer to section "3.2.8 Configuring Remote Deployment Settings" on page 29.

Another scenario is when you copy a snapshot file set from the installation directory of another ViewSonic Device Manager into the same installation directory of your ViewSonic Device Manager, this snapshot may not appear as an entry in the Snapshot list.



NOTE

- The default installation directory of ViewSonic Device Manager is C:\Program Files (x86)\ViewSonic. All snapshots taken or imported through ViewSonic Device Manager are placed in C:\Program Files (x86)\ViewSonic\snapshot, under an uppermost dedicated folder.

To synchronize entries in the Snapshot list with your local or remote snapshots, please do the following:

1. On **System** tab, click **Deployment > Snapshot**.
2. The Snapshot list appears in Management area.
3. Click **Scan Snapshot** on the top of the list.
4. On completion, the snapshot is added as an entry in the Snapshot list.

3.2.7 Managing Certificates of Remote Computers

Thin clients are simple endpoint devices for accessing services from remote computers. To ensure connection security between thin clients and remote computers, certificates of remote computers where desktop virtualization services are delivered may be required in order to verify the identify of remote computers. You could import security certificates of remote computers, and then push certificates remotely to multiple thin clients with the help of ViewSonic Device Manager.

Importing Certificates of Remote Computers

To import the certificate of a remote computer, please do the following:

1. On **System** tab, click **Deployment > Certificate**.
2. The Certificate list appears in Management area.

- Delete Certificate		+ Import Certificate	
Issued to	Issued by	Expired on	Valid




NOTE

- If you never imported certificate files into ViewSonic Device Manager, the Certificate list will be empty as shown above.

Using ViewSonic Device Manager

Establishing a Basic Administration Environment

3. Click **Import Certificate** on the top of the list.
4. The Import Certificate window appears.

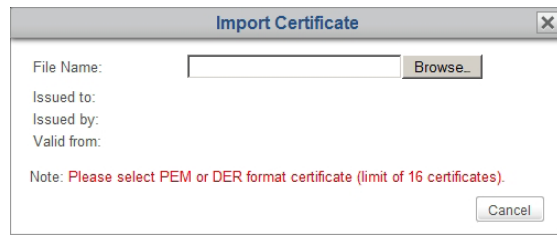

NOTE

- ViewSonic Device Manager supports both **PEM** (Privacy Enhanced Mail) and **DER** (Distinguished Encoding Rules) format certificates.
- The upper limit of imported certificates is 16.

5. Click **Browse** to locate the desired certificate file, and then click **Open** to confirm.





NOTE

- ViewSonic Device Manager will automatically perform file check to ensure there is no duplicate in the Certificate list.

6. Click **Import** to continue.



7. On completion, the imported certificate appears as an entry in the Certificate list.

 Delete Certificate  Import Certificate

Issued to	Issued by	Expired on	Valid
Go Daddy Secure Certificate Authority - G2	Go Daddy Root Certificate Authority - G2	2031-05-03	Valid



NOTE

- While pushing certificates to thin clients, all certificates in the Certificate list will be imported to selected clients. For instructions on how to push certificates to clients, please refer to section "3.4.17 Pushing Certificates of Remote Computers to Clients" on page 74.

Deleting Certificates of Remote Computers

To delete the certificate of a remote computer, please do the following:

1. On **System** tab, click **Deployment** > **Certificate**.
2. The Certificate list appears in Management area.
3. Click to select the desired certificate.



NOTE

- To delete more than one certificate, Ctrl-click to select multiple entries.

4. Click **Delete Certificate** on the top of the Certificate list.
5. The Delete Certificate window appears prompting for confirmation.
6. Click **Delete** to confirm.
7. The selected certificate is removed from the Certificate list.

3.2.8 Configuring Remote Deployment Settings

You can deploy, maintain, and upgrade your thin clients from a remote computer with ViewSonic Device Manager. All required files (firmware, snapshot, or package files) can come from the same computer where your ViewSonic Device Manager is installed, or another computer with the needed files.

Remote Deployment Configuration		
Option	Required Actions	Note
Using local updates and snapshots	Import or create all required files on the same computer where the governing ViewSonic Device Manager is installed	Default
Using remote updates and snapshots	Configure settings to get all needed files from another computer	



NOTE

- In ViewSonic Device Manager, the local updates and snapshots are used by default.


Maintaining or Deploying Clients with Local Updates or Snapshots

To maintain or deploy clients with internal updates or snapshots, please do the following:

1. On **System** tab, click **Deployment** > **Deploy Server**.
2. The Deploy Settings pane appears in Management area.

Using ViewSonic Device Manager

Establishing a Basic Administration Environment

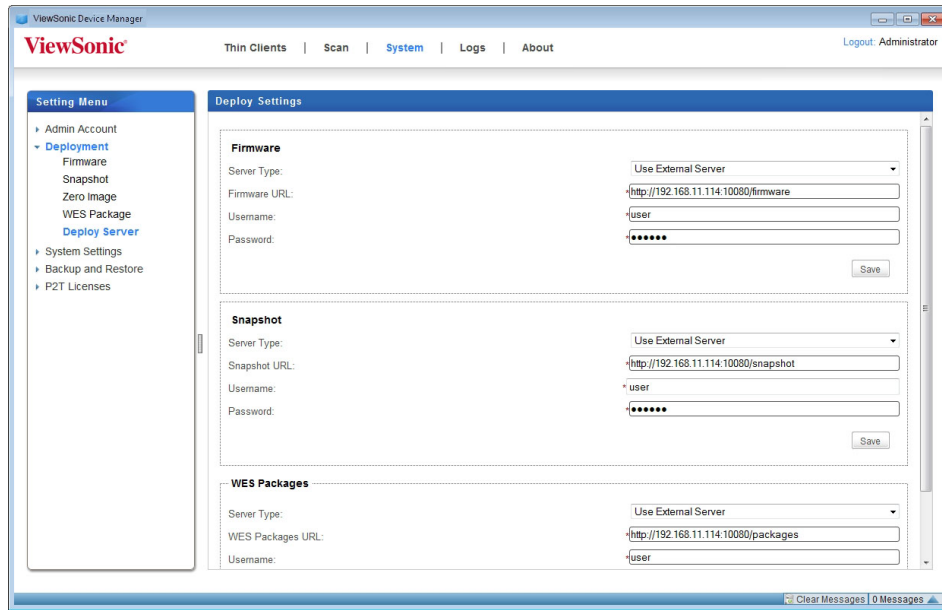

3. Click the drop-down menu on each section (**Firmware**, **Snapshot**, and **WES Packages**) to select **Use Internal Server**, and then click **Save** to apply.

Maintaining or Deploying Clients with Remote Updates or Snapshots

To maintain or deploy clients with external updates or snapshots, please do the following:

1. On **System** tab, Click **Deployment > Deploy Server**.
2. The Deploy Settings pane appears in Management area.
3. Click the drop-down menu on a section (Firmware, Snapshot, or WES Packages) to select **Use External Server**, new fields appear for configuration.

Firmware
Server Type: Use External Server
Firmware URL:
Username:
Password:
Save

Snapshot
Server Type: Use External Server
Snapshot URL:
Username:
Password:
Save

WES Packages
Server Type: Use External Server
WES Packages URL:
Username:
Password:
Save

4. In Firmware/Snapshot/WES Packages URL field, replace **YourServerIP** in the original URL with the IP address of another computer where you want to get updates and snapshots, type in the default credentials — **user** as the username and **secret** as the password, and then click **Save** to apply.

The image shows three stacked configuration panels, each with a 'Save' button at the bottom right.

- Firmware**
 - Server Type: Use External Server
 - Firmware URL: http://192.168.11.114:10080/firmware
 - Username: user
 - Password: secret
- Snapshot**
 - Server Type: Use External Server
 - Snapshot URL: http://192.168.11.114:10080/snapshot
 - Username: user
 - Password: secret
- WES Packages**
 - Server Type: Use External Server
 - WES Packages URL: http://192.168.11.114:10080/packages
 - Username: user
 - Password: secret

3.2.9 Selecting the Service IP of ViewSonic Device Manager

To select the service IP address of your ViewSonic Device Manager, please do the following:

1. On **System** tab, click **System Settings > General Settings**.
2. Click the drop-down list of available service IP addresses to select the desired IP address.

The image shows the 'ViewSonic Device Manager' configuration panel. It has a 'Service IP Address' dropdown menu currently set to '192.168.0.114' and a 'Save' button at the bottom right.

3. Click **Save** to apply.



NOTE

- It's strongly recommended to use a fixed IP address as the service IP of ViewSonic Device Manager. The change of the service IP may make all the managed clients become unmanageable. In case that the IP address of the computer where ViewSonic Device Manager is installed is changed, ensure that you make the Service IP setting here consistent with the new IP address.



NOTE

- In case that the service IP changes, your ViewSonic Device Manager will prompt you to select a new service IP when you log in to the management console.

A login form with a dark blue background. It contains three input fields: 'Server IP Address (local area)' with a dropdown menu showing '192.168.0.115', 'Account', and 'Password'. A 'Login' button with a right-pointing arrow is at the bottom right.

3.2.10 Configuring Auto-Logout for ViewSonic Device Manager

ViewSonic Device Manager allows you to configure its auto-logout to enhance the security of the management console. When configured, your session will be ended automatically when it's idle for a specific amount of time.



NOTE

- By default, your administrative session will not be logged out automatically.

To configure auto-logout for ViewSonic Device Manager, please do the following:

1. On **System** tab, click **System Settings > General Settings**.
2. Click the drop-down menu to select the desired amount of inactivity time.

A configuration form titled 'Auto Logout'. It has a label 'Auto Logout After:' and a dropdown menu with 'Never' selected. A 'Save' button is at the bottom right.

3. Click **Save** to apply.

3.2.11 Configuring the Database Source of ViewSonic Device Manager

ViewSonic Device Manager offers two ways to store its management database: one is to store the database on the same computer where ViewSonic Device Manager is installed; the other is on a different computer. By default, the management database is stored on the computer where ViewSonic Device Manager is installed.

Using Local Management Database

To use the local management database, please do the following:

1. On **System** tab, click **System Settings > External Database**.

2. The External Database pane appears in Management area.
3. Click the drop-down menu to select **No**.




The screenshot shows a configuration window titled "Database". Inside, there is a label "Use External Database:" followed by a drop-down menu currently set to "No". A "Save" button is located at the bottom right of the pane.

Using External Management Database

To use the external and centralized management database, please do the following:

1. On **System** tab, click **System Settings > External Database**.
2. The External Database pane appears in Management area.
3. In Database section, click the drop-down menu to select **Yes**.
4. New sections with new fields appears for configuration.

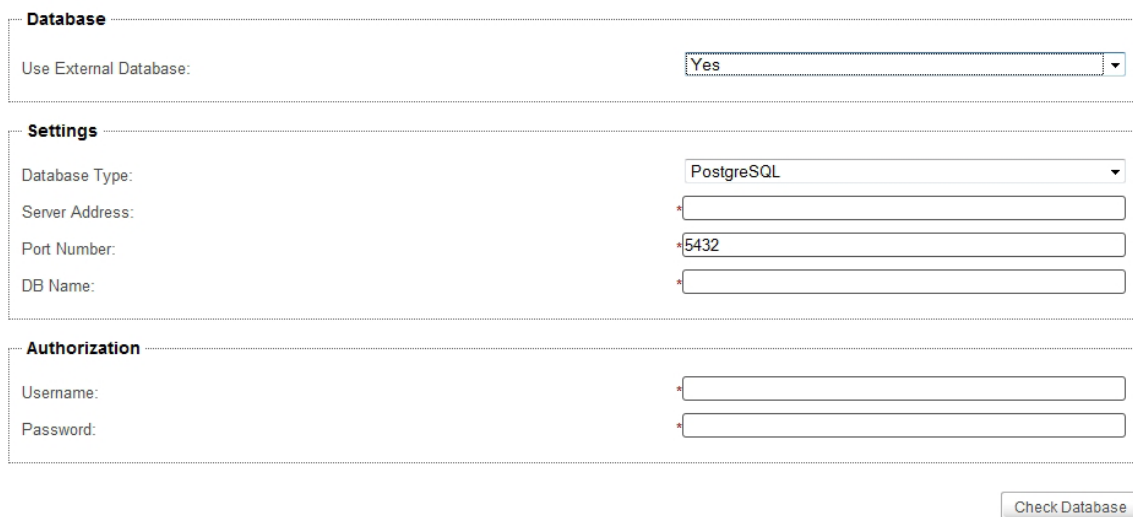

The screenshot shows the "Database" configuration pane with "Use External Database" set to "Yes". Below this, there are three sections: "Settings" and "Authorization". The "Settings" section includes "Database Type:" (set to PostgreSQL), "Server Address:", "Port Number:" (set to 5432), and "DB Name:". The "Authorization" section includes "Username:" and "Password:". A "Check Database" button is at the bottom right.



NOTE

- Four database management systems are supported: PostgreSQL, MySQL, MsSQL (Microsoft SQL Server), and Oracle (Oracle Database).
- Ensure that you have set up the desired database management system.

5. In Settings section, click the drop-down menu to select the type of your database management system, type the IP address of the database server, the port number, and the name of the database.
6. In Authorization section, type the user name and password for access of database.
7. Click **Check Database** to connect to the remote database.

3.2.12 Selecting the Interface Language of ViewSonic Device Manager

To select the interface language of your ViewSonic Device Manager, please do the following:

1. On **System** tab, click **System Settings > Language**.
2. The System Language pane appears in Management area.
3. Click the drop-down list of available languages to select the desired interface language.
4. Click **Save** to apply.

3.2.13 Backing Up the Management Database

To back up the management database of ViewSonic Device Manager, please do the following:

1. On **System** tab, click **Backup and Restore**.
2. In Database Backup section, type the desired file name prefix.




The screenshot shows the 'Database Backup' section of the ViewSonic Device Manager interface. It contains two text input fields: 'Directory:' with the value 'C:\Program Files (x86)\ViewSonic\dbarchive\' and 'Append File Name with:' with the value 'VDM'. A 'Backup' button is located at the bottom right of the section.



TIP

- The backup file is stored in the default directory as shown in Directory field. If you want to change the name of a backup file, locate the file and change its name.

3. Click **Backup** to store a copy of management database and client certificates.
4. On completion, the backup file appears at the top of the Archive File drop-down menu in Database Archive Management section.

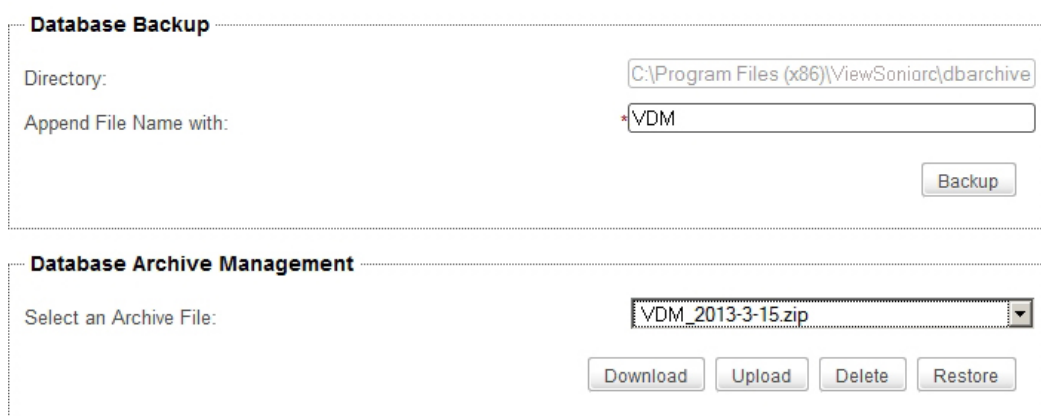


The screenshot shows two sections of the ViewSonic Device Manager interface. The top section is 'Database Backup', which is identical to the one in the previous image. The bottom section is 'Database Archive Management'. It features a 'Select an Archive File:' label and a drop-down menu showing 'VDM_2013-3-15.zip'. Below the drop-down menu are four buttons: 'Download', 'Upload', 'Delete', and 'Restore'.

3.2.14 Managing Database Archive Files

Downloading a Database Archive File

To download a database archive file, please do the following:

1. On **System** tab, click **Backup and Restore**.
2. In Database Archive Management section, click the Archive File drop-down menu to select the desired database archive file, and then click **Download**.
3. Click to check **Save File**, and then click **OK** to confirm.

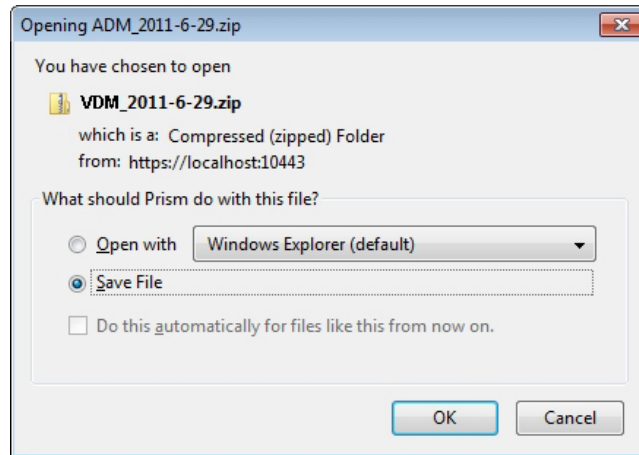

4. In the opened window, navigate to the desired location, and then click **Save** to store the file.

Uploading a Database Archive File

To upload a database archive file, please do the following:

1. On **System** tab, click **Backup and Restore**.
2. In Database Archive Management section, click **Upload** to open the File Upload window.
3. Locate the desired database archive file, and then click **OK** to confirm.
4. The file is added to the Archive File drop-down menu.

Deleting a Database Archive File

To delete a database archive file, please do the following:

1. On **System** tab, click **Backup and Restore**.
2. In Database Archive Management section, click the drop-down menu to select the desired archive file.
3. Click **Delete** to remove the selected file.

3.2.15 Restoring a Database Archive File

To restore a database archive file, please do the following:

1. On **System** tab, click **Backup and Restore**.
2. In Database Archive Management section, click the Archive File drop-down menu to select the desired archive file.



3. Click **Restore** to return the management database of ViewSonic Device Manager to the desired state.

3.2.16 Scheduling Automatically Performed Tasks

ViewSonic Device Manager enables you to schedule tasks performed automatically at a specific time, allowing scheduled and automatic maintenance tasks for managed endpoint devices.

To schedule an automatically performed task, please do the following:

1. On **System** tab, click **Task Schedule**.
2. The Task list appears in Management area.

</



NOTE

- The Task list might be empty, if you never created automatically performed tasks.

3. Click **Add** on the top of the Task list.
4. The Add Task Schedule pane appears in Management area.

The screenshot shows the 'Add Task Schedule' dialog box with the 'Schedule' tab selected. The 'Enable Task Schedule' checkbox is checked. The 'Perform' dropdown is set to 'Daily'. The 'Execute every' field is set to '1' day(s). The 'Start Date' is '2014-4-23' with a 'Select' button. The 'Start Time' is '00:00'. The 'Comment' field is empty. The 'Previous:', 'Next:', and 'Previous Result:' fields are also empty. 'Save' and 'Cancel' buttons are at the bottom right.

Add Task Schedule

☒ Enable Task Schedule

Schedule Details

Perform: Daily

Execute every 1 day(s).

Start Date: 2014-4-23 Select

Start Time: 00 : 00

Comment:

Previous:

Next:

Previous Result:

Save Cancel

5. On **Schedule** tab, type in or click to select the start date, time, the way to repeat, task comment, etc.

This screenshot shows the same 'Add Task Schedule' dialog box, but with several fields filled out. The 'Perform' dropdown is still 'Daily'. The 'Execute every' field is still '1'. The 'Start Date' is now '2014-04-24'. The 'Start Time' is now '11:55'. The 'Comment' field contains the text 'End Sessions and Refresh Endpoints before Afternoon Opening Time'. The 'Previous:', 'Next:', and 'Previous Result:' fields remain empty. 'Save' and 'Cancel' buttons are at the bottom right.

Add Task Schedule

☒ Enable Task Schedule

Schedule Details

Perform: Daily

Execute every 1 day(s).

Start Date: 2014-04-24 Select

Start Time: 11 : 55

Comment: End Sessions and Refresh Endpoints before Afternoon Opening Time

Previous:

Next:

Previous Result:

Save Cancel

Using ViewSonic Device Manager

Establishing a Basic Administration Environment

- On **Details** tab, click **Add** to specify the action(s).



NOTE

- One *task* consists of *one or more actions*.

The 'Add Task Schedule' dialog box has a blue header bar. Below it, there's a checkbox 'Enable Task Schedule' which is checked. Two tabs, 'Schedule' and 'Details', are visible, with 'Details' being the active tab. Inside the 'Details' tab, there's a table with columns: 'Module Name', 'Action', 'Comment', 'Order', and an empty column. Above the table are buttons for '+ Add', 'Edit', and '- Delete'. Below the table, there are input fields for 'Comment', 'Previous:', 'Next:', and 'Previous Result:'. At the bottom right are 'Save' and 'Cancel' buttons.

Module Name	Action	Comment	Order	
-------------	--------	---------	-------	--

- On **Add** window, type in or click to select the action order, type, performed action, action comment, etc., and then click **OK** to confirm.

The 'Add' dialog box shows 'Enable' checked, 'Order' set to 1, and 'Module Name' as 'Client: Power Control'. The 'Action' is 'Send Message'. The 'Message' section has a 'Countdown' of 300 seconds and a message text: 'Your session will be ended in 5 mins. Save your work to pr'. Under 'Clients', 'Groups' is unselected and 'Clients' is selected. A table lists three clients with checkboxes: ViewSonic -0038C8 (checked), ViewSonic -00CDD9 (checked), and ViewSonic -003EC4 (checked). Below the table are 'Select All' and 'Unselect All' buttons. The 'Comment' field contains 'Notify endpoint users'.

<input checked="" type="checkbox"/>	ViewSonic -0038C8	t170W7E
<input checked="" type="checkbox"/>	ViewSonic -00CDD9	t220W
<input checked="" type="checkbox"/>	ViewSonic -003EC4	t60

The 'Add' dialog box shows 'Enable' checked, 'Order' set to 4, and 'Module Name' as 'Task: Wait'. The 'Action' is 'Wait' with a value of 10 minute(s). The 'Comment' field contains 'Wait for 10 mins'.

The 'Add' dialog box shows 'Enable' checked, 'Order' set to 3, and 'Module Name' as 'Client: Power Control'. The 'Action' is 'Shutdown'. Under 'Clients', 'Groups' is unselected and 'Clients' is selected. A table lists three clients with checkboxes: ViewSonic -0038C8 (checked), ViewSonic -00CDD9 (checked), and ViewSonic -003EC4 (checked). Below the table are 'Select All' and 'Unselect All' buttons. The 'Comment' field contains 'Shut down endpoints'.

<input checked="" type="checkbox"/>	ViewSonic -0038C8	t170W7E
<input checked="" type="checkbox"/>	ViewSonic -00CDD9	t220W
<input checked="" type="checkbox"/>	ViewSonic -003EC4	t60

8. After completion, the action(s) will be added to the Action list.

Add Task Schedule

☒ Enable Task Schedule

Schedule

Details

+ Add Edit - Delete

	Module Name	Action	Comment	Order
✓	Power Control	Send Message	Notify endpoint users	1
✓	Wait	10 min.	Wait for 10 mins	2
✓	Power Control	Shutdown	Shut down endpoints	3
✓	Wait	10 min.	Wait for 10 mins	4
✓	Power Control	Wake On LAN	Wake endpoints remotely	5

Comment:

End Sessions and Refresh Endpoints before Afternoon Opening Time

Previous:

Next:

Previous Result:

Save

Cancel


9. Click **Save** to confirm. The task entry will be added to the Task list.

+ Add Edit - Delete View Log					
	Schedule	Comment	Next Schedule	Prev Schedule	Status
✓	Daily	End Sessions and Refresh Endpoints before Afternoon Opening Time	2014-04-24 11:55		

3.3 Adding Clients into a Managed Group

3.3.1 Scan Tab Overview

Scan tab enables you to discover unmanaged clients over your local network, including clients that are not managed by the current ViewSonic Device Manager instance. To access the functionality of **Scan** tab, click the tab on ViewSonic Device Manager.

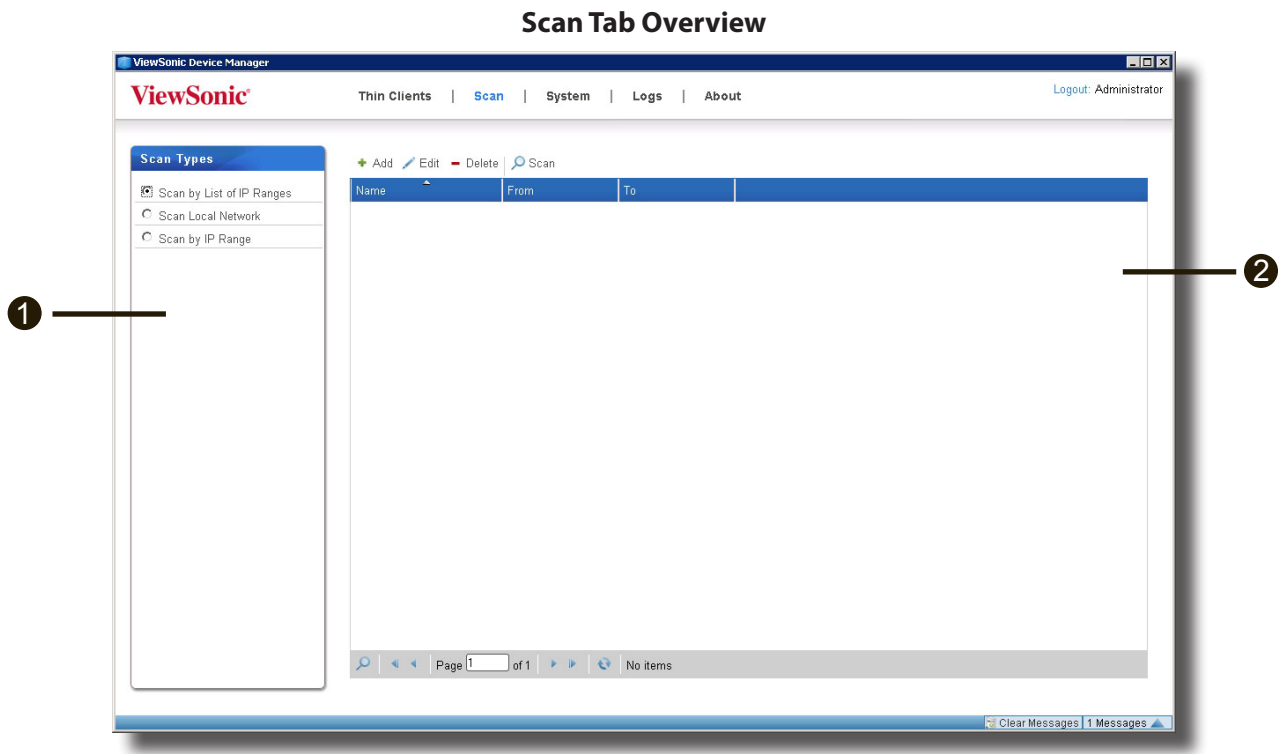

Interface Elements		
No.	Name	Description
1	Navigation Area	Click to check the desired client detection method.
2	Management Area	Manage IP Range lists or discovered clients.

3.3.2 Available Tasks at a Glance

No.	Available Task	Section	Page
1	Discovering clients in the whole range of a local network	3.3.4	41
2	Discovering clients in a specified range of IP addresses	3.3.5	43
3	Discovering clients using predefined IP range lists	3.3.6	44
		3.3.7	45

3.3.3 Client Detection and Management

Your client is not managed by any ViewSonic Device Manager by factory default. To manage your clients with

ViewSonic Device Manager, you need to first detect unmanaged clients over your local network, and then add them into a managed group under your ViewSonic Device Manager.

To look for a thin client over your local network, you can use different client detection options available under the **Scan** tab.

The following table shows prerequisites and methods for detecting clients over your local network:

Type	Model	Prerequisites	Method	Section	Page
Thin Client	SC-T35 / SC-T45 / SC-T46 / SC-T47	<ul style="list-style-type: none">Clients are connected to the local networkClients are powered up	Manual Scan	3.3.4 3.3.5 3.3.6	41 43 44




NOTE

- If the computer where an ViewSonic Device Manager is installed connects to a local network, then the ViewSonic Device Manager is connected to the local network.
- After adding clients into a managed group under your ViewSonic Device Manager, you can start remote management of clients. For details on how to manage your clients remotely, please refer to section “3.4 Managing All Your Clients” on page 47.

3.3.4 Discovering Clients in the Whole Range of a Local Network

To discover unmanaged clients in the whole range of a local network and add the desired client(s) into a managed group under your ViewSonic Device Manager, please do the following:


1. On **Scan** tab, click to check **Scan Local Network**.

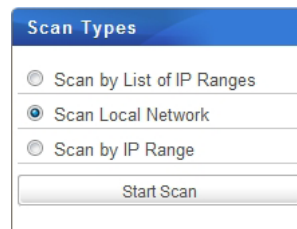

2. Click **Start Scan**.
3. On completion, the discovered clients are listed in Management area.

Using ViewSonic Device Manager

Adding Clients into a Managed Group

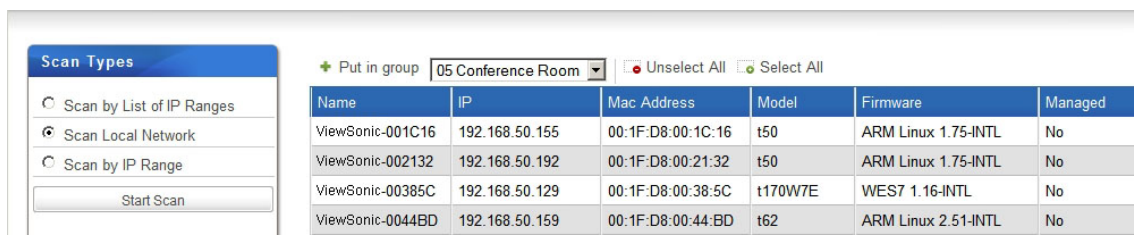

The screenshot shows the ViewSonic Device Manager interface. On the left, the 'Scan Types' sidebar has three options: 'Scan by List of IP Ranges', 'Scan Local Network' (selected), and 'Scan by IP Range'. Below these is a 'Start Scan' button. On the right, there is a '+ Put in group' dropdown menu currently set to '05 Conference Room'. To the right of the dropdown are 'Unselect All' and 'Select All' buttons. Below these is a table with the following data:

Name	IP	Mac Address	Model	Firmware	Managed
ViewSonic-001C16	192.168.50.155	00:1F:D8:00:1C:16	t50	ARM Linux 1.75-INTL	No
ViewSonic-002132	192.168.50.192	00:1F:D8:00:21:32	t50	ARM Linux 1.75-INTL	No
ViewSonic-00385C	192.168.50.129	00:1F:D8:00:38:5C	t170W7E	WES7 1.16-INTL	No
ViewSonic-0044BD	192.168.50.159	00:1F:D8:00:44:BD	t62	ARM Linux 2.51-INTL	No

4. Select the desired client(s), the preferred client group from the drop-down menu on the top of the Client list, and then click **Put in group**.



NOTE

- The default client group is **Ungrouped**. You can change the group of a client at a later time. To create new client groups, please refer to section "3.4.3 Creating Client Groups" on page 49.
- To select multiple clients, just click to select each individual client. You can also use **Select All** and **Unselect All** on the top of the Client list to select/unselect clients.

5. On completion, the client(s) is managed by your ViewSonic Device Manager.



NOTE

- Whichever group you add a client to (including **Ungrouped**), once **Put in group** is executed successfully, the client will be managed by your ViewSonic Device Manager.

3.3.5 Discovering Clients in a Specified Range of IP Addresses

To discover unmanaged clients in a specified range of IP addresses and add the desired client(s) into a managed group under your ViewSonic Device Manager, please do the following:

1. On **Scan** tab, click to check **Scan by IP Ranges**.
2. The IP range fields appear.

3. Type in the desired IP range, and then click **Start Scan**.
4. On completion, the discovered clients are listed in Management area.

Name	IP	Mac Address	Model	Firmware
ViewSonic-0008BA	192.168.11.72	00:1F:D8:00:08:BA	t160W	WES 1.03-INTL
ViewSonic-001C64	192.168.11.101	00:1F:D8:00:1C:64	t50	ViewSonic Linux 1.30-INTL
ViewSonic-001FA0	192.168.11.71	00:1F:D8:00:1F:A0	t50	ViewSonic Linux 1.31-INTL

5. Select the desired client(s), the preferred client group from the drop-down menu on the top of the Client list, and then click **Put in group**.



NOTE

- The default client group is **Ungrouped**. You can change the group of a client at a later time. To create new client groups, please refer to section "3.4.3 Creating Client Groups" on page 49.
- To select multiple clients, just click to select each individual client. You can also use **Select All** and **Unselect All** on the top of the Client list to select/unselect clients.

6. On completion, the client(s) is managed by your ViewSonic Device Manager.



NOTE

- Whichever group you add a client to (including **Ungrouped**), once **Put in group** is executed successfully, the client will be managed by your ViewSonic Device Manager.


3.3.6 Creating and Managing an IP Range List

You can define different IP ranges for your local network, and then discover unmanaged clients within a specific range of IP addresses when needed.


Creating an IP Range List

To create an IP Range list, please do the following:


1. On **Scan** tab, click to check **Scan by List of IP Ranges**.
2. Click **Add** on the top of the IP Range list.

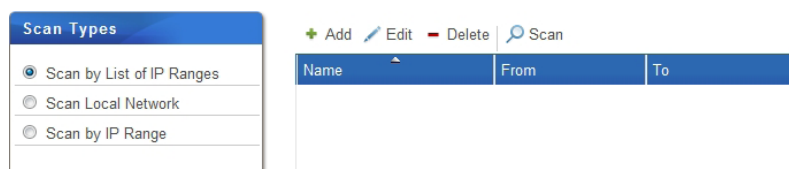

3. The Add window appears.
4. Type in the name for this entry of IP range, and specify the desired IP range using **From** and **To** fields.

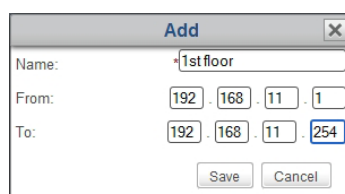

5. Click **Save** to add this range entry.
6. Repeat steps 2 through 5 to add other range entries to your IP Range list.

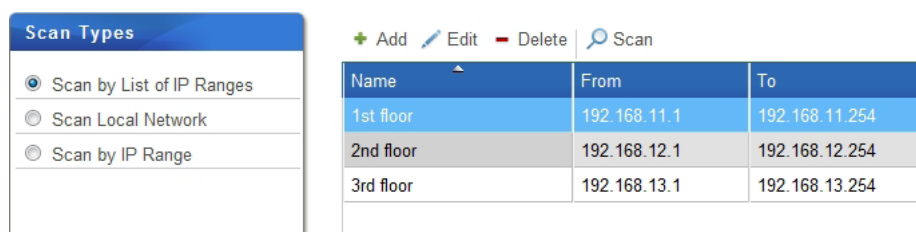

Managing the IP Range List

To manage your IP Range list, please do the following:

1. On **Scan** tab, click to check **Scan by List of IP Ranges**.
2. The IP Range list appears in Management area.
3. Click **Add**, **Edit**, or **Delete** to make changes to your IP Range list.

3.3.7 Discovering Clients using a Predefined IP Range List

To discover unmanaged clients using a predefined IP Range list and add the desired client(s) into a managed group under ViewSonic Device Manager, please do the following:



NOTE

- If you haven't create any IP Range list, please refer to "3.3.6 Creating and Managing an IP Range List" on page 44 for instructions.

1. On **Scan** tab, click to check **Scan by List of IP Ranges**.
2. The IP Range list appears.
3. Click to select the desired IP range, and then click **Scan** to look for unmanaged clients within the range.

Scan Types		
<input checked="" type="radio"/> Scan by List of IP Ranges		
<input type="radio"/> Scan Local Network		
<input type="radio"/> Scan by IP Range		

+ Add Edit - Delete Scan		
Name	From	To
1st floor	192.168.11.1	192.168.11.254
2nd floor	192.168.12.1	192.168.12.254
3rd floor	192.168.13.1	192.168.13.254

4. While searching for thin clients, the selected IP range is shown on the right.

Scan Types	
<input type="radio"/> Scan by List of IP Ranges	
<input type="radio"/> Scan Local Network	
<input checked="" type="radio"/> Scan by IP Range	
From IP: 192 . 168 . 11 . 1	
To IP: 192 . 168 . 11 . 254	
Start Scan	
Searching Thin Clients...	

+ Put in group ARM Linux Unselect All Select All				
Name	IP	Mac Address	Model	Firmware

5. On completion, the discovered clients are listed in Management area.

Using ViewSonic Device Manager

Adding Clients into a Managed Group

The screenshot shows the 'Scan Types' panel on the left with three radio buttons: 'Scan by List of IP Ranges', 'Scan Local Network', and 'Scan by IP Range' (which is selected). Below these are input fields for 'From IP' (192.168.11.1) and 'To IP' (192.168.11.254), and a 'Start Scan' button. To the right, there is a '+ Put in group' dropdown menu set to 'ARM Linux', and two buttons: 'Unselect All' and 'Select All'. Below these is a table with the following data:

Name	IP	Mac Address	Model	Firmware
ViewSonic-0008BA	192.168.11.72	00:1F:D8:00:08:BA	t160W	WES 1.03-INTL
ViewSonic-001C64	192.168.11.101	00:1F:D8:00:1C:64	t50	ViewSonic Linux 1.30-INTL
ViewSonic-001FA0	192.168.11.71	00:1F:D8:00:1F:A0	t50	ViewSonic Linux 1.31-INTL

6. Select the desired client(s), the preferred client group from the drop-down menu on the top of the client list, and then click **Put in group**.



NOTE

- The default client group is **Ungrouped**. You can change the group of a client at a later time. To create new client groups, please refer to section "3.4.3 Creating Client Groups" on page 49.
- To select multiple clients, just click to select each individual client. You can also use **Select All** and **Unselect All** above the Client list to select/unselect clients.

7. On completion, the client(s) is managed by your ViewSonic Device Manager.



NOTE


- Whichever group you add a client to (including **Ungrouped**), once **Put in group** is executed successfully, the client will be managed by your ViewSonic Device Manager.

3.4 Managing All Your Clients

3.4.1 Thin Clients Tab Overview

Thin Clients tab helps you to manage all your clients. To access the functionality of **Thin Clients** tab, click the tab on ViewSonic Device Manager.

Thin Clients Tab Overview

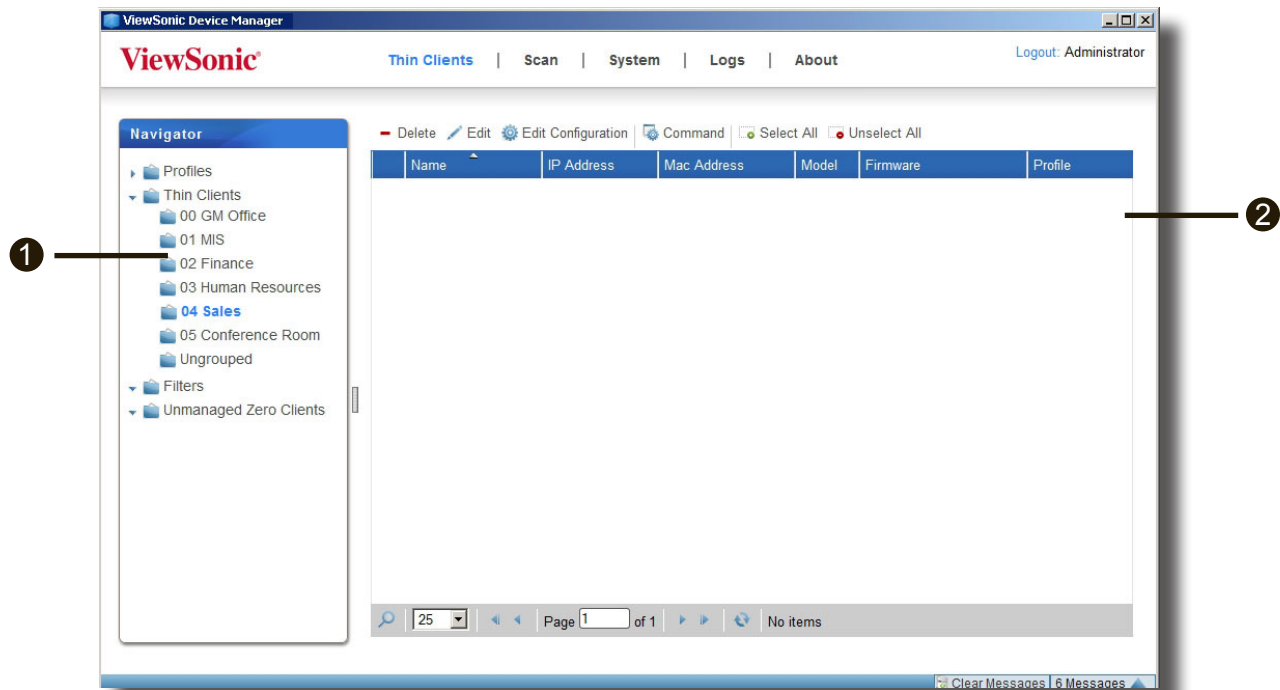

Interface Elements

No.	Name	Description
1	Navigation Area	Click to access the desired management item.
2	Management Area	Select to perform desired tasks, configure desired settings, or view related information available under a selected item.

3.4.2 Available Tasks at a Glance

No.	Available Task	Section	Page
1	Creating client groups	3.4.3	49
2	Managing client groups	3.4.4	50
3	Managing clients in a group	3.4.5 3.4.6	51 52
4	Creating setting profile groups	3.4.9	56
5	Managing setting profile groups	3.4.10	57
6	Creating client setting profiles	3.4.11	58
7	Managing client setting profiles	3.4.12	61
8	Using individualized client settings	3.4.13	64
9	Using hybrid client settings	3.4.14	65
10	Pushing settings to clients through your local network	3.4.15	67
11	Pulling settings from clients through your local network	3.4.16	71
12	Pushing certificates of remote computers to clients	3.4.17	74
13	Sending messages to clients	3.4.18	75
14	Editing or viewing basic information about a client	3.4.19	76
15	Rebooting clients through your local network	3.4.20	77
16	Shutting down clients through your local network	3.4.21	80
17	Waking clients through your local network	3.4.22	83
18	Updating client firmware	3.4.23	86
19	Installing software packages	3.4.24	87
20	Taking client snapshots	3.4.25	89
21	Restoring client snapshots	3.4.26	90
22	Assisting a client user remotely	3.4.27	91
23	Monitoring a client remotely	3.4.27	91
24	Controlling a client remotely	3.4.27	91
25	Exporting client data	3.4.28	93
26	Digging out profiles or managed clients with Quick Search	3.4.29	93
27	Digging out managed clients with filters	3.4.30	94
28	Managing your client filters	3.4.31	96

3.4.3 Creating Client Groups

You can create a client group for putting a set of clients together for ease of management.




NOTE


- The default client group is **Ungrouped**. You can change a client's group if needed.

To create a client group, please do the following:


1. On **Thin Clients** tab, click **Thin Clients** in Navigation area.
2. Click **Add Group** on the top of the Management area.

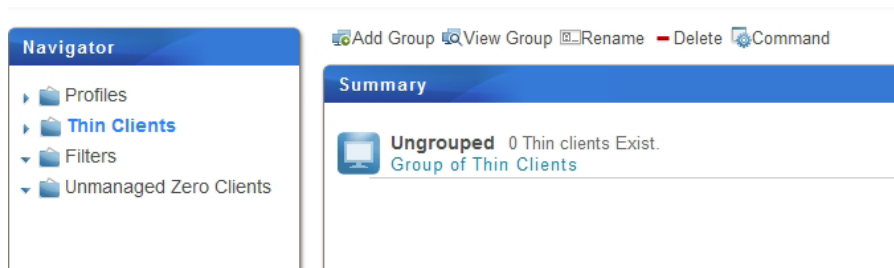

3. The Add Thin Client Group window appears prompting you for the name of the group.

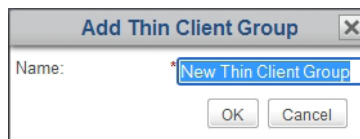

4. Type in the desired name, and then click **OK** to confirm.
5. The newly created group then appears in the Client Group list.

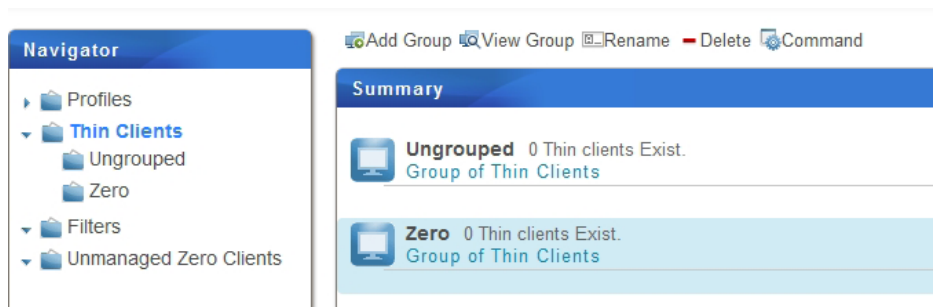

3.4.4 Managing Client Groups

Rename a Client Group


To rename a client group, please do the following:

1. On **Thin Clients** tab, click **Thin Clients** in Navigation area.
2. In the Client Group list, click to select the desired client group, and then click **Rename** on the top of the Client Group list.
3. The Rename window appears prompting your for the new name of the selected client group.
4. Type in the new name for the group, and then click **OK** to confirm.

Delete a Client Group

To delete a client group, please do the following:

1. On **Thin Clients** tab, click **Thin Clients** in Navigation area.
2. In the Client Group list, click to select the desired client group, and then click **Delete** on the top of the Client Group list.
3. The Delete window appears prompting for confirmation.

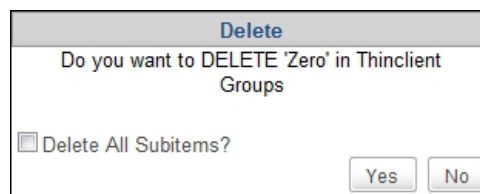

- To keep all clients in this group, leave **Delete All Subitems** unchecked, and then click **Yes** to confirm. All clients in this group will be moved to **Ungrouped** (the system default).
- To delete all clients in this group as well, click to check **Delete All Subitems**, and then click **Yes** to confirm. All clients in this group will be removed from your ViewSonic Device Manger.



NOTE


- Removing a client from your ViewSonic Device Manager will release the client from the management of ViewSonic Device Manager.

4. The client group is deleted.

3.4.5 Moving Clients to Another Group

To move a client to another group, please do the following:


1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click the client group to which the desired client belongs.
2. Click to select the desired client, and then click **Command** on the top of the Client list to open the Command menu.

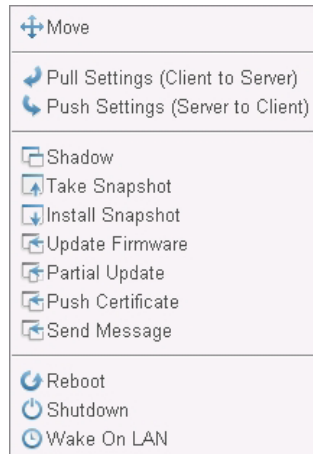

NOTE

- To select more than one client, Ctrl-click or use **Select All** to select multiple clients.

3. Click **Move** to open the Move window.

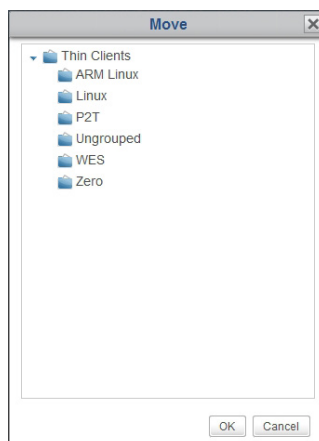

4. Click to select the desired group, and then click **OK** to confirm.

3.4.6 Deleting Clients from a Group

To delete a client from a group, please do the following:

1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click the client group to which the desired client belongs.
2. Click to select the desired client, and then click **Delete** on the top of the Client list.



NOTE

- To select more than one client, Ctrl-click or use **Select All** to select multiple clients.

3. A message appears prompting for confirmation.
4. Click **OK** to confirm.




NOTE

- Removing a client from your ViewSonic Device Manager will release the client from the management of ViewSonic Device Manager.

3.4.7 Understanding Client Status Icons

In the client list of a client group or a filter, a client status icon is placed in front of each client to indicate the current state of the client.

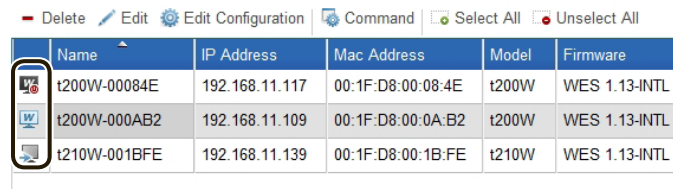







Name	IP Address	Mac Address	Model	Firmware
t200W-00084E	192.168.11.117	00:1F:D8:00:08:4E	t200W	WES 1.13-INTL
t200W-000AB2	192.168.11.109	00:1F:D8:00:0A:B2	t200W	WES 1.13-INTL
t210W-001BFE	192.168.11.139	00:1F:D8:00:1B:FE	t210W	WES 1.13-INTL



NOTE

- With filters, you can access and manage a specific set of clients quickly on ViewSonic Device Manager. For more information on filters, please refer to section “3.4.30 Digging Out Clients with Filters” on page 94.


The status icon changes according to different states of a client. Six types of icons are available:

Understanding Client Status Icons		
State	Icon	Description
Online		Indicates that the client is turned on at the moment.
Offline		Indicates that the client is turned off at the moment.
Reboot needed		Indicates that you need to reboot the client for a configuration change to take effect.
Modified		Indicates that a client configuration change has been made on ViewSonic Device Manager and you need to push the change to the client.
Pushed		Indicates that ViewSonic Device Manager has pushed a configuration change to the client.
Unknown		Indicates that the managed client is now added and managed by another instance of ViewSonic Device Manager.



NOTE

- The icon made up of a little display with a letter *L*, *W*, or *Z* on its screen indicates that the client is a Linux-based, WES-based (Windows Embedded Standard) thin client.
- A tooltip pops up as shown below if you hover your mouse pointer over an icon.

 

3.4.8 Client Settings

The desktop virtualization solution is available in various forms: user state virtualization, application virtualization, session based virtualization, virtual machine based virtualization, or even a hybrid approach. ViewSonic all-in-one, mobile, t-series zero / thin clients can meet a wide range of forms and needs. However, To get your client device ready for use in your IT infrastructure, you might need to customize client settings to meet the specific needs in your desktop virtualization plan.

Additionally, for thin client devices of different divisions, departments, or areas, you might want to offer different computing resources and access privileges. To meet the specific types of policies on computing resources and access privileges, you might need to customize client settings as well.



NOTE

- The available *tabs* and *setting items* may vary, depending on: the *client model*, *firmware version*, and the used *operating system*. For more details, please see chapter 4 “Configuring Client Settings” on page 113.

Remote and Local Management of Client Settings

You can configure your client settings locally or remotely. With ViewSonic Device Manager, you can configure client settings remotely through your local network. With ViewSonic Client Setup, client settings can be configured locally on a specific client.



NOTE

- The ViewSonic Client Setup console is a built-in tool for almost all ViewSonic client products. This tool allows you to configure client settings locally on clients.

Some client settings are only available locally on clients. You can configure those settings locally through the ViewSonic Client Setup console. For a detailed list of client settings that are only locally available, please refer to section “4.2 Client Settings at a Glance” on page 115.


Group Configuration and Individual Configuration

ViewSonic Device Manager enables you to apply a group configuration (profile), an individual configuration, or a hybrid of both to a client to set up its operating environment. With ViewSonic Client Setup, you can also make a desired individual configuration for a client.



NOTE

- A group configuration (profile) is a set of client settings shared by a set of clients.
- An individual configuration is a set of client settings applied only to a single client.
- A hybrid configuration is a mix of both group and individual configuration.

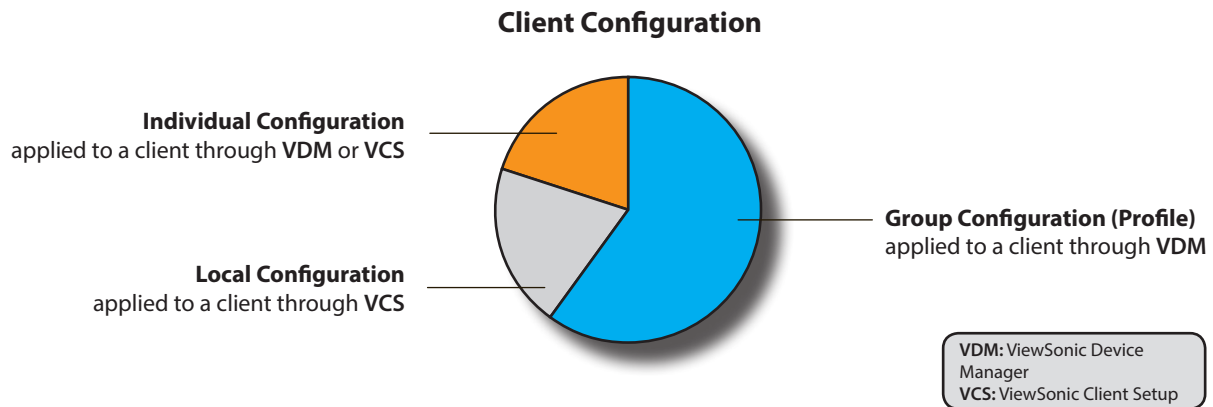

Method	Configuration Type	Console	Section	Page
Local	Local configuration	ViewSonic Client Setup (VCS)	4.2 4.5	115 124
	Individual configuration	ViewSonic Client Setup (VCS)	4.2 4.5	115 124
Remote	Group configuration	ViewSonic Device Manager (VDM)	3.4.11	58
	Individual configuration	ViewSonic Device Manager (VDM)	3.4.13	64

Please refer to related sections as shown above for detailed instructions on client configuration.

Locking the Setting Values

ViewSonic Device Manager also allows you to lock a setting value. When a setting value is locked, the gray lock icon of the setting value will become the secured blue (🔒) or orange (🔒) lock icon. You are not allowed to lock a setting value with ViewSonic Client Setup when you manage client settings locally on a client.

In ViewSonic Device Manager, a blue lock (🔒) icon indicates that the current value of the corresponding setting item comes from a group configuration; an orange lock (🔒) icon then indicates that the value or data comes from an individual configuration.

3.4.9 Creating Setting Profile Groups

A setting profile (group configuration) is a set of client settings shared by a set of clients. Through a setting profile (group configuration), you can configure client settings in groups.

A setting profile group is a set of profiles grouped together for ease of management.




NOTE

- To create a setting profile, first you need to select or create the profile group to which the new profile belongs. You can use the system default (**Ungrouped**), and then change the group of the profile at a later time if necessary.

To create a setting profile group, please do the following:


1. On **Thin Clients** tab, click **Profiles**.
2. The Profile Group list appears.

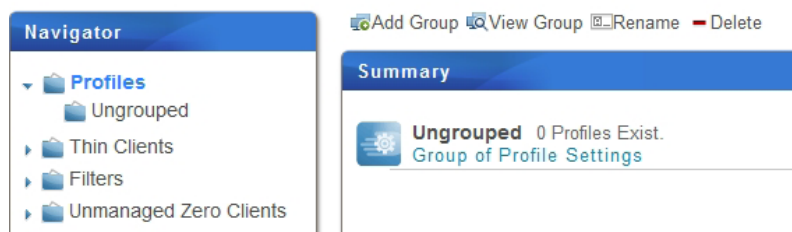


NOTE

- Ungrouped** is the system default group.

3. Click **Add Group** on the top of the Profile Group list.
4. The Add Profile Group window appears prompting for the name of the profile group.
5. Type in the desired name for the profile group, and then click **OK** to confirm.

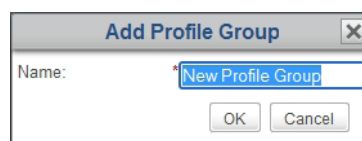

6. The newly created profile group appears in the Profile Group list now.

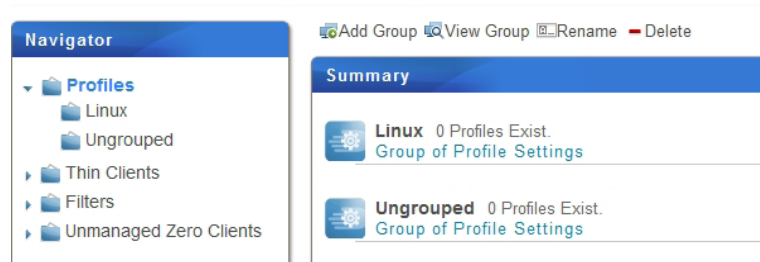


3.4.10 Managing Setting Profile Groups

Renaming a Setting Profile Group

To rename a setting profile group, please do the following:

1. On **Thin Clients** tab, click **Profiles**.
2. In the Profile Group list, click to select the desired profile group, and then click **Rename** on the top of the list.
3. The Rename window appears prompting for the new name.

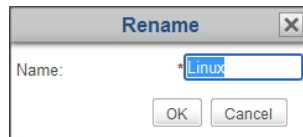


4. Type in the new name for the profile group, and then click **OK** to confirm.

Deleting a Setting Profile Group

To delete a setting profile group, please do the following:

1. On **Thin Clients** tab, click **Profiles**.
2. In the Profile Group list, click to select the desired profile group, and then click **Delete** on the top of the list.
3. The Delete window appears prompting for confirmation.

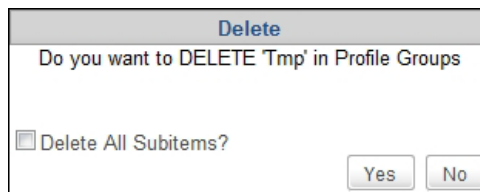

- To keep all setting profiles in this group, leave **Delete All Subitems** unchecked, and then click **Yes** to confirm. All setting profiles in this group will be moved to **Ungrouped** (the system default).
- To delete all setting profiles in this group as well, click to check **Delete All Subitems**, and then click **Yes** to confirm. All setting profiles in this group will be removed.



NOTE

- A setting profile is a set of client settings shared by a set of clients. Deleting a setting profile will change client settings of the corresponding clients.

3.4.11 Creating Client Setting Profiles

A setting profile (group configuration) is a set of client settings shared by a group of clients. Through a setting profile, you can remotely configure client settings in groups.



NOTE

- To have a basic understanding of client configuration, please refer to section “3.4.8 Client Settings” on page 54.

A simple picture of how to create a well-defined setting profile can be given by two steps:

Step 1: Create a set of shared client settings (group configuration)

Step 2: Specify the applicable scope of the setting profile

STEP 1: Create a set of shared client settings

To create a client setting profile (group configuration), please do the following:

1. On **Thin Clients** tab, click **Profiles** to expand the Profile Group tree, and then click to select the profile group.



NOTE

- You need to select the profile group to which the new profile belongs first. You can use the system default (**Ungrouped**), and change the group at a later time if necessary. For detailed instructions on how to create a profile group, please refer to section “3.4.9 Creating Setting Profile Groups” on page 56.

2. Click **Add** on the top of the Profile list.

Name	Platform	Model	Description	Num. of TCs	

3. The Add window appears prompting for the name, description, applicable platform, and models.

Add

Name:

Description:

Platform:

ARM Linux

Model:

t60/t62/t63/a100T

Save


Cancel



NOTE

- A field marked with an asterisk is the required field.

4. Type in the desired name, description, choose the applicable platform and models, and then click **Save** to confirm.
5. The Edit Configuration window for the profile (group configuration) appears.

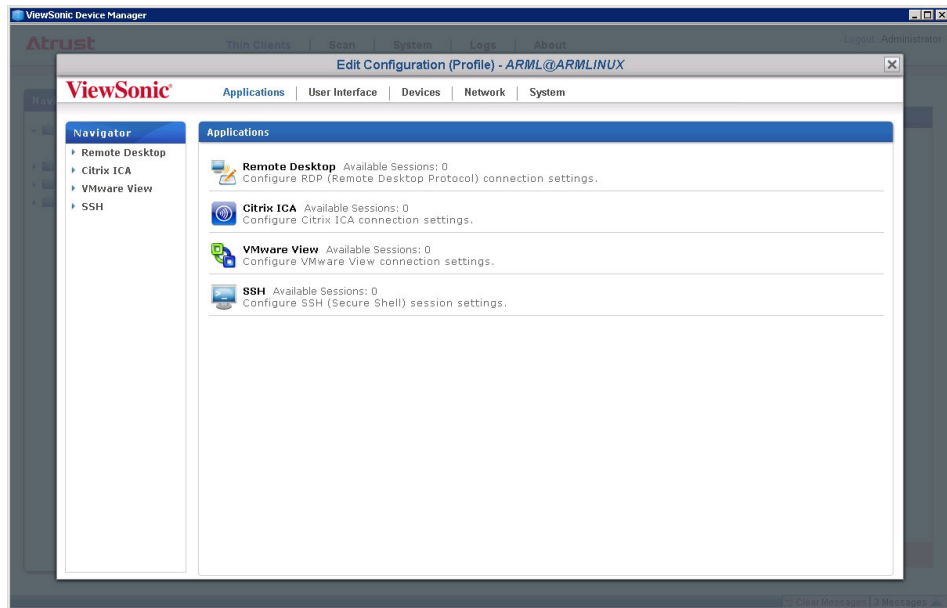

6. Use this window to edit client settings of this profile.



NOTE

- The Edit Configuration window for the profile (group configuration) is just like a remote version of ViewSonic Client Setup on a client. You can simply edit client settings for this setting profile through this window. For detailed instructions on how to configure client settings, please refer to "Configuring Client Settings" on page 113.


7. After completion, close the window.
8. The newly created setting profile is added to the Profile list.

STEP 2: Specify the applicable scope of the setting profile

To specify the applicable scope of the setting profile, please do the following:

1. Click to select the newly created profile, and then click **Edit** on the top of the Profile list to specify the applicable scope of the profile.
2. Both the Profile Information and Available Clients panes appear in Management area.




3. Click  at the right top of the Available Clients pane.

Using ViewSonic Device Manager

Managing All Your Clients

4. The Select Clients window appears. A tree view of client groups and individual clients is provided in this window for specifying the applicable scope of this setting profile.
5. Click on arrows to expand the tree and click to select the desired client group or individual clients.
 - To select all clients under a client group, click to select the group.
 - To select multiple clients under a client group, Ctrl-click to select the desired clients.

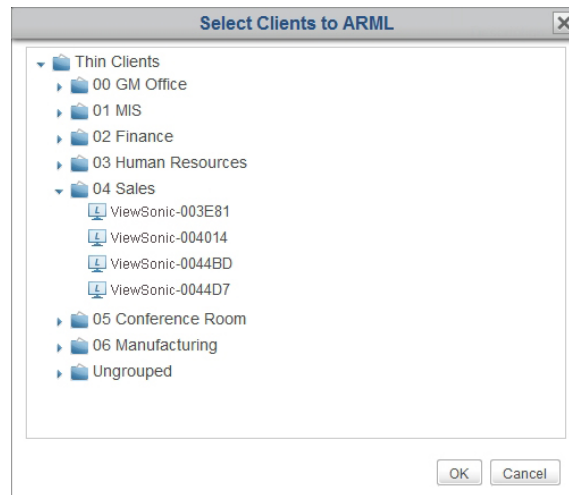

NOTE

- The tree view of client groups and individual clients corresponds exactly to client groups and individual clients established under **Thin Clients** tab. For information on how to create client groups and add clients to a group, please refer to “3.4.3 Creating Client Groups” on page 49 and “3.3.3 Client Detection and Management” on page 40 separately.
- A client can only be associated with a setting profile. If you associate a client with a new setting profile, it will be automatically removed from the old one.
- Associating a client with a profile does not actually change the settings of the client. You need to push settings to the client for the change to take effect (a reboot may be required as well). For instructions on how to push settings to a client, please refer to section “3.4.15 Pushing Settings to Clients through Your Local Network” on page 67.

6. After completion, click **OK** to confirm the selection of applicable clients.
7. Click **Save** in the Profile Information pane to complete the specification of applicable scope.



NOTE

- Only a well defined setting profile is actually used for remote configuration of multiple clients. If the applicable scope of a setting profile is not specified, the profile (group configuration) doesn't affect any client.
- From now on, we will call a client configuration set up by applying a shared setting profile a **group configuration**.

3.4.12 Managing Client Setting Profiles

Adjusting a Setting Profile

To edit a setting profile (group configuration), please do the following:

1. On **Thin Clients** tab, click **Profiles** to expand the Profile Group tree, and then click the profile group to which the desired setting profile belongs.
2. The Profile list appears in Management area.

Add Delete Edit Edit Configuration Move Copy				
Name	Platform	Model	Description	Num. of TCs
A-t60	ARMLINUX	t60/t62/t63	Policy A wt. t60	0
B-t60	ARMLINUX	t60/t62/t63	Policy B wt. t60	0
C-t60	ARMLINUX	t60/t62/t63	Policy C wt. t60	1
D-t60	ARMLINUX	t60/t62/t63	Policy D wt. t60	0

3. Click to select the desired setting profile.
4. Select **Edit Configuration** to adjust client settings for the selected profile or select **Edit** to adjust the profile information and/or the applicable scope of the selected profile.
 - To adjust client settings, change desired settings directly in the opened Edit Configuration window.
 - To adjust profile information, make changes in the Profile Information pane, and then click Save to apply.



NOTE

- For detailed instructions on the adjustment of client settings or profile information, please refer to section "3.4.11 Creating Client Setting Profiles" on page 58.

- To adjust the applicable scope of this profile, use to make desired changes, and then click **Save** to apply.

Button	Description
	Click to select all clients in the client list.
	Click to unselect all clients in the client list.
	Click to add new clients.
	Click to remove the selected clients.


Copying a Setting Profile

To copy a setting profile (group configuration), please do the following:

1. On **Thin Clients** tab, click **Profiles** to expand the Profile Group tree, and then click the profile group to which the desired setting profile belongs.
2. The Profile list appears in Management area.
3. Click to select the desired setting profile, and then click **Copy**.
4. The Copy window appears prompting for the name, description, and profile group.

Using ViewSonic Device Manager

Managing All Your Clients

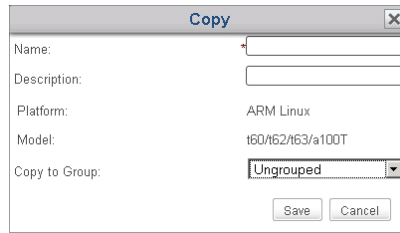

NOTE

- A field marked with an asterisk is the required field.

5. Provide the required data, and then click **Save** to confirm.
6. The Edit Configuration window for the profile (group configuration) appears.



NOTE


- The following steps are similar to those for creating a new setting profile. More information, including both screenshots and notes, can be found in section “3.4.11 Creating Client Setting Profiles” on page 58.

7. Use this window to edit client settings of this profile.
8. After completion, close the window.
9. The newly created setting profile is added to the Profile list.



NOTE


- If you create a new profile by copying a well-defined setting profile, only the part of client settings is copied. The applicable scope of the original profile is not included.

10. Click to select the newly created profile, and then click **Edit** on the top of the Profile list.
11. Both the Profile Information and Available Clients panes appear in Management area.
12. Click  at the right top of the Available Clients pane.
13. The Select Clients window appears. A tree view of client groups and individual clients is provided in the window for specifying the applicable scope of this setting profile.
14. Click on arrows to expand the tree and click to select the desired client group or clients.
 - To select all clients under a client group, click to select the client group.
 - To select multiple clients under a client group, Ctrl-click to select the desired clients.
15. After completion, click **OK** to confirm the selection of applicable clients.
16. Click **Save** in Profile Information pane to complete the specification of applicable scope.

Moving a Setting Profile

To move a setting profile (group configuration) to another profile group, please do the following:

1. On **Thin Clients** tab, click **Profiles** to expand the Profile Group tree, and then click the profile group to which the desired setting profile belongs.
2. The Profile list appears in Management area.
3. Click to select the desired setting profile, and then click **Move**.
4. The Move window appears.

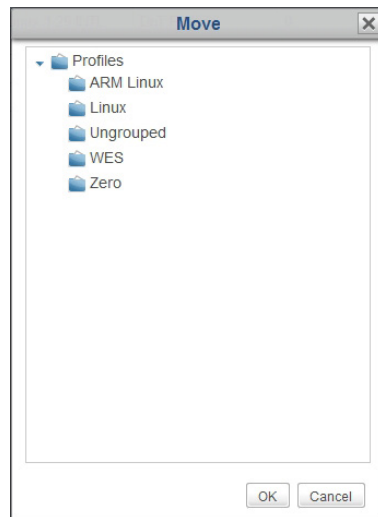


5. Click to select the desired profile group, and then click **OK** to confirm.
6. The selected setting profile is moved to the desired profile group.

Deleting a Setting Profile

To remove a setting profile (group configuration) from a profile group, please do the following:

1. On **Thin Clients** tab, click **Profiles** to expand the Profile Group tree, and then click to select the profile group.
2. The Profile list appears in Management area.
3. Click to select the desired setting profile, and then click **Delete**.
4. The Delete window appears prompting for confirmation.

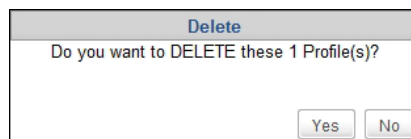

5. Click **Yes** to confirm.



NOTE

- A setting profile (group configuration) is a set of client settings shared by a set of clients. Deleting a well-defined setting profile will change client settings of the corresponding clients.

3.4.13 Using Individualized Client Settings

An individual configuration is a set of client settings applied only to a single client.




NOTE

- To have a basic understanding of client configuration, please refer to section “3.4.8 Client Settings” on page 54.
- To ensure that your ViewSonic Device Manager is in sync with the setting values on managed clients, it's recommended to **pull client settings from all managed clients** for ViewSonic Device Manager **before** editing individualized client settings. For detailed instructions on how to pull client settings from managed clients, please refer to section “3.4.16 Pulling Client Settings through Your Local Network” on page 71.

To apply an individual configuration to a client, please do the following:


1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click to select the client group to which the desired client belongs.
2. The Client list appears in Management area.
3. Click to select the desired client, and then click **Edit Configuration**.
4. The Edit Configuration window for the client appears.

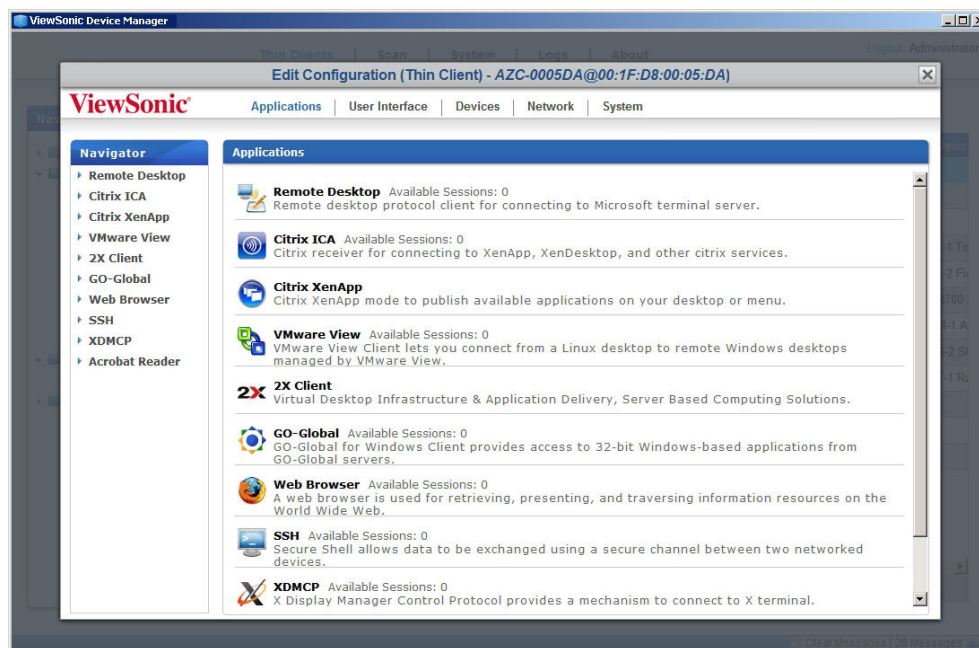

5. Use this window to edit the individual configuration.




NOTE

- The Edit Configuration window is just like a remote version of ViewSonic Client Setup. You can simply edit client settings for this client through this window.
- If the lock icon of a setting value is blue , this setting value comes from the group configuration (profile). You can only change the value by modifying/removing the group configuration (profile) or applying a new one.
- A client configuration using both group and individual configurations will be called a hybrid configuration (see section “3.4.14 Using Hybrid Client Settings” on page 65 for more details).
- For detailed instructions on how to configure specific client settings, please refer to chapter 4 “Configuring Client Settings” on page 113.

6. After completion, close the window.

7. The Apply Thin Client Configuration window appears prompting for confirmation of when to apply.

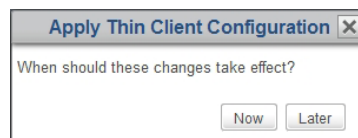

8. Click **Now** to apply the configuration immediately or click **Later** to apply at a later time.



NOTE

- If you choose to apply at a later time here, you can apply this individual configuration to the client using the **Pushing Settings** feature.

3.4.14 Using Hybrid Client Settings

A hybrid configuration is a combination of a group configuration (profile) and an individual configuration.



NOTE

- To have a basic understanding of client configuration, please refer to section “3.4.8 Client Settings” on page 54.

A simple picture of how to use a hybrid configuration can be given by two steps:

Step 1: Apply a group configuration to the selected client.

Step 2: Apply an individual configuration to the client.

STEP 1: Apply a group configuration to the selected client

To apply a group configuration to a client, please do the following:

1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click the client group to which the desired client belongs.
2. The Client list appears.
3. Click to select the desired client, and then click **Edit**.
4. The Thin Client Information pane appears in Management area.
5. Click the Profile drop-down menu to select the desired group configuration (profile), associating the selected client with this configuration, and then click **Save** to apply.



NOTE

- The other way to associate a client with a group configuration (profile) is to add the client to the applicable scope of the desired profile. For more information, refer to section “3.4.11 Creating Client Setting Profiles” on page 58.

STEP 2: Apply an individual configuration to the client

To apply an individual configuration to the client next, please do the following:



NOTE

- To ensure that your ViewSonic Device Manager is in sync with the setting values on managed clients, it's recommended to **pull client settings from all managed clients** for ViewSonic Device Manager **before** editing individualized client settings. For detailed instructions on how to pull client settings from managed clients, please refer to section “3.4.16 Pulling Client Settings through Your Local Network” on page 71.

1. Click to select the desired client again, and then click **Edit Configuration** this time.
2. Edit the individual configuration for the selected client.



NOTE

- For more details, please refer to section “3.4.13 Using Individualized Client Settings” on page 64.

3.4.15 Pushing Settings to Clients through Your Local Network

The **Push Settings** feature enables you to sync up client configuration on a client with the one set up in remote ViewSonic Device Manager. You can then configure client settings remotely through your local network.



NOTE

- Some settings can only be configured locally on clients. See section “3.4.8 Client Settings” on page 54 and chapter 4 “Configuring Client Settings” on page 113 for more details.

Pushing Settings to a Client

To push settings to a client, please do the following:



NOTE

- To ensure that your ViewSonic Device Manager is in sync with the setting values on managed clients, it's recommended to **pull client settings from all managed clients** for ViewSonic Device Manager **before** editing individualized client settings. For detailed instructions on how to pull client settings from managed clients, please refer to section “3.4.16 Pulling Client Settings through Your Local Network” on page 71.

- On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click the client group to which the desired client belongs.
- The Client list appears.

<div> Delete Edit Edit Configuration Command Select All Unselect All </div>							
	Name	IP Address	Mac Address	Model	Firmware	Profile	Description
	ViewSonic-0044D	192.168.50.195	00:1F:D8:00:44:D7	t62	ARM Linux 2.52-INTL	N/A	
	ViewSonic-0044E	192.168.50.159	00:1F:D8:00:44:BD	t62	ARM Linux 2.52-INTL	N/A	

- Click to select the desired client, and then click **Command** on the top of the Client list.




NOTE

- To select more than one client, Ctrl-click to select the desired clients.
- Ensure that all selected clients are powered up. Otherwise, you may fail to push settings to some clients. You can remotely know the current status of a client through the Status icon in front of the client. For information on the Status icons, please refer to section “3.4.7 Understanding Client Status Icons” on page 53.


Using ViewSonic Device Manager

Managing All Your Clients

4. The Command menu appears.

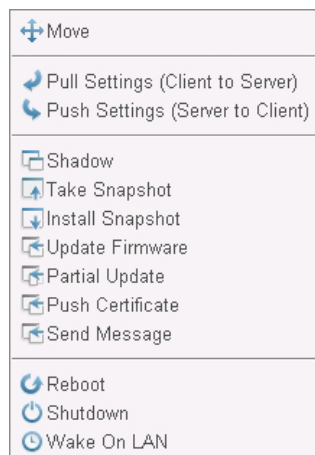

5. Click to select **Push Settings**.
6. A window appears prompting for confirmation.
7. Click **OK** to confirm.
8. The Push Settings window appears showing the progress and result of pushing settings.

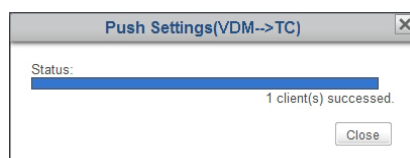

9. After completion, click **Close** to exit.
10. Check the status of the client through the Status icon in front of it. If needed, restart the client to complete the configuration changes on the client.

Pushing Settings to a Client Group


To push settings to a client group, please do the following:



NOTE

- To ensure that your ViewSonic Device Manager is in sync with the setting values on managed clients, it's recommended to **pull client settings from all managed clients** for ViewSonic Device Manager **before** editing individualized client settings. For detailed instructions on how to pull client settings from managed clients, please refer to section "3.4.16 Pulling Client Settings through Your Local Network" on page 71.

- On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree.
- Right-click on the desired client group to open a popup menu, and then click to select **Push Settings**.

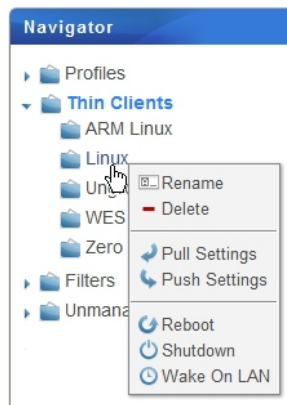

- The Pushing Settings window appears showing the progress and result of pushing settings.



NOTE

- Ensure that all clients in the group are powered up. Otherwise, you may fail to push settings to some clients. You can remotely know the current status of a client through the Status icon in front of the client. For information on the Status icons, please refer to section "3.4.7 Understanding Client Status Icons" on page 53.

- After completion, click **Close** to exit.
- Check the status of clients in the group through the Status icon in front of clients. If needed, restart clients to complete the configuration changes on clients.

Pushing Settings to All Client Groups


To push settings to all client groups, please do the following:



NOTE

- To ensure that your ViewSonic Device Manager is in sync with the setting values on managed clients, it's recommended to **pull client settings from all managed clients** for ViewSonic Device Manager **before** editing individualized client settings. For detailed instructions on how to pull client settings from managed clients, please refer to section "3.4.16 Pulling Client Settings through Your Local Network" on page 71.

1. On **Thin Clients** tab, right-click on **Thin Clients** in Navigation area to open a popup menu.

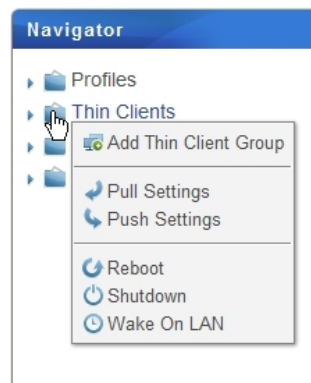

2. Click to select **Push Settings**.
3. The Push Settings window appears showing the progress and result of pushing settings.



NOTE

- Ensure that all clients are powered up. Otherwise, you may fail to push settings to some clients. You can remotely know the current status of a client through the Status icon in front of the client. For information on the Status icons, please refer to section "3.4.7 Understanding Client Status Icons" on page 53.

4. After completion, click **Close** to exit.
5. Check the status of clients through the Status icon in front of clients. If needed, restart clients to complete the configuration changes on clients.

3.4.16 Pulling Client Settings through Your Local Network

The **Pull Settings** feature enables you to retrieve settings from a client and store in ViewSonic Device Manager, which help you sync up the client configuration in ViewSonic Device Manager with the one set up locally on a client.



NOTE

- Some settings can only be configured locally on clients. These settings cannot be retrieved from clients and stored in ViewSonic Device Manager. See section "3.4.8 Client Settings" on page 54 and chapter 4 "Configuring Client Settings" on page 113 for more details.

Pull Settings from a Client

To pull setting from a client, please do the following:

- On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and click to select the client group to which the desired client belongs.
- The Client list appears.

<div> Delete Edit Edit Configuration Command Select All Unselect All </div>							
	Name	IP Address	Mac Address	Model	Firmware	Profile	Description
	ViewSonic-0044C	192.168.50.195	00:1F:D8:00:44:D7	t62	ARM Linux 2.52-INTL	N/A	
	ViewSonic-0044E	192.168.50.159	00:1F:D8:00:44:BD	t62	ARM Linux 2.52-INTL	N/A	


- Click to select the desired client, and then click **Command** on the top of the Client list.



NOTE

- To select more than one client, Ctrl-click to select the desired clients.
- Ensure that all selected clients are powered up. Otherwise, you may fail to pull settings from some clients. You can remotely know the current status of a client through the Status icon in front of the client. For information on the Status icons, please refer to section "3.4.7 Understanding Client Status Icons" on page 53.

- The Command menu appears.

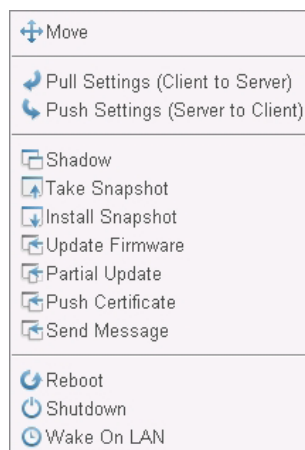


- Click to select **Pull Settings**.
- A window appears prompting for confirmation.

Using ViewSonic Device Manager

Managing All Your Clients

- Click **OK** to confirm.
- The Pull Settings window appears showing the progress and result of retrieving settings.

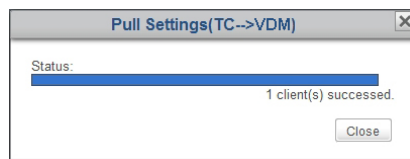


- After completion, click **Close** to exit.

Pull Settings for a Client Group

To pull settings for a client group, please do the following:

- On **Thin Clients** tab, click **Thin Clients** to expand the Client Group list.
- Right-click on the desired client group to open a popup menu, and then click to select **Pull Settings**.

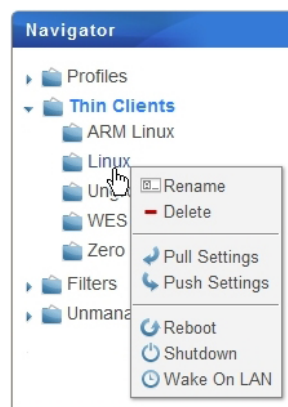

- The Pull Settings window appears showing the progress and result of retrieving settings.



NOTE


- Ensure that clients in the selected group are all powered up. Otherwise you may fail to pull settings from some clients. You can remotely know the current status of a client through the Status icon in front of the client. For information on the Status icons, please refer to section "3.4.7 Understanding Client Status Icons" on page 53.

- After completion, click **Close** to exit.

Pull Settings for all Client Group

To pull settings from all client groups, please do the following:

1. On **Thin Clients** tab, right-click on **Thin Clients** in Navigation area to open a popup menu.

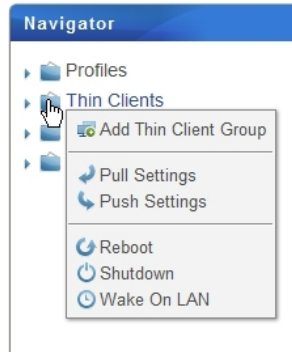

2. Click to select **Pull Settings**.
3. The Pull Settings window appears showing the progress and result of retrieving settings.



NOTE


- Ensure that all clients are powered up. Otherwise, you may fail to pull settings from some clients. You can remotely know the current status of a client through the Status icon in front of the client. For information on the Status icons, please refer to section "3.4.7 Understanding Client Status Icons" on page 53.

4. After completion, click **Close** to exit.

3.4.17 Pushing Certificates of Remote Computers to Clients


To push certificates of remote computers to a thin client, please do the following:

1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click the client group to which the desired client belongs.
2. The Client list appears.

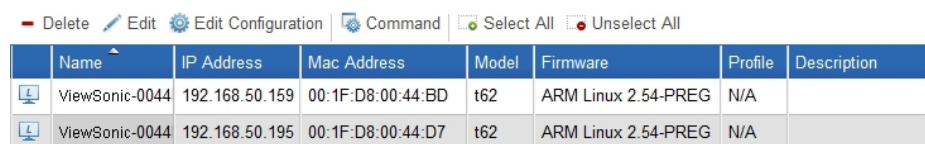


	Name	IP Address	Mac Address	Model	Firmware	Profile	Description
	ViewSonic-0044	192.168.50.159	00:1F:D8:00:44:BD	t62	ARM Linux 2.54-PREG	N/A	
	ViewSonic-0044	192.168.50.195	00:1F:D8:00:44:D7	t62	ARM Linux 2.54-PREG	N/A	

3. Click to select the desired client, and then click **Command** on the top of the Client list.
4. The Command menu appears.

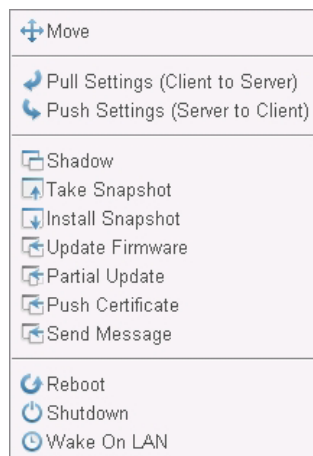

5. Click to select **Push Certificate**.
6. A window appears prompting for confirmation.
7. Click **OK** to confirm.
8. The Push Certificates window appears showing the progress and result of pushing certificates.

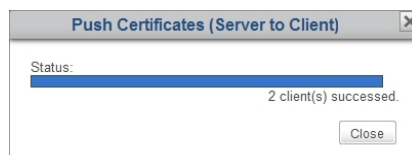

9. After completion, click **Close** to exit.


3.4.18 Sending Messages to Clients

To send a message to the managed client(s), please do the following:

1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click the client group to which the desired client belongs.
2. The Client list appears.

Delete Edit Edit Configuration Command Select All Unselect All Export								
	Name	IP Address	Mac Address	Model	Firmware	Profile	Description	Asset ID
	ViewSonic-0038C8	192.168.0.117	00:1F:D8:00:38:C8	t170W7E	WES7 1.57-INTL	N/A		
	ViewSonic-003EC4	192.168.0.101	00:1F:D8:00:3E:C4	t60	ARM Linux 2.62-PREI	N/A		
	ViewSonic-00CDD9	192.168.0.109	00:1F:D8:00:CD:D9	t220W	WE8S 0.18-INTL	N/A		

3. Click to select the desired client(s), and then click **Command** on the top of the Client list.
4. The Command menu appears.

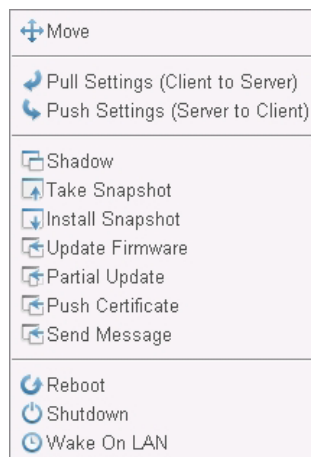

5. Click to select **Send Message**.
6. A window appears prompting you to type in the countdown second(s) and message.

Send Message

Countdown Second(s):

10

Message Context:

OK


Cancel

7. Type in the data, and then click **OK** to confirm.
8. The message will be sent to the desired client(s).

3.4.19 Editing or Viewing the Basic Information about a Client

To edit or view the basic information about a client, please do the following:


1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click the client group to which the desired client belongs.
2. The Client list appears.

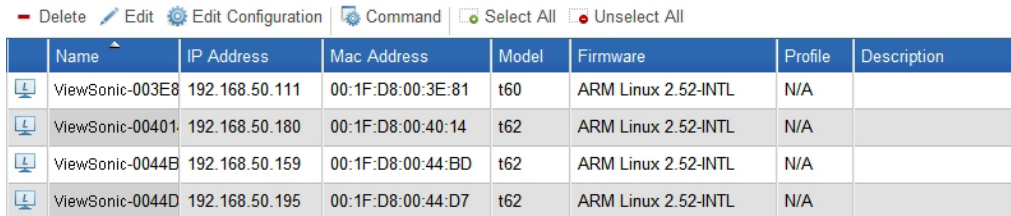

The screenshot shows a table with columns: Name, IP Address, Mac Address, Model, Firmware, Profile, and Description. There are four rows of client data. Above the table are buttons: Delete, Edit, Edit Configuration, Command, Select All, and Unselect All.

	Name	IP Address	Mac Address	Model	Firmware	Profile	Description
	ViewSonic-003E8	192.168.50.111	00:1F:D8:00:3E:81	t60	ARM Linux 2.52-INTL	N/A	
	ViewSonic-00401	192.168.50.180	00:1F:D8:00:40:14	t62	ARM Linux 2.52-INTL	N/A	
	ViewSonic-0044B	192.168.50.159	00:1F:D8:00:44:BD	t62	ARM Linux 2.52-INTL	N/A	
	ViewSonic-0044D	192.168.50.195	00:1F:D8:00:44:D7	t62	ARM Linux 2.52-INTL	N/A	

3. Click to select the desired client, and then click **Edit** on the top of the Client list.
4. The Thin Client Information pane appears.

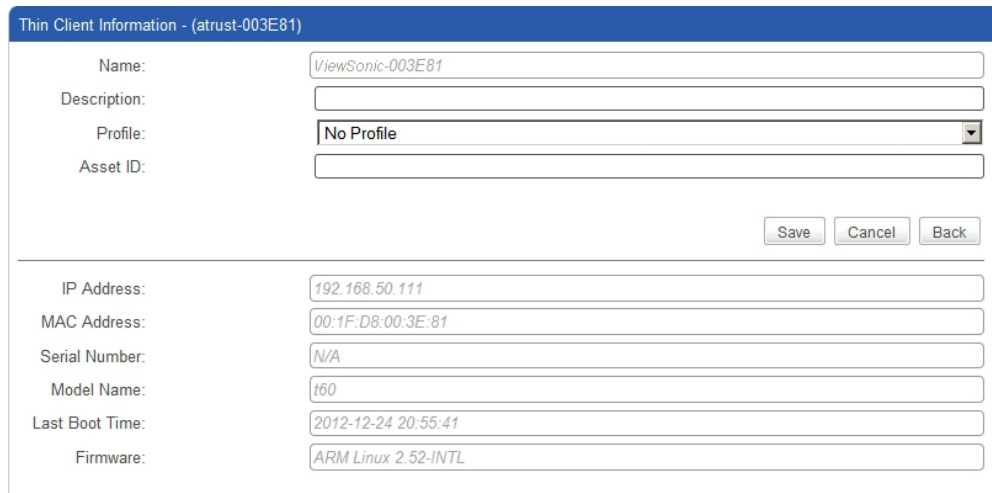

The screenshot shows the 'Thin Client Information - (atrust-003E81)' pane. It contains fields for Name, Description, Profile (a dropdown menu), and Asset ID. Below these are buttons for Save, Cancel, and Back. A horizontal line separates the top section from a bottom section containing fields for IP Address, MAC Address, Serial Number, Model Name, Last Boot Time, and Firmware.

Thin Client Information - (atrust-003E81)	
Name:	ViewSonic-003E81
Description:	
Profile:	No Profile
Asset ID:	
<div>Save Cancel Back</div>	
<hr/>	
IP Address:	192.168.50.111
MAC Address:	00:1F:D8:00:3E:81
Serial Number:	N/A
Model Name:	t60
Last Boot Time:	2012-12-24 20:55:41
Firmware:	ARM Linux 2.52-INTL

5. Adjust the data of the client or view the basic information about the client.
 - To adjust the name, comment, profile (group configuration), Asset ID for the client, or type in the new data, and then click **Save** to apply.



NOTE

- When selecting a profile (group configuration) from the drop-down menu, you add the client into the applicable scope of the selected profile.

- After viewing the basic information, click **Back** to return to the Client list.

3.4.20 Rebooting Clients through Your Local Network

The **Reboot** feature enables you to restart multiple clients through your local network without one by one going through the restart procedure. Most of the time, adjusting client settings and updating client firmware require a restart for those changes to take effect. With this feature, you are equipped with a necessary element for remote and centralized management of a large number of endpoint devices.


Rebooting a Client through Your Local Network

To restart a client through your local network, please do the following:

1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click to select the client group to which the desired client belongs.
2. The Client list appears.

Delete Edit Edit Configuration Command Select All Unselect All							
	Name	IP Address	Mac Address	Model	Firmware	Profile	Description
	ViewSonic-003E8	192.168.50.111	00:1F:D8:00:3E:81	t60	ARM Linux 2.52-INTL	N/A	
	ViewSonic-00401	192.168.50.180	00:1F:D8:00:40:14	t62	ARM Linux 2.52-INTL	N/A	
	ViewSonic-0044B	192.168.50.159	00:1F:D8:00:44:BD	t62	ARM Linux 2.52-INTL	N/A	

3. Click to select the desired client, and then click **Command** to open the Command menu.

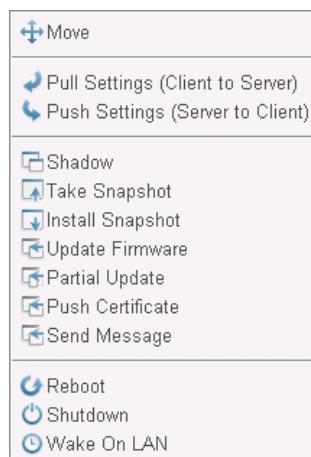

4. Click to select **Reboot**.



NOTE

- To select more than one client, Ctrl-click to select the desired clients.



WARNING

- Ensure that no important tasks are performed on the selected clients.

5. On the selected client, a warning message appears to notify the user of the planned reboot and allow the user to cancel the action if necessary.
6. After completion, the Status icon will indicate the client is on-line again.

Using ViewSonic Device Manager

Managing All Your Clients

Delete




Edit

Edit Configuration

Command

Select All

Unselect All

	Name	IP Address	Mac Address	Model	Firmware	Profile	Description
	ViewSonic-003E8	192.168.50.111	00:1F:D8:00:3E:81	t60	ARM Linux 2.52-INTL	N/A	
	ViewSonic-00401	192.168.50.180	00:1F:D8:00:40:14	t62	ARM Linux 2.52-INTL	N/A	
	ViewSonic-0044B	192.168.50.159	00:1F:D8:00:44:BD	t62	ARM Linux 2.52-INTL	N/A	




NOTE

- For information on the meanings of the Status icons, please refer to “3.4.7 Understanding Client Status Icons” on page 53.

Rebooting a Client Group through Your Local Network

To restart a client group through your local network, please do the following:

- On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree.
- Right-click on the desired client group to open a popup menu.

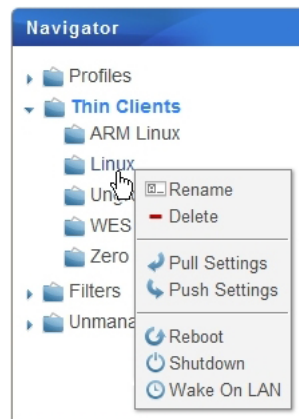

- Click to select **Reboot**.



WARNING

- Ensure that no important tasks are performed on clients in the selected group.

- On each client of this group, a warning message appears to notify the user of the planned reboot and allow the user to cancel the action if necessary.
- After completion, the Status icons will indicate clients of this group are on-line again.




NOTE

- For information on the meanings of the Status icons, please refer to “3.4.7 Understanding Client Status Icons” on page 53.

Rebooting All Client Groups through Your Local Network

To restart all client groups through your local network, please do the following:

1. On **Thin Clients** tab, right-click to open a popup menu.

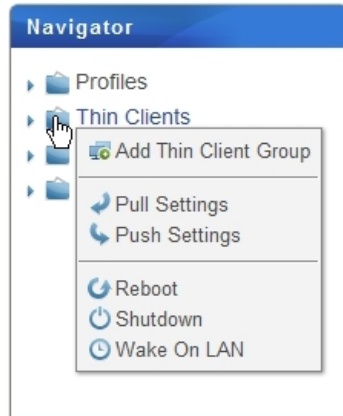

2. Click to select **Reboot**.



WARNING

- Ensure that no important tasks are performed on clients.

3. On all managed clients, a warning message appears to notify the user of the planned reboot and allow the user to cancel the action if necessary.
4. After completion, the Status icons will indicate all managed clients are on-line again.



NOTE









- For information on the meanings of the Status icons, please refer to "3.4.7 Understanding Client Status Icons" on page 53.

3.4.21 Shutting Down Clients through Your Local Network


Shutting Down a Client through Your Local Network

To shut down a client through your local network, please do the following:

1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click to select the client group to which the desired client belongs.
2. The Client list appears.

							
	Name	IP Address	Mac Address	Model	Firmware	Profile	Description
	ViewSonic-0044D	192.168.50.195	00:1F:D8:00:44:D7	t62	ARM Linux 2.52-INTL	N/A	
	ViewSonic-0044B	192.168.50.159	00:1F:D8:00:44:BD	t62	ARM Linux 2.52-INTL	N/A	

3. Click to select the desired client, and then click **Command** to open the Command menu.

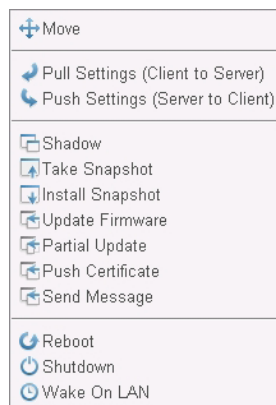

4. Click to select **Shutdown**.



NOTE









- To select more than one client, Ctrl-click to select the desired clients.



WARNING

- Ensure that no important tasks are performed on the selected clients.

5. On the selected client, a warning message appears to notify the user of the planned shutdown and allow the user to cancel the action if necessary.
6. After completion, the Status icon will indicate the client is off-line.

							
	Name	IP Address	Mac Address	Model	Firmware	Profile	Description
	ViewSonic-0044	192.168.50.195	00:1F:D8:00:44:D7	t62	ARM Linux 2.52-INTL	N/A	
	ViewSonic-0044	192.168.50.159	00:1F:D8:00:44:BD	t62	ARM Linux 2.52-INTL	N/A	




NOTE

- For information on the meanings of the Status icons, please refer to “3.4.7 Understanding Client Status Icons” on page 53.

Shutting Down a Client Group through Your Local Network

To shut down a client group through your local network, please do the following:

1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree.
2. Right-click on the desired client group to open a popup menu.

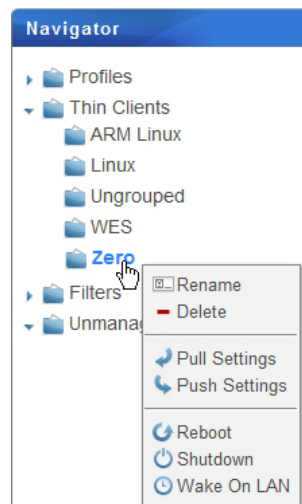


3. Click to select **Shutdown**.



WARNING

- Ensure that no important tasks are performed on clients in the selected group.

4. The Shutdown window appears prompting for confirmation.

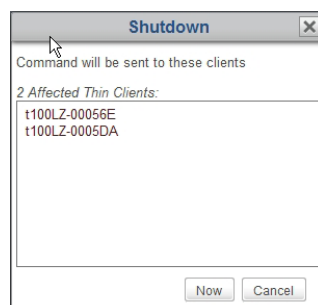

5. Click **Now** to confirm.
6. On each client of this group, a warning message appears to notify the user of the planned shutdown and allow the user to cancel the action if necessary.
7. After completion, the Status icons will indicate clients of this group are off-line.




NOTE

- For information on the meanings of the Status icons, please refer to “3.4.7 Understanding Client Status Icons” on page 53.

Shutting Down All Client Groups through Your Local Network

To shut down all client groups through your local network, please do the following:

1. On **Thin Clients** tab, right-click to open a popup menu.

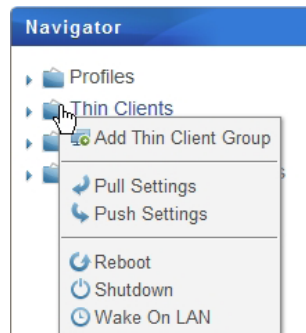


2. Click to select **Shutdown**.



WARNING

- Ensure that no important tasks are performed on clients.

3. The Shutdown window appears prompting for confirmation.

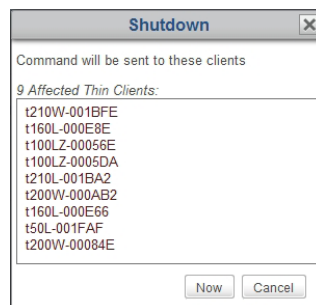

4. On all managed clients, a warning message appears to notify the user of the planned shutdown and allow the user to cancel the action if necessary.
5. After completion, the Status icons will indicate all managed clients are off-line.



NOTE

- For information on the meanings of the Status icons, please refer to “3.4.7 Understanding Client Status Icons” on page 53.

3.4.22 Waking Clients through Your Local Network



The **Wake on LAN** feature enables you to wake multiple clients through your local network if clients are connected to power outlets and the local network.

Waking a Client through Your Local Network


To wake a client through your local network, please do the following:

1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click to select the client group to which the desired client belongs.
2. The Client list appears.

— Delete ✎ Edit ⚙ Edit Configuration ⌨ Command 👤 Select All 🚫 Unselect All

	Name	IP Address	Mac Address	Model	Firmware	Profile	Description
	ViewSonic-0044	192.168.50.195	00:1F:D8:00:44:D7	t62	ARM Linux 2.52-INTL	N/A	
	ViewSonic-0044	192.168.50.159	00:1F:D8:00:44:BD	t62	ARM Linux 2.52-INTL	N/A	

3. Click to select the desired client, and then click **Command** to open the Command menu.

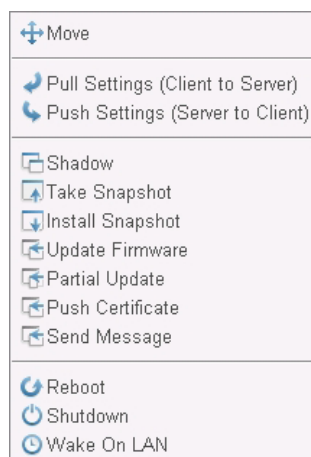



NOTE

- To select more than one client, Ctrl-click to select the desired clients.

4. Click to select **Wake On LAN**.
5. The selected client is powered up.
6. After completion, the Status icon will indicate the client is on-line.

— Delete ✎ Edit ⚙ Edit Configuration ⌨ Command 👤 Select All 🚫 Unselect All

	Name	IP Address	Mac Address	Model	Firmware	Profile	Description
	ViewSonic-0044D	192.168.50.195	00:1F:D8:00:44:D7	t62	ARM Linux 2.52-INTL	N/A	
	ViewSonic-0044B	192.168.50.159	00:1F:D8:00:44:BD	t62	ARM Linux 2.52-INTL	N/A	




NOTE

- For information on the meanings of the Status icons, please refer to “3.4.7 Understanding Client Status Icons” on page 53.


Waking a Client Group through Your Local Network

To wake a client group through your local network, please do the following:

1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree.
2. Right-click on the desired client group to open a popup menu.

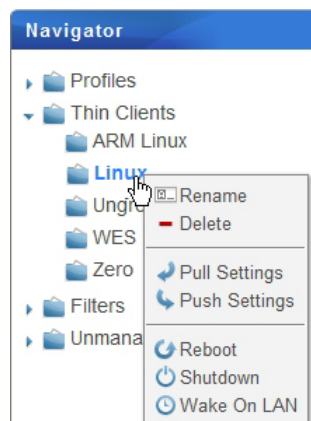

3. Click to select **Wake On LAN**.
4. The Wake On LAN window appears prompting for confirmation.

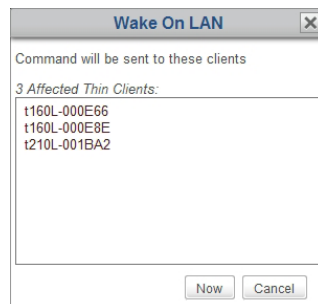

5. Click **Now** to confirm.
6. Each client in this group is powered up.
7. After completion, the Status icons will indicate clients of this group are on-line.




NOTE

- For information on the meanings of the Status icons, please refer to “3.4.7 Understanding Client Status Icons” on page 53.


Waking All Client Groups through Your Local Network

To wake all client groups through your local network, please do the following:

1. On **Thin Clients** tab, right-click to open a popup menu.

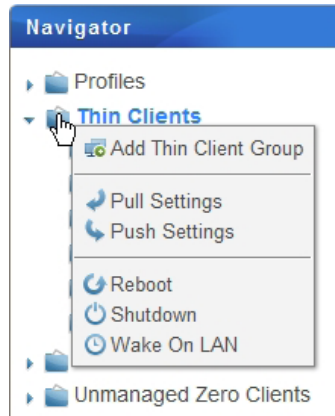

2. Click to select **Wake On LAN**.

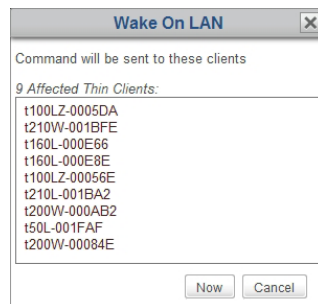

3. After completion, the Status icons will indicate all managed clients are on-line.



NOTE

- For information on the meanings of the Status icons, please refer to “3.4.7 Understanding Client Status Icons” on page 53.

3.4.23 Updating Client Firmware

To update the firmware for your client, please do the following:



NOTE

- Updating client firmware will NOT erase any client configuration.

1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click the client group to which the desired client belongs.
2. The Client list appears.

- Delete Edit Edit Configuration Command Select All Unselect All							
	Name	IP Address	Mac Address	Model	Firmware	Profile	Comment
	t160L-000E66	192.168.11.59	00:1F:D8:00:0E:66	t160L	ViewSonic Linux 1.29-INTL	t160L Pro	
	t160L-000E8E	192.168.11.63	00:1F:D8:00:0E:8E	t160L	ViewSonic Linux 1.25-INTL	t160L Light	
	t210L-001BA2	192.168.11.136	00:1F:D8:00:1B:A2	t210L	ViewSonic Linux 1.29-INTL	t210L Pro	

3. Click to select the desired client, and then click **Command** on the top of the Client list.



NOTE


- To select more than one client, Ctrl-click to select the desired clients.



WARNING


- Ensure that no important tasks are performed on the selected clients.

4. The Command menu appears.

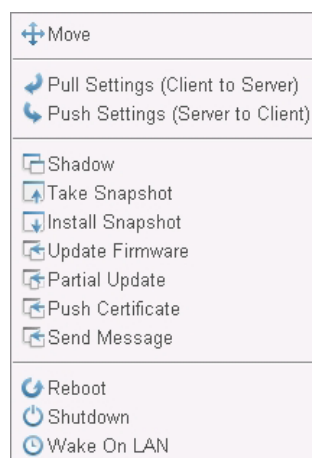

5. Click to select **Update Firmware**.

- The Update Firmware window appears prompting you to select the firmware version and system language.

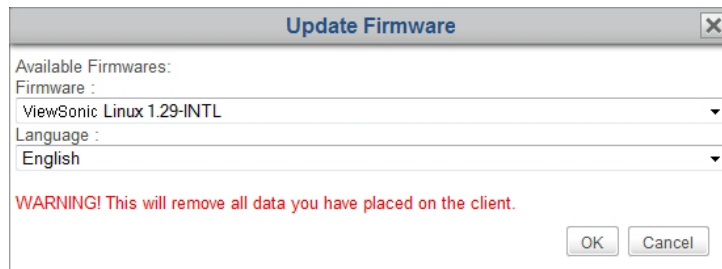

- Click drop-down menus to select the desired firmware version and system language, and then click **OK** to confirm.
- On the selected client, a warning message appears to notify the user of the planned reboot and allow the user to cancel the action if necessary.
- After completion, the client is updated with the desired firmware and system language.

3.4.24 Installing Software Packages

To install a software package for your client, please do the following:



NOTE

- Installing additional software packages is allowed only for WES-based (Windows Embedded Standard) clients.

- On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click the client group to which the desired client belongs.
- The Client list appears.

<div> Delete Edit Edit Configuration Command Select All Unselect All </div>							
	Name	IP Address	Mac Address	Model	Firmware	Profile	Comment
	t200W-00084E	192.168.11.109	00:1F:D8:00:08:4E	t200W	WES 1.13-INTL	t200W Pro	
	t200W-000AB2	192.168.11.72	00:1F:D8:00:0A:B2	t200W	WES 1.13-INTL	t200W Shadow	
	t210W-001BFE	192.168.11.139	00:1F:D8:00:1B:FE	t210W	WES 1.13-INTL	t210W Light	

- Click to select the desired client, and then click **Command** on the top of the Client list.



NOTE


- To select more than one client, Ctrl-click to select the desired clients.




WARNING

- Ensure that no important tasks are performed on the selected clients.

4. The Command menu appears.

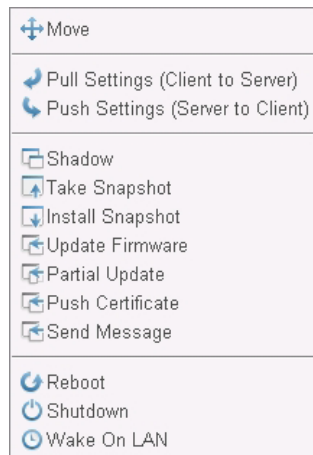

5. Click to select **Partial Update**.
6. The Partial Update window appears prompting you to select the software package.

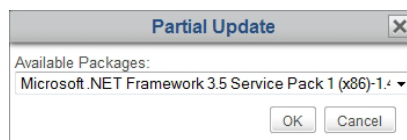

7. Click the drop-down menu to select the desired software package, and then click **OK** to confirm.
8. On the selected client, a warning message appears to notify the user of the planned reboot and allow the user to cancel the action if necessary.
9. After completion, the desired software package is installed on the selected client.



TIP

- To check remotely if the installation is completed, select the client, and then click **Edit** to view the basic information about a client. For more details, refer to section "3.4.19 Editing or Viewing the Basic Information about a Client" on page 76.

3.4.25 Taking Client Snapshots

A snapshot is the system copy of a client at a specific point of time, which you can use for mass deployment, system backup, and recovery.



NOTE

- ViewSonic SC-T35 thin clients do not support this feature.

To take a system snapshot for a client, please do the following:


1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click to select the client group to which the desired client belongs.
2. The Client list appears.
3. Click to select the desired client, and then click **Command** on the top of the Client list.




NOTE

- You can take system snapshot for only one client at a time.

4. The Command menu appears.

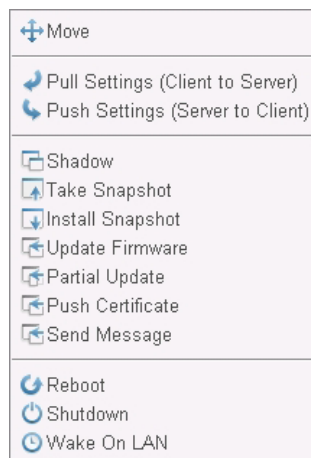

5. Click to select **Take Snapshot**.
6. The Take Snapshot window appears prompting you to provide the name of the system snapshot.

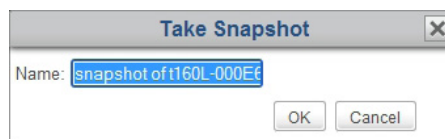


7. Type the name for the snapshot or use the default, and then click **OK** to confirm.

Using ViewSonic Device Manager

Managing All Your Clients

- On the selected client, a warning message appears to notify the user of the planned reboot and allow the user to cancel the action if necessary.
- After completion, the system snapshot is added to the Snapshot list.

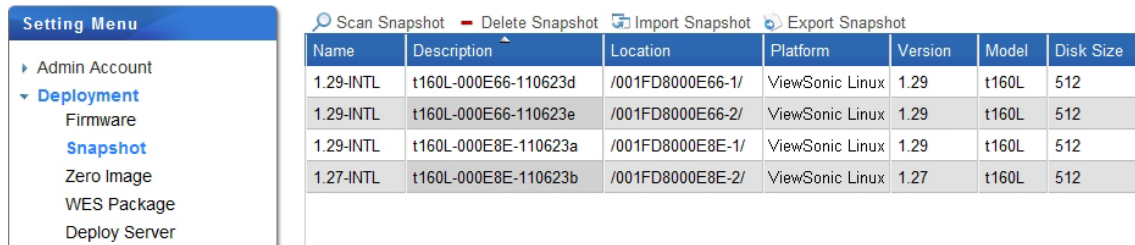

The screenshot shows the 'Setting Menu' on the left with options: Admin Account, Deployment (selected), Firmware, Snapshot, Zero Image, WES Package, and Deploy Server. The main area displays a table of snapshots with columns: Name, Description, Location, Platform, Version, Model, and Disk Size. The table contains four rows of snapshot data.

Name	Description	Location	Platform	Version	Model	Disk Size
1.29-INTL	t160L-000E66-110623d	/001FD8000E66-1/	ViewSonic Linux	1.29	t160L	512
1.29-INTL	t160L-000E66-110623e	/001FD8000E66-2/	ViewSonic Linux	1.29	t160L	512
1.29-INTL	t160L-000E8E-110623a	/001FD8000E8E-1/	ViewSonic Linux	1.29	t160L	512
1.27-INTL	t160L-000E8E-110623b	/001FD8000E8E-2/	ViewSonic Linux	1.27	t160L	512




NOTE

- To access the Snapshot list, click **System** tab, and then click **Deployment > Snapshot**.
- Refer to section “3.2.6 Managing Client Snapshots” on page 25 for instructions on how to manage your snapshots.

3.4.26 Restoring Client Snapshots

To restore a system copy of a client, please do the following:

- On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then click the client group to which the desired client belongs.
- The Client list appears.
- Click to select the desired client, and then click **Command** on the top of the Client list.
- The Command menu appears.
- Click to select **Install Snapshot**.
- The Install Snapshot window appears prompting you to select a snapshot.

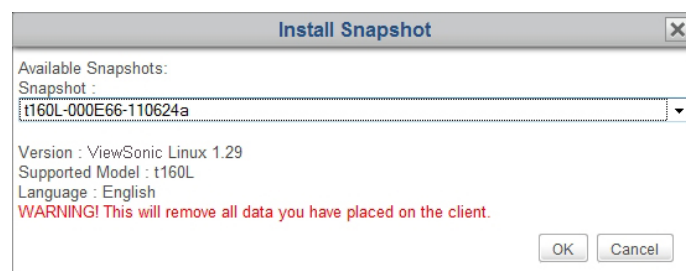

- Click the drop-down menu to select the desired snapshot, and then click **OK** to confirm.
- On the selected client, a warning message appears to notify the user of the planned reboot and allow the user to cancel the action if necessary.
- After completion, the client is restored to the desired state.

3.4.27 Assisting a Client User Remotely

The **Shadow** feature enables you to remotely assist client users in resolving problems or configuring local settings. You can remotely monitor and control a client just like a local client user.



NOTE

- Ensure that you have installed the Java software or Java Runtime Environment. It's required to execute the **Shadow** feature.

To remotely assist a client user, please do the following:

1. On **Thin Clients** tab, click **Thin Clients** to expand the Client Group tree, and then select the client group to which the desired client belongs.
2. The Client list appears.
3. Click to select the desired client, and then click **Command** on the top of the Client list.




NOTE

- It's not allowed to select multiple clients while executing the **Shadow** feature. However, you could do it one by one for multiple clients.

4. The Command menu appears.
5. Click to select **Shadow**.
6. The Java software is launched displaying an animated picture on the screen as below.




7. A warning message appears with the certificate information. Click **Yes** to continue.

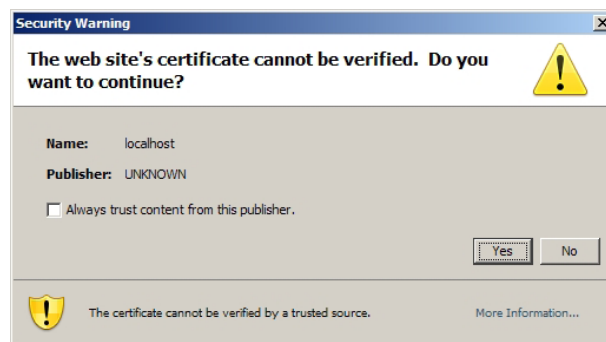


8. Another warning message appears with the information about the application digital signature. Click **Run** to continue.

Using ViewSonic Device Manager

Managing All Your Clients

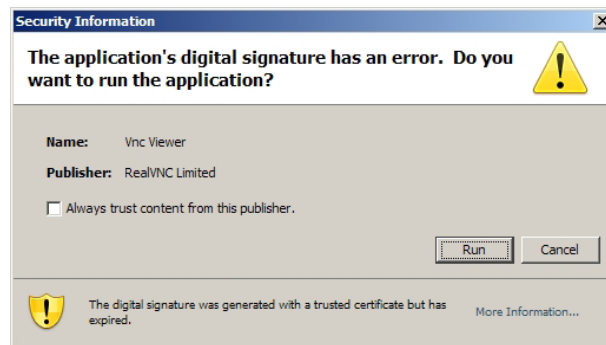


9. The VNC Authentication window may appear prompting you for the Shadow password.

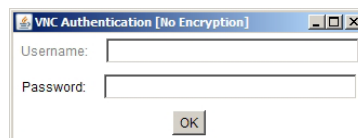

10. Type in your Shadow password, and then click **OK** to confirm.

11. A window pops up with the desktop screen of the selected client.

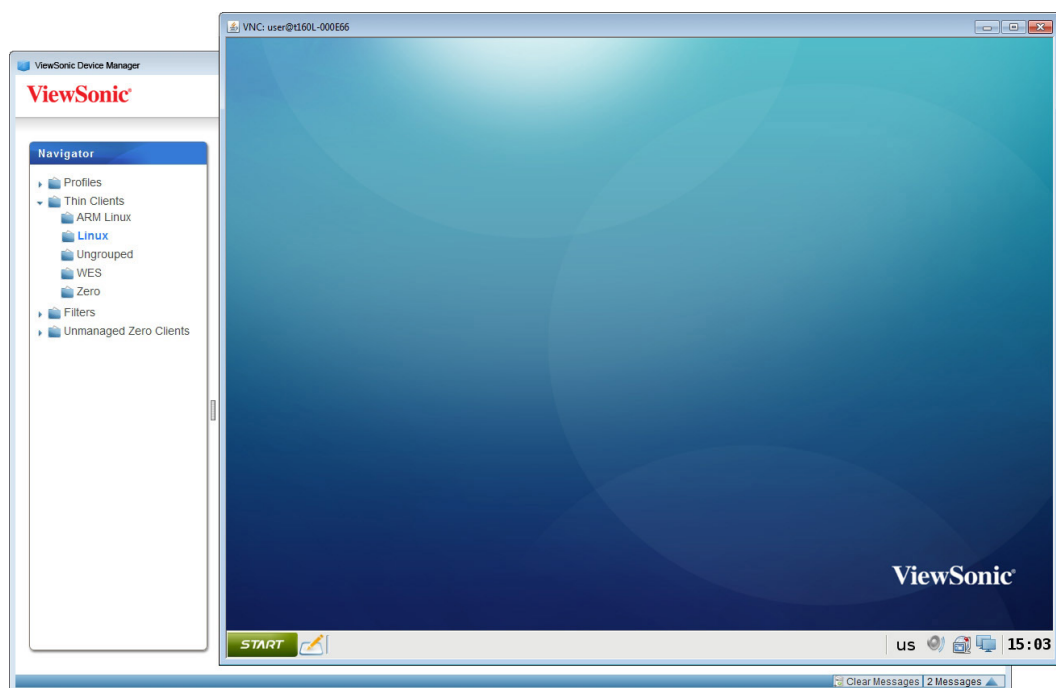

12. Now you can remotely monitor and control the client to assist the client user.



NOTE


- The user of the client could also control the system with the local keyboard and mouse.

3.4.28 Exporting Client Data


The **Export** feature available on the top of the Client Group list or the Client list allows you export an inventory of managed clients.

To export an inventory of managed clients, please do the following:


1. On **Thin Clients** tab, click to select the desired group in the Navigation area.
2. Click **Export** on the top of the Client Group list or the Client list.

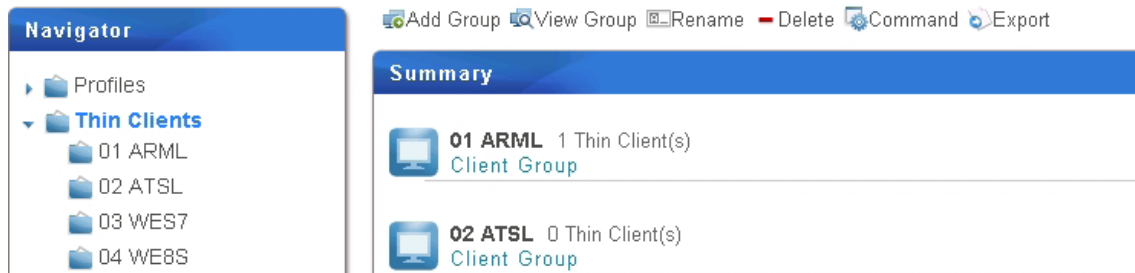

3. A window appears prompting you to select the Export format: **CSV** or **XML**.

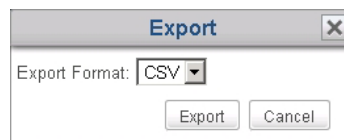

4. Click the drop-down menu to select the desired format, and then click **Export**.

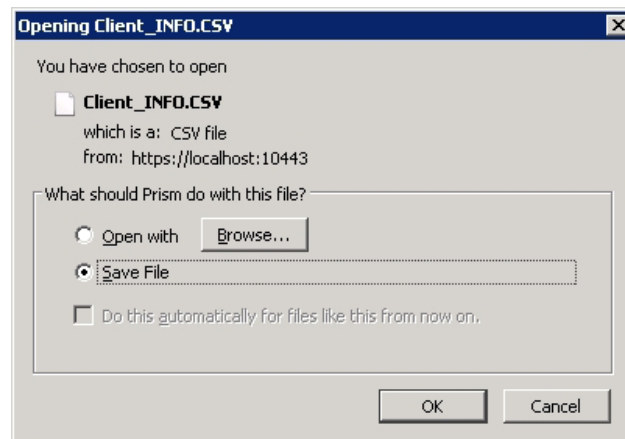

5. A window appears prompting you to save or open the generated file. Click to select the desired option, and then click **OK** to confirm.

3.4.29 Digging Out Profiles, Clients, or Event Logs with Quick Search

At the bottom of each Profile, Client, or Log list, you can access Quick Search to help you dig out the profiles, clients, or event logs.

 


NOTE


- Event logs will be introduced on section “3.5.1 Logs Tab Overview” on page 98.
- You can also use filters to find out the desired clients within the managed clients. For details, please refer to section “3.4.30 Digging Out Clients with Filters” on page 94.

To dig out the desired profile, client, or event log on a Profile, Client, Event Log list, please do the following:

1. Open the Profile, Client, or Log List.
 - On **Thin Clients** tab, click **Profiles** or **Thin Clients**, and then click the group to which the Profile or Client list belongs to open the Profile or Client list.
 - On ViewSonic Device Manager, click on **Logs** tab to open the Log list.
2. The Profile, Client or Log list appears in Management area.
3. At the bottom of the list, click the Quick Search button



 4. The Quick Search bar appears.



5. Click the drop-down menu to select the desired search type and enter the desired search keyword.
6. Click **Search** to start searching for profiles, clients, or event logs.
7. On completion, the Result list appears above the Quick Search bar.

3.4.30 Digging Out Clients with Filters

ViewSonic Device Manager enables you to create filters for digging out clients from all managed clients. With filters, you can access and manage a specific set of clients quickly.




NOTE

- You can also use Quick Search to dig out clients within managed clients. For details, please refer to “3.4.29 Digging Out Profiles, Clients, or Event Logs with Quick Search” on page 93.

Adding a Filter

To add a filter, please do the following:

1. On **Thin Clients** tab, right click on the **Filters** in Navigation area.
2. A popup menu appears.

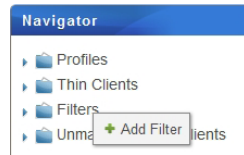

3. Click to select **Add Filter**.
4. The Add New Filter and Filter Preview panes appear in Management area.

 A screenshot showing two side-by-side panes in the management area. The left pane is titled 'Add New Filter' and contains a 'Filter Name' text box, a table with columns 'Field Name', 'Operator', 'Value', and 'Action', and a section for 'Available Filter Conditions'. The right pane is titled 'Filter Preview' and contains a table with columns 'Name' and 'Group', and a 'Filter Preview' section. At the bottom of the left pane are 'Preview', 'Save', and 'Cancel' buttons.

Field Name	Operator	Value	Action
Name	equals		Add

5. Type in the desired name for this filter.
6. Click to select the desired field name, operator, and then type in the value for a filter condition.



NOTE

- Most information about a client, which can be used as filter conditions, are available in the Thin Client Information pane. To access Thin Client Information pane, please refer to section "3.4.19 Editing or Viewing the Basic Information about a Client" on page 76 for detailed instructions.


7. Click **Add** to add a condition to a filter.
8. Repeat steps 5 through 7 to add a new condition.
9. Click **Preview** to view the result of a filter. The result is displayed in the Filter Preview pane.
10. Click **Save** to create the filter.

Using a Client Filter

Once client filters are created, you can access the desired client list quickly just by clicking the corresponding filter. All clients which meets the defined conditions will be specified in the client list.

To use a client filter, please do the following:

1. On **Thin Clients** tab, click **Filters** to expand the Filter tree.
2. Click to select the desired filter.
3. The desired Client list appears.

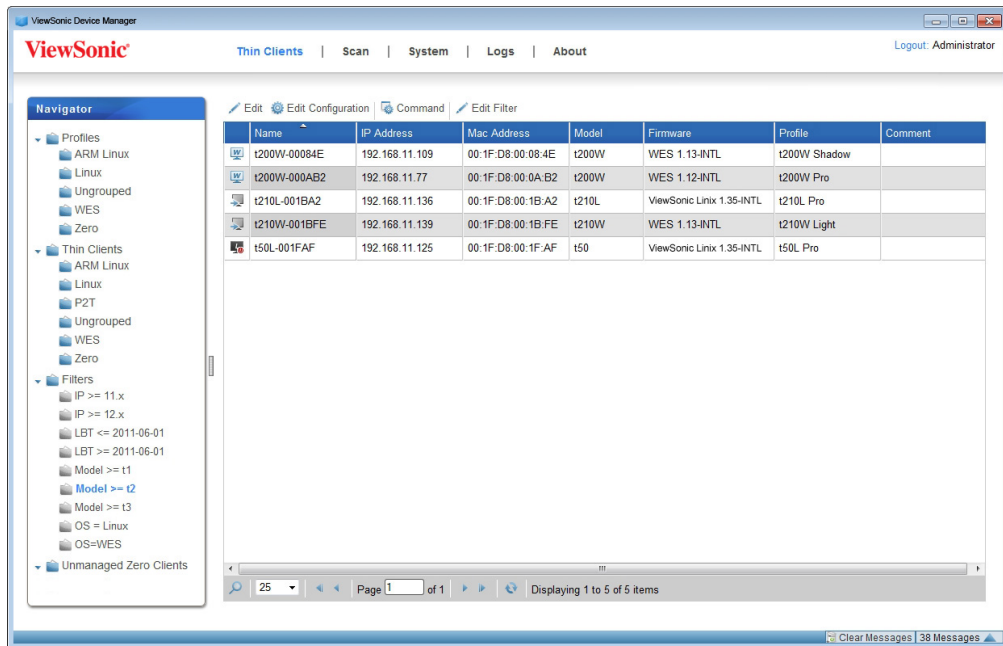

3.4.31 Managing Your Filters

Deleting a Filter

To delete a filter, please do the following:


1. On **Thin Clients** tab, click **Filters** in Navigation area.
2. The Filter list appears in Management area.
3. Click to select the desired filter, and then click **Delete** on the top of the Filter list.



NOTE

- To delete more than one filter, Ctrl-click to select multiple entries in the Filter list.

4. The Delete window appears prompting for confirmation.

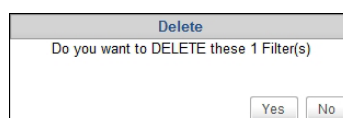

5. Click **Yes** to confirm.

Adjusting a Filter

To adjust a filter, please do the following:


1. On **Thin Clients** tab, click **Filters** in Navigation area.
2. The Filter list appears in Management area.
3. Click to select the desired filter, and then click **Edit** on the top of the Filter list.
4. The Filter Condition List and Filter Preview panes appear in Management area.
5. Adjust conditions for the filter, and then click **Save** to apply.

3.5 Viewing and Managing Event Logs

3.5.1 Logs Tab Overview

Logs tab enables you to view event logs about the management of your clients. To access the functionality of **Logs** tab, click the tab on ViewSonic Device Manager.

Logs Tab Overview

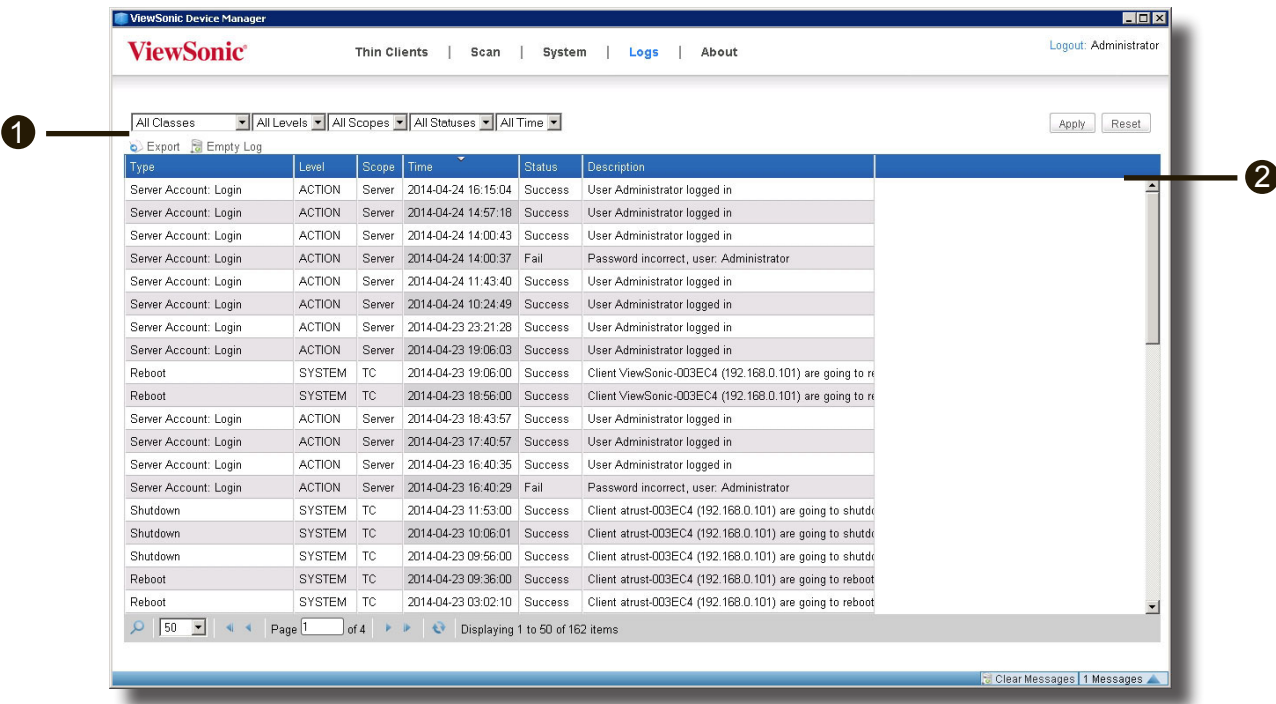

Interface Elements

No.	Name	Description
1	Navigation Bar	Click to select the desired type and scope of event logs.
2	Management Area	Manage event logs.


3.5.2 Available Tasks at a Glance

No.	Available Task	Section	Page
1	Viewing your event logs	3.5.3	99
2	Exporting your event logs	3.5.4	100
3	Emptying your event logs	3.5.5	100


3.5.3 Viewing Event Logs

To review event logs of ViewSonic, please do the following:


1. On ViewSonic Device Manager, click **Logs** tab.
2. The Log list appears.

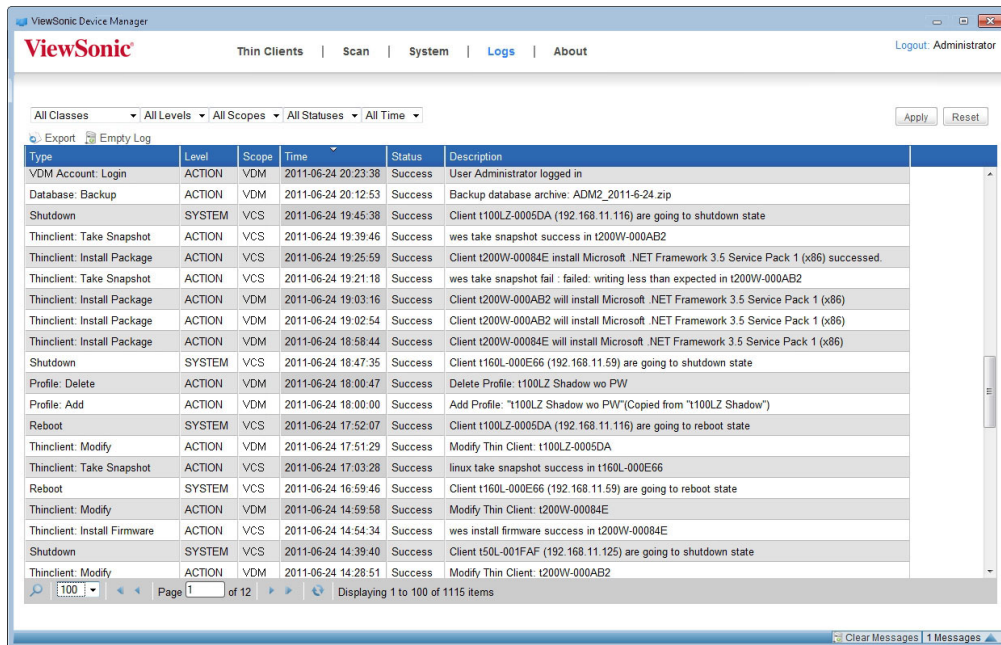

 - To view log entries on different pages, click to change to the first/previous/next/last page.



 - To view log entries within a specific scope, click the drop-down menus to limit the scope, and then click **Apply** to confirm.



3.5.4 Exporting Event Logs

To export event logs of your system, please do the following:


1. On ViewSonic Device Manager, click **Logs** tab.
2. The Log list appears.
 - To export log entries within a specific scope, click the drop-down menus to define the scope, and then click **Apply** to confirm.
 - To export all log entries, ensure that, on drop-down menus, the selected options do not limit the scope of the Log list.



NOTE

- You can click **Reset**, and then click **Apply** to get the complete log entries.

3. Click **Export**.
4. The Export window appears prompting you to select the desired export format.

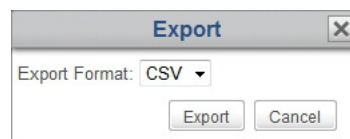

5. Click the drop-down menu to select the desired format (.CSV or .XML), and then click **Export** to continue.
6. A window appears prompting you to choose between opening or saving the exported file.
7. Click to select **Save File**, and then click **OK**.
8. In the opened window, locate the desired directory to save the file.

3.5.5 Emptying Event Logs

To empty event logs of your system, please do the following:



NOTE


- You cannot partially delete log entries.



WARNING

- Emptying log will delete all log entries. Ensure that you don't need the information in the future before proceeding.

1. On ViewSonic Device Manager, click **Logs** tab.
2. The Log list appears.
3. Click **Empty Log** on the top of the Log list.
4. The Empty Log window appears prompting for confirmation.

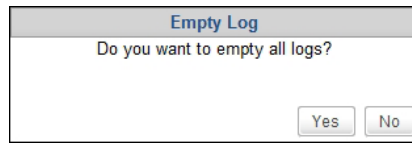

5. Click **Yes** to confirm.
6. All log entries are deleted from ViewSonic Device Manager.



NOTE


- A new log entry about emptying log will be added to the Log list.

3.6 Viewing Software Information

3.6.1 About Tab Overview

About tab provides the information about ViewSonic Device Manager and ViewSonic Computer Corporation. To access the information of **About** tab, click the tab on ViewSonic Device Manager.

About Tab Overview

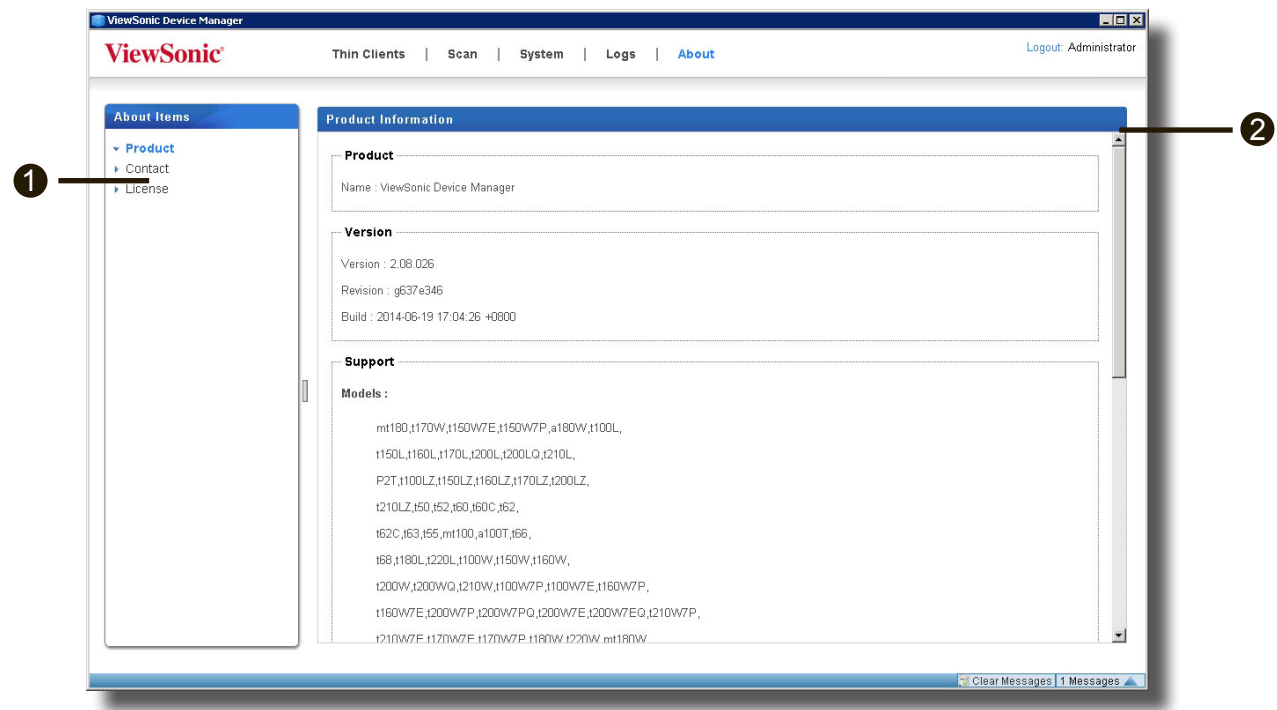

Interface Elements		
No.	Name	Description
1	Navigation Area	Click to access the desired information.
2	Information Area	Displays the selected item.

3.6.2 Available Tasks at a Glance

No.	Available Task	Section	Page
1	Viewing information on ViewSonic Device Manager	3.6.3	103
2	Viewing ViewSonic contact information	3.6.4	103
3	Viewing ViewSonic Software License Agreement	3.6.5	103

3.6.3 Viewing Information on ViewSonic Device Manager

To view information on ViewSonic Device Manager, please do the following:

1. On **About** tab, click **Product** in Navigation area.
2. The version of ViewSonic Device Manager, the supported client models, and imported firmware versions are shown in Information area.

3.6.4 Viewing ViewSonic Contact Information

To view ViewSonic contract information, please do the following:

1. On **About** tab, click **Contact** in Navigation area.
2. Our website address and contact information are shown in Information area.

3.6.5 Viewing ViewSonic Software License Agreement

To view ViewSonic Software License Agreement, please do the following:

1. On About tab, click **License** in Navigation area.
2. ViewSonic Software License Agreement is shown in Information area.

3.7 Accessing ViewSonic Device Manager Remotely with a Web Browser

You can access ViewSonic Device Manager installed on a remote computer with a Web browser. ViewSonic Device Manager supports Internet Explorer, Mozilla Firefox, and Google Chrome. With a Web browser-capable computer, you can access ViewSonic Device Manager anywhere to manage all your clients.



NOTE

- The computer you use to access ViewSonic Device Manager through a Web browser must be in the same network segment as the remote computer where the ViewSonic Device Manager is installed.


To access ViewSonic Device Manager through a Web browser, please follow the steps below:

1. Open your Web browser.
2. In the Address bar of the browser, enter the IP address and the number of the communication port for the remote computer where ViewSonic Device Manager is installed, and then press **Enter**. Please type in the IP address in the following format:


https://Your IP address:10443

3. The browser is launched with a page displaying a message about the security certificate of the remote computer.


Message about Security Certificate: Google Chrome

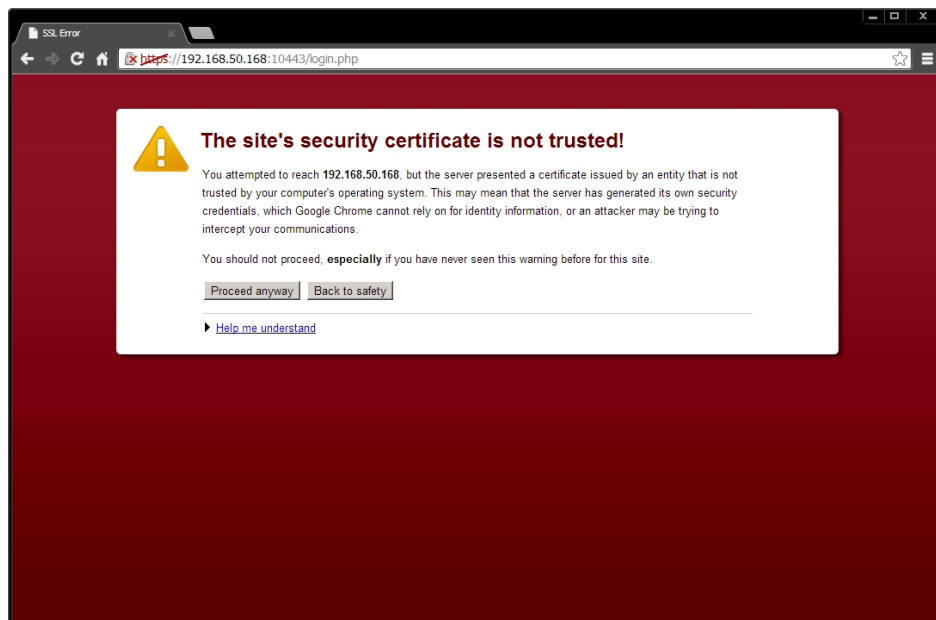

Message about Security Certificate: Mozilla Firefox

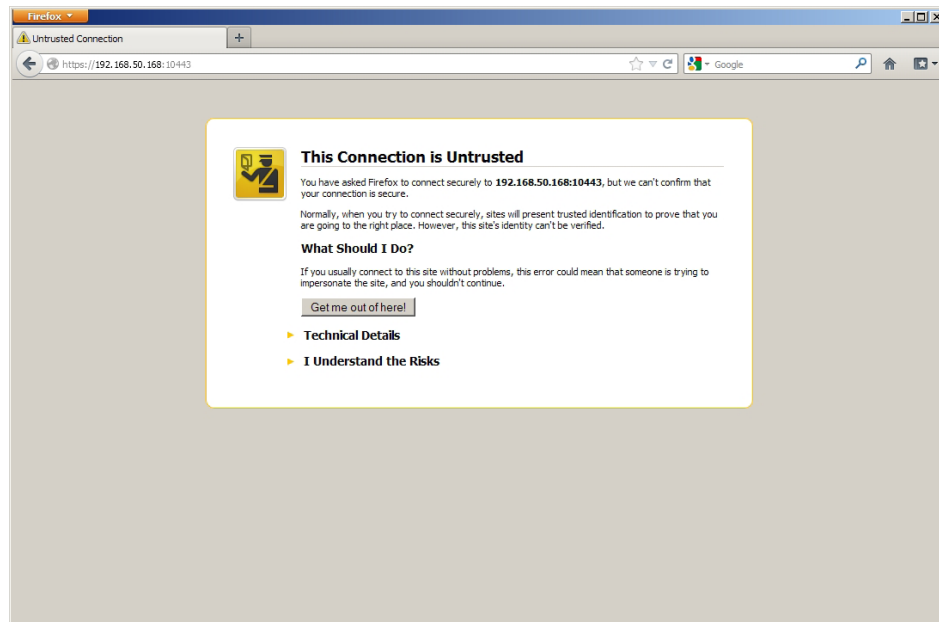

Message about Security Certificate: Microsoft Internet Explorer

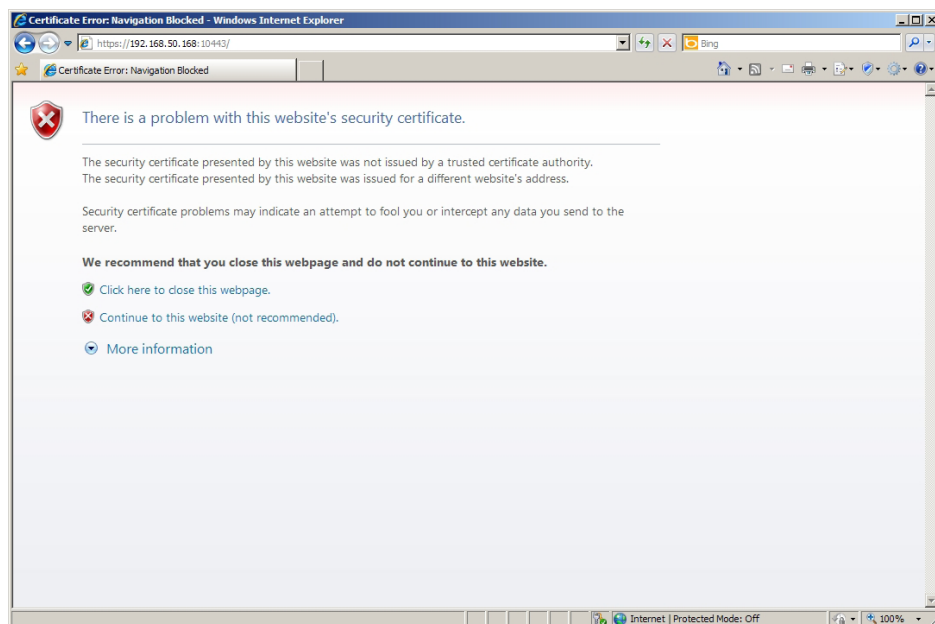


4. Install a valid security certificate for the remote computer to ensure the communication between your browser and the remote computer. To bypass, follow the instructions available on the browser:
 - For Google Chrome, click **Proceed anyway**.
 - For Mozilla Firefox, click **I Understand the Risks** > **Add Exception** > **Confirm Security Exception**.
 - For Microsoft Internet Explorer, click **Continue to this website** > **Add**, and then add the remote computer to the trusted sites.
5. The Login page appears on the browser prompting for credentials (account name and password).


Using ViewSonic Device Manager

Accessing ViewSonic Device Manager Remotely with a Web Browser

Login Page: Google Chrome

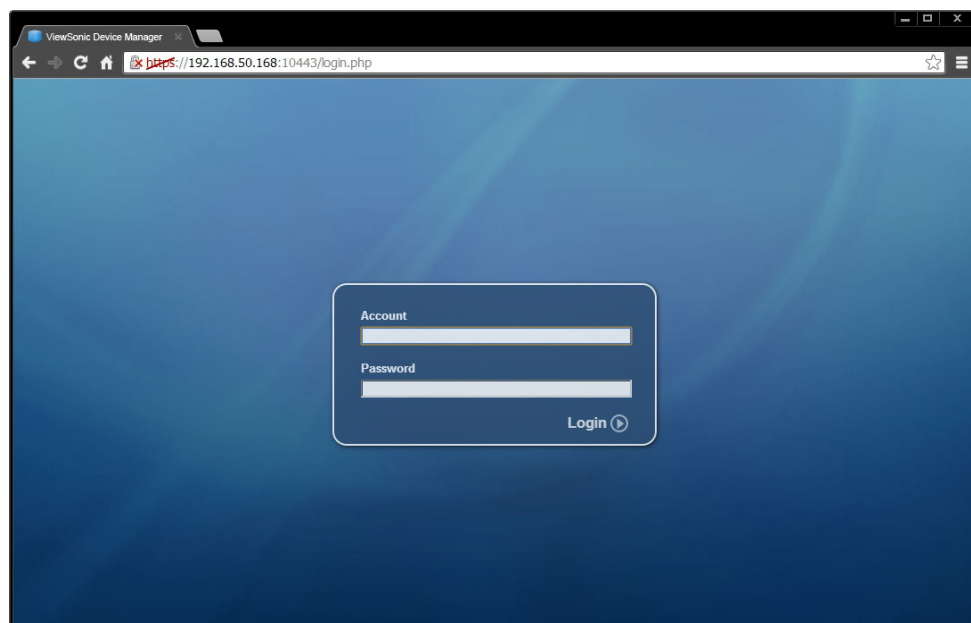


Login Page: Mozilla Firefox

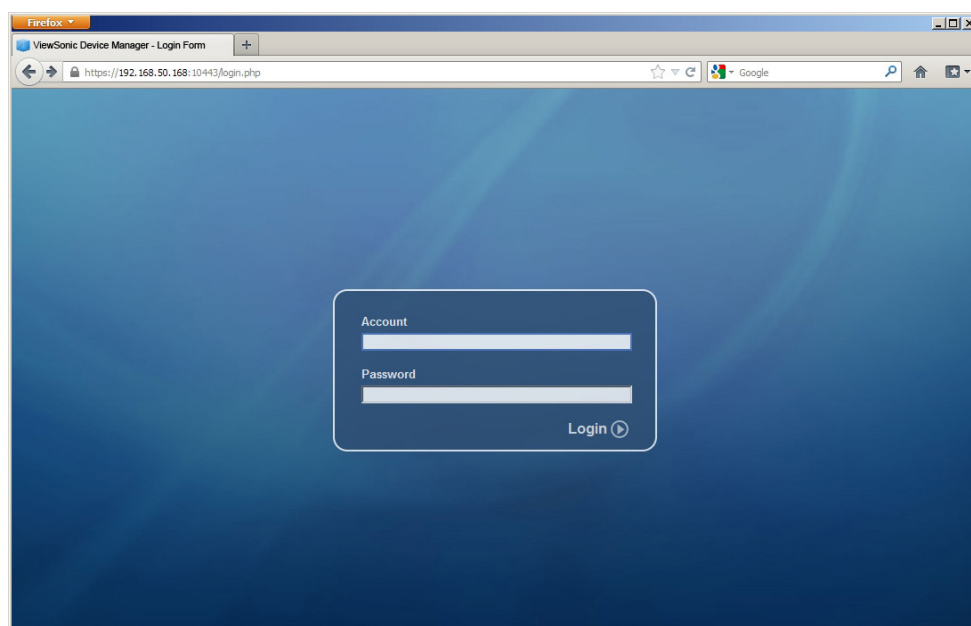

Using ViewSonic Device Manager


Accessing ViewSonic Device Manager Remotely with a Web Browser

Login Page: Microsoft Internet Explorer

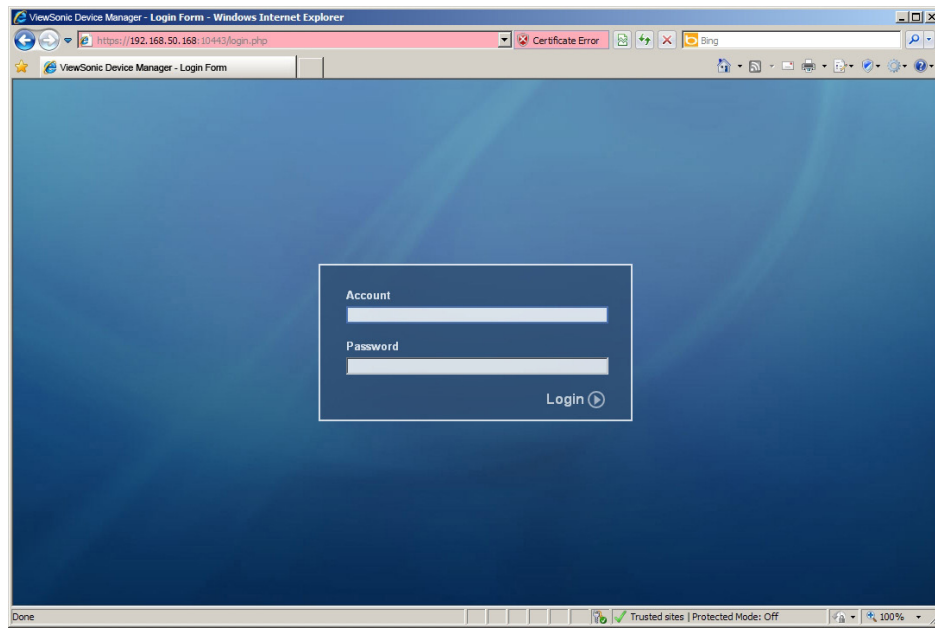

6. Type in your credentials, and then press **Enter** to log in to ViewSonic Device Manager.
7. The start page of ViewSonic Device Manager appears in your browser.


Start Page of ViewSonic Device Manager: Google Chrome

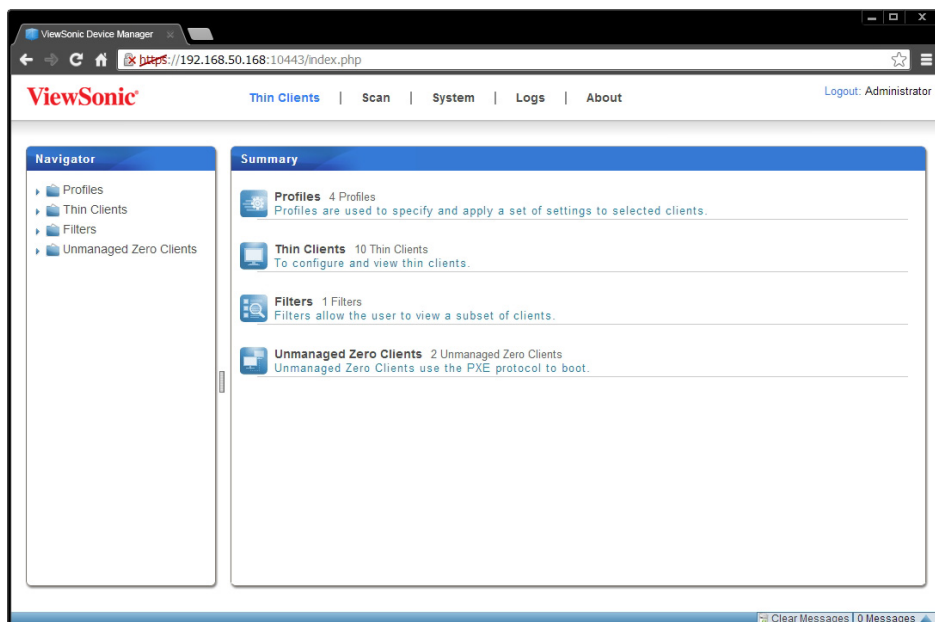


Using ViewSonic Device Manager

Accessing ViewSonic Device Manager Remotely with a Web Browser

Start Page of ViewSonic Device Manager: Mozilla Firefox

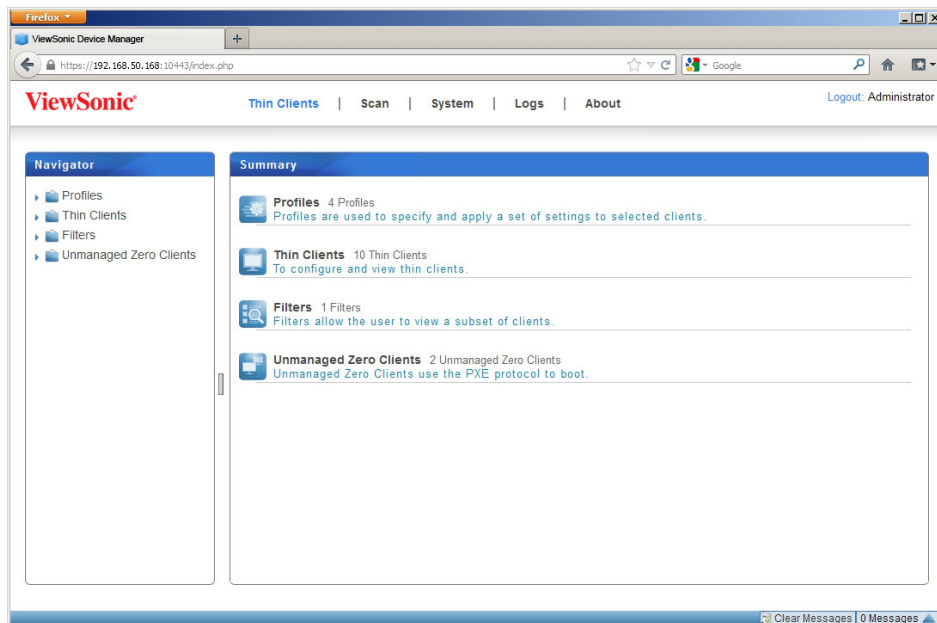

Start Page of ViewSonic Device Manager: Microsoft Internet Explorer

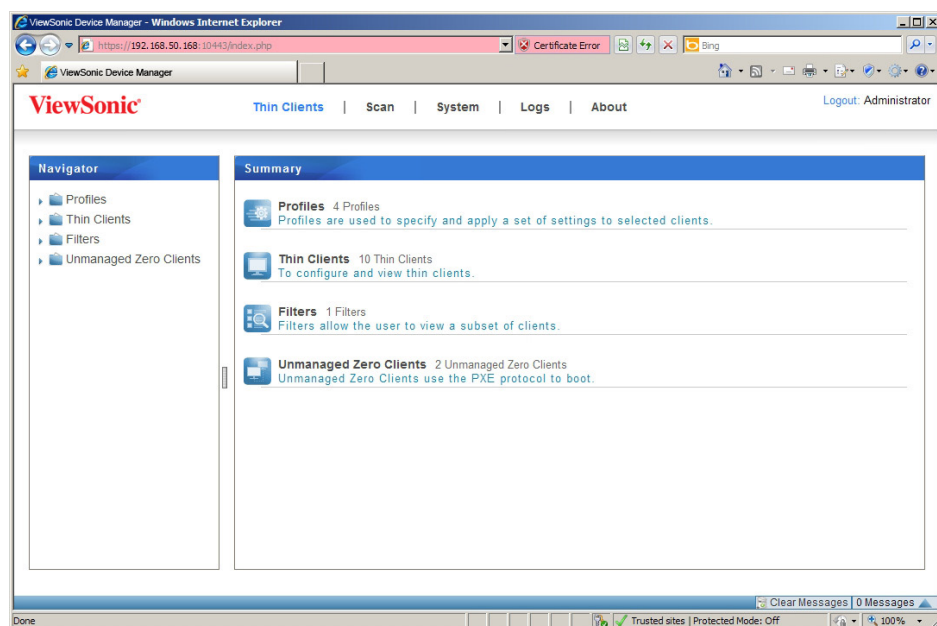

8. Now you can start using ViewSonic Device Manager.

4

Configuring Client Settings

This chapter provides basic instructions on client configuration.

4.1 Desktop Virtualization and Client Configuration	
Endpoint configuration in a desktop virtualization infrastructure	110
4.2 Client Settings at a Glance	
Available client setting items on ViewSonic Device Manager and ViewSonic Client Setup	110
4.3 Editing or Adjusting a Group Configuration	
How to edit or adjust a group configuration (profile) shared by a group of clients	114
4.4 Editing or Adjusting an Individual Configuration	
How to edit or adjust an individual configuration applied only to a single client	116
4.5 Configuring Client Settings with ViewSonic Client Setup	
How to configure client settings with ViewSonic Client Setup	118

4.1 Desktop Virtualization and Client Configuration

The desktop virtualization is available in various forms: user state virtualization, application virtualization, session based virtualization, virtual machine based virtualization, or even a hybrid approach. ViewSonic all-in-one, mobile, t-series thin clients can meet a wide range of desktop virtualization forms and needs. To get your client device ready for use in your IT infrastructure, you might need to customize client settings to meet the specific needs in your desktop virtualization plan.

4.2 Client Settings at a Glance

The following table provides brief descriptions of client setting items.

















NOTE

- The available ***tabs*** and ***setting items*** may vary, depending on: the ***client model***, ***firmware version***, and the used ***operating system***.
- Some setting items are ***only available locally on client devices***. You can adjust those settings through ViewSonic Client Setup. In the table below, settings that are only available locally on clients are marked with an asterisk (*).










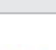
Configuring Client Settings

Client Settings at a Glance

Tab	Setting	Icon	Description
Applications	Remote Desktop		Click to configure RDP (Remote Desktop Protocol) connection settings and create shortcuts on the local desktop and START menu for Remote Desktop sessions.
	Citrix ICA		Click to configure Citrix ICA (Independent Computing Architecture) connection settings and create shortcuts on the local desktop and START menu for ICA sessions.
	Citrix XenApp		Click to configure Citrix XenApp connection settings and create a Start menu folder and/or desktop folder for accessing application delivery services.
	VMware View		Click to configure VMware View connection settings and create shortcuts on the local desktop and START menu for View sessions.
	GO-Global		Click to configure GO-Global Client connection settings and create shortcuts on the local desktop and START menu for accessing application delivery services.
	Web Browser		Click to configure general (for WES-based clients only) or specific browser session settings. A desktop shortcut is created for specific browser sessions launched with the desired initial web page. The used Web browser may vary, depending on the operating system of your client model.
	SSH		Click to configure SSH (Secure Shell) session settings and create shortcuts on the local desktop and START menu for SSH sessions.
	XDMCP		Click to configure XDMCP (X Display Manager Control Protocol) connection settings and create shortcuts on the local desktop and START menu for accessing desktop delivery services.
	Acrobat Reader		Click to enable/disable Acrobat Reader on your client.
User Interface	Display		Click to configure your display settings.
	Desktop		Click to customize your system language and desktop.
	Keyboard		Click to adjust your keyboard settings.
	Mouse		Click to adjust your mouse settings.
	Screensaver		Click to configure your screensaver settings.








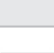

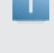


Configuring Client Settings

Client Settings at a Glance

Tab	Setting	Icon	Description
Devices	USB Storage		Click to configure settings for USB storage devices.
	Audio		Click to configure settings for audio devices.
	Printer *		Click to add local or network printers for your client device.
Network	Ethernet *		Click to configure your wired network settings.
	PPPoE *		Click to configure PPPoE connection settings and create an Internet connection.
	VPN *		Click to configure VPN (Virtual Private Network) connection settings and create a secure and reliable connection over the Internet.
	Hosts		Click to create the mapping of IP addresses to the names of host servers. You can then use the name of a host server instead of its IP address wherever you need to specify an IP address while configuring client settings.
	Host Name *		Click to change the host name of your client device.
	Wireless *		Click to configure your wireless network settings and create a wireless connection.
	Proxy		Click to configure proxy settings for Web-based access to services. The settings available here are only applicable to services that use Web-based access, such as (Microsoft) Remote Web Access and (Citrix) Web Logon connection types.

Configuring Client Settings

Client Settings at a Glance

Tab	Setting	Icon	Description
System	Time and Date (Time Zone)		Click to configure date and time settings.
	Password		Click to configure your password settings.
	Firmware Update *		Click to update firmware through the network. This feature is only applicable when this client is managed by the ViewSonic Device Manager console.
	Snapshot		Click to take a snapshot (system copy at a specific point of time) for your client device, which you can use for mass deployment, system backup, and recovery.
	Appliance Mode		Click to enable/disable the Appliance mode to allow/disallow the automatic Remote Desktop session. In Appliance mode, the client starts up with the desired Remote Desktop session and shuts down when the user logs off the session.
	Quick Connection		Click to enable/disable the Quick Connection mode after system startup.
	Miscellaneous		Click to change the host name of your client device.
	Terminal		Click to enable/disable the execution of the text-based (command-line) functions.
	FBWF		Click to configure FBWF (File-Based Write Filter) settings. As a file-based write filter, FBWF will intercept all write attempts to a protected volume and redirect those attempts to a RAM cache. After restart, all changes are discarded.
	UWF		Click to configure UWF (Unified Write Filter) settings. As a sector-based write filter, UWF will intercept all write attempts to a protected volume and redirect those attempts to a RAM cache. All system changes only affect the session where the changes are made. After restart, all changes are discarded.
	Error Report		Click to collect event logs and launch the screen capturing program for error reporting.
	Certificate Manager		Click to import or manage certificates for remote computers.

4.3 Editing or Adjusting a Group Configuration

On ViewSonic Device Manager, you can edit client settings for a group of clients through the Edit Configuration window for a profile (group configuration). Through this window, all remotely configurable settings can be edited, then you can push settings to the target group of clients defined in that profile through the **Push Settings** feature.



NOTE

- In this section, we will focus on the editing or adjusting of a profile (group configuration) in greater detail. For general instructions on how to create a profile (group configuration) or on how to open the Edit Configuration window for profile, please refer to section “3.4.12 Creating Client Setting Profiles” on page 66.
- To have a basic understanding of client configuration, please refer to section “3.4.9 Client Settings” on page 62.
- Please note that, although the Edit Configuration window for a profile (group configuration) looks almost the same as the Edit Configuration window for a client (individual configuration), their functions are different. The latter will only affect some specific client when the configuration is applied. For information on the editing or adjusting of an individual configuration for a client, please refer to section “4.4 Editing or Adjusting an Individual Configuration” on page 116.


To configure a setting in the Edit Configuration window (for a group configuration), please do the following:


1. In the Edit Configuration window for a profile, click the tab to which the desired setting belongs.

Edit Configuration (Profile) Window: SC-T35




Edit Configuration (Thin Client) Window: SC-T45

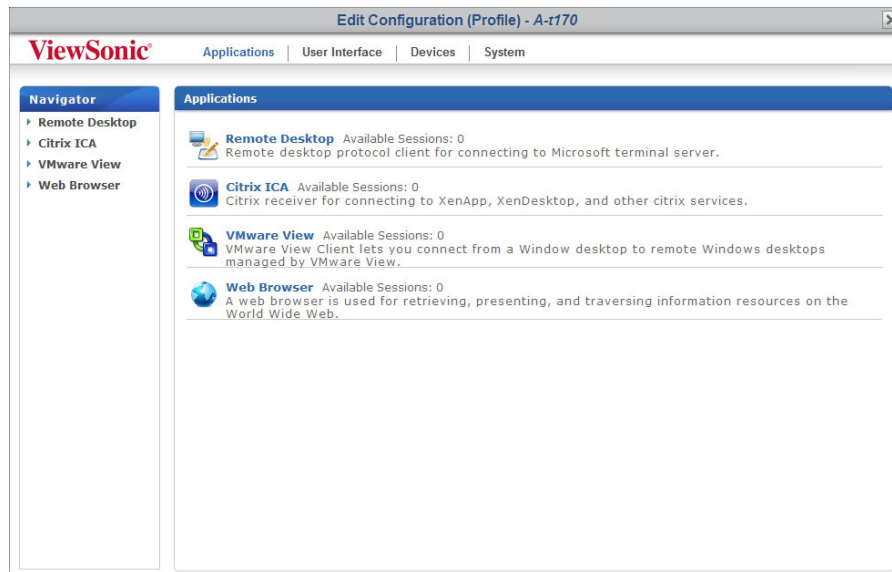

2. Click on the icon of the desired setting.
3. Click **Add** to add an entry for that setting if necessary.
4. On the detailed setting page(s), click on the gray globe icon  located close to a setting item to activate the item.



NOTE

- The gray globe icon will become blue  when you click to activate the item.
- When a globe icon becomes blue, the corresponding setting value is locked on clients and cannot be changed locally through ViewSonic Client Setup.

5. Choose or type in the desired setting values.
6. After the editing of setting values is completed, click **Save** at the bottom of that setting page to save the changes.
7. Repeat steps 1 through 6 to edit other settings.



NOTE

- Other values of unactivated setting items will not be applied to clients.
- You need to push settings to target group of clients for the changes to take effect.

4.4 Editing or Adjusting an Individual Configuration

On ViewSonic Device Manager, you can apply an individual configuration to a client through the Edit Configuration window for that client. Through this window, all remotely configurable settings can be edited, then you can push settings to the client through the **Push Settings** feature.



NOTE

- In this section, we will focus on the editing/adjusting of an individual configuration in greater detail. For general instructions on how to create an individual configuration or on how to open the Edit Configuration window for a client, please refer to section “3.4.14 Using Individualized Client Settings” on page 72.



NOTE

- To have a basic understanding of client configuration, please refer to section “3.4.9 Client Settings” on page 62.
- Please note that, although the Edit Configuration window for a profile (group configuration) looks almost the same as the Edit Configuration window for a client (individual configuration), their functions are different. The latter will only affect some specific client when the configuration is applied.


To configure a setting in the Edit Configuration window (for a client), please do the following:

1. In the Edit Configuration window for a client, click the tab to which the desired setting belongs.

Edit Configuration (Thin Client) Window: SC-T35



Edit Configuration (Thin Client) Window: SC-T45

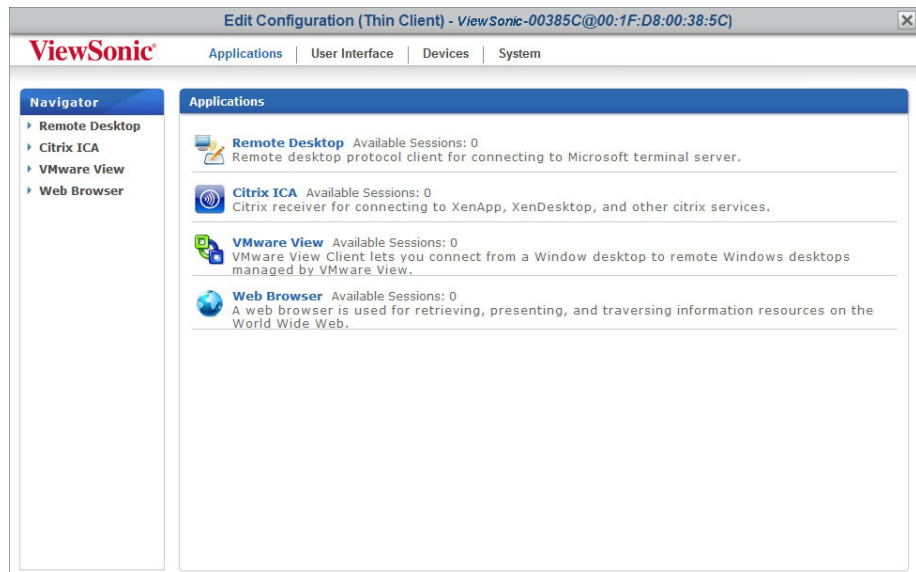

2. Click on the icon of the desired setting.
3. Click **Add** to add up an entry for that setting if necessary.
4. On the detailed setting page(s), choose or type in the desired setting values.



NOTE

- Click on the gray lock icon located close to a setting item to lock its value. The gray lock will become orange and secured. When a lock icon becomes orange and secured, the corresponding setting value is locked on the client and cannot be changed locally through ViewSonic Client Setup.
- If the lock icon of a setting value is blue, this setting value comes from the group configuration (profile). You can only change the value by modifying / removing the group configuration (profile) or applying a new one.
- If you apply a group configuration to a client, all related settings will also be shown in the Edit Configuration window for that client.

5. After the editing of setting values is completed, click **Save** at the bottom of that setting page to save the changes.
6. Repeat steps 1 through 5 to edit other settings.



NOTE

- You need to push settings to that client for the changes to take effect.

4.5 Configuring Client Settings with ViewSonic Client Setup

ViewSonic Client Setup allows you to configure client settings locally on clients. Additionally, some settings are only available locally on clients and therefore can only be configured through ViewSonic Client Setup.



NOTE

- For the list of client settings only locally accessible on clients, please refer to section “4.2 Client Settings at a Glance” on page 110.
- To have a basic understanding of client configuration, please refer to section “3.4.9 Client Settings” on page 62.

For more information on how to configure client settings locally on clients with ViewSonic Client Setup, please refer to the User’s Manual for a specific thin client model.



ViewSonic®